

[Manuals.plus](#) /

› [Brother](#) /

› Brother P-Touch H110 Label Maker User Manual

Brother PTH110

Brother P-Touch H110 Label Maker User Manual

Model: PTH110

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Brother P-Touch H110 Label Maker. Please read this manual thoroughly before operating the device to ensure proper setup, operation, and maintenance. Keep this manual for future reference.

2. PRODUCT OVERVIEW

The Brother P-Touch H110 is a portable label maker designed for creating durable, high-quality labels for various organizational needs. It features a QWERTZ keyboard for easy text input and a clear LCD display.



Figure 2.1: Front view of the Brother P-Touch H110 Label Maker, showing the QWERTZ keyboard, function buttons, and LCD screen displaying "P-touch H110".

Key Features:

- QWERTZ keyboard layout for efficient typing.
- 180 dpi print resolution for clear and crisp labels.
- Lightweight and portable design for use anywhere.
- Supports various label tape widths and colors.

3. SETUP

3.1. Power Supply

The Brother P-Touch H110 operates on 6 AAA alkaline batteries. An optional AC adapter (not included) can also be used.

1. Ensure the device is turned off.
2. Locate the battery compartment cover on the back of the device.
3. Slide the cover off.

4. Insert 6 new AAA alkaline batteries, ensuring correct polarity (+/-).
5. Replace the battery compartment cover.

3.2. Installing Label Tape

1. Ensure the device is turned off.
 2. Open the tape cassette cover located on the top left side of the device.
 3. Insert the label tape cassette firmly into the compartment, ensuring the tape end feeds through the tape guide.
 4. Close the tape cassette cover until it clicks into place.
 5. Press the **Power** button to turn on the device.
-

4. OPERATING INSTRUCTIONS

4.1. Basic Label Creation

1. Turn on the device by pressing the **Power** button.
2. Type your desired text using the QWERTZ keyboard. The text will appear on the LCD display.
3. To print, press the **Print** button (often indicated by a printer icon).
4. After printing, use the built-in cutter on the top right of the device to cut the label.

4.2. Text Formatting

The P-Touch H110 offers various formatting options. Use the **Menu** button to access these settings.

- **Font Size:** Press **Menu**, navigate to "Size", and select your preferred font size (e.g., AAA, AA, A).
- **Font Style:** Press **Menu**, navigate to "Style", and choose options like Bold, Italic, Outline, Shadow, etc.
- **Frames:** Press **Menu**, navigate to "Frame", and select a decorative frame for your label.
- **Symbols:** Press the **Symbol** button (often indicated by a symbol icon) to insert various symbols.

4.3. Saving and Recalling Labels

The device can store frequently used label designs.

- **To Save:** After creating a label, press **Menu**, navigate to "Save", and select a memory slot.
 - **To Recall:** Press **Menu**, navigate to "Recall", and select the desired memory slot.
-

5. MAINTENANCE

5.1. Cleaning the Print Head

Regular cleaning of the print head ensures optimal print quality.

1. Turn off the device and remove the tape cassette.
2. Gently wipe the print head with a dry cotton swab. Do not touch the print head with your bare hands.

3. Allow to dry completely before reinserting the tape cassette.

5.2. Cleaning the Cutter Blade

If the cutter blade becomes dull or sticky, clean it carefully.

1. Turn off the device and remove the tape cassette.
2. Using a cotton swab moistened with isopropyl alcohol, gently clean any adhesive residue from the cutter blade.
3. Allow to dry completely before reinserting the tape cassette.

6. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Solution
Device does not turn on.	Check if batteries are inserted correctly with correct polarity. Replace with new AAA alkaline batteries. Ensure the battery compartment cover is securely closed.
Poor print quality or blank labels.	Clean the print head as described in Section 5.1. Ensure the tape cassette is installed correctly. Replace the tape cassette if it is old or damaged.
Tape does not feed or jams.	Ensure the tape cassette is inserted correctly and fully seated. Check for any obstructions in the tape path. Clean the cutter blade if it is sticky.
Cutter does not cut cleanly.	Clean the cutter blade as described in Section 5.2.

7. SPECIFICATIONS

Feature	Detail
Model	Brother P-Touch H110 (PTH110)
Print Resolution	180 dpi
Keyboard Layout	QWERTZ
Power Supply	6 x AAA alkaline batteries (or optional AC adapter)
Compatible Tape Widths	Various TZe tape widths (e.g., 3.5mm, 6mm, 9mm, 12mm)
Dimensions (approx.)	7.6"D x 11.22"W x 4.06"H
Weight (without batteries/tape)	Approximately 14.1 ounces (0.4 kg)

8. WARRANTY AND SUPPORT

8.1. Warranty Information

The Brother P-Touch H110 Label Maker comes with a limited warranty. Please refer to the warranty card included with your product for specific terms and conditions, or visit the official Brother website for detailed warranty information.

8.2. Customer Support

For technical assistance, troubleshooting, or to purchase accessories and supplies, please visit the official Brother support website or contact their customer service department. Contact details can typically be found on the Brother website or in the packaging materials.

You can find more information and support resources on the [Brother Support Website](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why will my Brother P-touch H110 label printer not reset to factory settings or display the option to change text size?

To resolve the issues with your Brother P-touch H110 label printer, please try the standard factory reset procedure and verify the menu navigation steps below:How to Factory Reset the Brother P-touch H110:Turn the device...

[Read full answer](#)

How do I reset my Brother P-touch H110 label printer to factory settings?

To reset the Brother P-touch H110 (PTH110) to its factory default settings, follow these steps:Turn the device OFF.While holding down the Shift key and the R key, press the Power button once to turn...

[Read full answer](#)