

[manuals.plus](#) /› [Westclox](#) /› [Westclox Large Digital Wall Clock Model 55006BK Instruction Manual](#)

Westclox 55006BK

Westclox Large Digital Wall Clock (Model 55006BK) Instruction Manual

Your Guide to Setup, Operation, and Care

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Westclox Large Digital Wall Clock, Model 55006BK. This versatile clock features a large, easy-to-read LCD display, showing time, month, date, day of the week, and indoor temperature. It also includes an alarm function with a snooze option. Designed for convenience, it can be used as a wall-mounted or desk clock.



Figure 1: Front view of the Westclox Large Digital Wall Clock.

SETUP

1. Unpacking and Contents

Carefully remove the clock from its packaging. Ensure all components are present. The package should contain:

- Westclox Large Digital Wall Clock (Model 55006BK)
- Instruction Manual (this document)

Note: 2 AA batteries are required for operation and are not included.

2. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Remove the battery compartment cover.
3. Insert two (2) new AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover.



Figure 2: Rear view of the clock with battery compartment and control buttons.

3. Placement Options

Your Westclox Digital Wall Clock can be placed on a flat surface or mounted on a wall.

- **Desk Stand:** Extend the integrated stand(s) on the back of the clock to position it upright on a desk, table, or nightstand.
- **Wall Mount:** Use the keyhole slot on the back of the clock to hang it securely on a wall hook or screw.



Figure 3: Clock on a desk.



Figure 4: Clock mounted on a wall.

OPERATING INSTRUCTIONS

1. Button Functions

The control buttons are located on the back of the clock (refer to Figure 2).

- **SET:** Used to enter setting modes for time, date, and alarm.
- **ALARM:** Used to activate/deactivate the alarm and enter alarm setting mode.
- **▲ (Up Arrow):** Used to increase values during setting.
- **▼ (Down Arrow):** Used to decrease values during setting.
- **SNOOZE:** Activates the snooze function when the alarm sounds.

2. Setting the Time

1. Press the **SET** button once. The hour digits will begin to flash.
2. Use the **▲** or **▼** buttons to adjust the hour. Pay attention to the AM/PM indicator.
3. Press **SET** again. The minute digits will flash.
4. Use the **▲** or **▼** buttons to adjust the minutes.
5. Press **SET** to confirm and exit time setting mode.

3. Setting the Date and Day of the Week

1. From normal time display, press the **SET** button twice. The year digits will begin to flash.
2. Use the **▲** or **▼** buttons to adjust the year.
3. Press **SET** again. The month digits will flash.
4. Use the **▲** or **▼** buttons to adjust the month.
5. Press **SET** again. The date digits will flash.
6. Use the **▲** or **▼** buttons to adjust the date.
7. The day of the week will automatically adjust based on the set date.
8. Press **SET** to confirm and exit date setting mode.

4. Setting the Alarm

1. Press the **ALARM** button once. The alarm time will be displayed, and the hour digits will flash.
2. Use the **▲** or **▼** buttons to adjust the alarm hour.
3. Press **ALARM** again. The minute digits will flash.
4. Use the **▲** or **▼** buttons to adjust the alarm minutes.
5. Press **ALARM** to confirm the alarm time.
6. To activate the alarm, press the **ALARM** button until the alarm icon (bell symbol) appears on the display.
7. To deactivate the alarm, press the **ALARM** button until the alarm icon disappears.

5. Using the Snooze Function

When the alarm sounds, press the **SNOOZE** button. The alarm will temporarily stop and sound again after approximately 5-10 minutes (snooze duration may vary slightly). To turn off the alarm completely, press any other button on the back of the clock.

6. Temperature Display

The clock automatically displays the indoor temperature in Fahrenheit (°F). No setting is required for this function.

MAINTENANCE

1. Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the display or casing.

2. Battery Replacement

When the display becomes dim or the clock functions irregularly, it is time to replace the batteries. Follow the "Battery Installation" steps in the Setup section to replace the two (2) AA batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are low or incorrectly installed.	Replace batteries with new AA batteries, ensuring correct polarity.
Time or date is incorrect.	Time/date was not set correctly or reset after battery change.	Follow the "Setting the Time" and "Setting the Date and Day of the Week" instructions.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the alarm time is set and the alarm icon (bell symbol) is visible on the display.
Cannot change day/date.	Incorrect mode entered or buttons not pressed in sequence.	Ensure you press the SET button twice to enter year setting, then proceed to month and date. The day of the week adjusts automatically.

SPECIFICATIONS

Brand	Westclox
Model Number	55006BK
Display Type	Digital LCD
Dimensions (W x H)	7 inches x 9 inches
Power Source	2 x AA Batteries (not included)
Special Features	Large Display, Temperature Display, Date, Day of Week, Alarm with Snooze
Material	Plastic
Item Weight	10.4 ounces
Mounting Type	Wall Mount, Desk Stand
Indoor/Outdoor Usage	Indoor

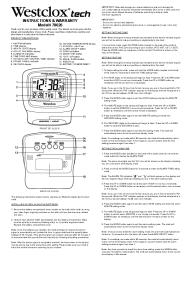
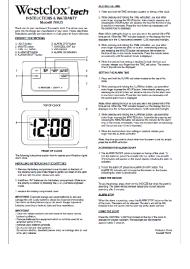
WARRANTY AND SUPPORT

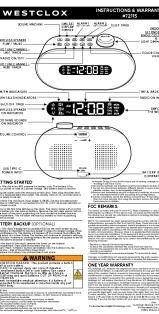
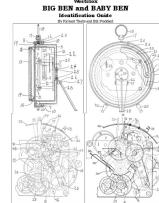
Westclox products are manufactured with quality and care. For specific warranty information or technical support, please refer to the product packaging or visit the official Westclox store online.

You can find more information and contact support through the [Westclox Store on Amazon](#).

© 2025 Westclox. All rights reserved.

Related Documents - 55006BK

	<p>Westclox Model 70026 Atomic Digital Alarm Clock Instructions and Warranty</p> <p>User manual for the Westclox Model 70026 atomic digital alarm clock, providing detailed instructions on installation, time setting, time zone selection, and alarm configuration.</p>
	<p>Westclox Model 70035 Digital Alarm Clock: Instructions and Warranty</p> <p>User manual and warranty information for the Westclox Model 70035 digital alarm clock, covering setup, operation, care, and warranty details.</p>

	<p><u>Westclox Duet Model No. 80183 Clock Radio: User Manual, Features, and Warranty</u></p> <p>Comprehensive user manual for the Westclox Duet Model No. 80183 clock radio. This guide provides detailed instructions on power connection, operating the AM/FM radio, setting the time, configuring dual alarms, utilizing the snooze function, managing the sleep timer, and information on the limited warranty.</p>
	<p><u>Westclox 72115 Instructions and Warranty</u></p> <p>This document provides instructions and warranty information for the Westclox 72115 alarm clock, including setup, battery backup, and FCC remarks.</p>
	<p><u>Westclox Big Ben and Baby Ben Identification Guide: History, Styles, and Models</u></p> <p>A comprehensive identification guide to Westclox Big Ben and Baby Ben alarm clocks, detailing their history, case styles, movements, advertising, and reproductions from 1909 to the present.</p>
	<p><u>WESTCLOX CR-232 Bluetooth Digital Alarm Clock Radio Instruction Manual</u></p> <p>This document provides comprehensive instructions for operating the WESTCLOX CR-232 Bluetooth Digital Alarm Clock Radio, including setup, safety precautions, feature usage, and technical specifications.</p>