

- Manuals.plus /
- › Smartby /
- › Smartby Universal Remote Control for Toshiba TVs (Model S-CT-90325) Instruction Manual

Smartby S-CT-90325

Smartby Universal Remote Control for Toshiba TVs (Model S-CT-90325)

Instruction Manual

1. PRODUCT OVERVIEW

This manual provides instructions for the Smartby Universal Remote Control, designed as a replacement for various Toshiba LCD, LED, HDTV, 3D, 4K UHD, and Smart TVs. This remote operates using infrared technology and requires no programming for most compatible Toshiba TV models.



Image 1.1: Front and back view of the Smartby Universal Remote Control.

2. INITIAL SETUP

2.1 Battery Installation

The remote control requires two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover by sliding it down or pressing the latch.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) ends match the markings inside the compartment.
4. Close the battery compartment cover securely.

The remote is pre-programmed and ready for use immediately after battery installation. No additional programming is required for compatible Toshiba TVs.



User information

- The remote is programmed. It works out of boxes after installing 2 X AAA batteries.
- The remote uses infrared technology. Please point it towards the infrared sensor on your TV to control it properly.

Please note: It does **NOT** work for Toshiba Fire TV

Image 2.1: User information and battery installation guidance.

3. BASIC OPERATION

Point the remote control directly towards the infrared sensor on your Toshiba TV for proper functionality. Ensure there are no obstructions between the remote and the TV.

3.1 Key Functions

- **POWER:** Turns the TV on or off.
- **INPUT:** Selects video input sources (e.g., HDMI, AV).
- **NUMBER BUTTONS (0-9, 100):** Direct channel selection.
- **VOL +/-:** Adjusts volume up or down.
- **CH +/-:** Changes channels up or down.
- **MUTE:** Mutes or unmutes TV audio.
- **RECALL:** Returns to the previously viewed channel.
- **C.CAPTION:** Activates or deactivates closed captions.
- **INFO:** Displays on-screen information about the current program or input.
- **NAVIGATION PAD (Up, Down, Left, Right, ENTER):** Navigates through on-screen menus and confirms selections.
- **MENU:** Accesses the TV's main settings or smart TV menu.
- **EXIT:** Exits the current menu or function.
- **MEDIA CONTROL BUTTONS (PLAY/PAUSE, STOP, SKIP, REW, FF):** Controls media playback functions if supported by your TV or connected devices.

No Setup Required



Image 3.1: Remote control demonstrating universal compatibility with Toshiba TVs.

4. COMPATIBILITY INFORMATION

This universal remote is designed to replace original Toshiba remote models including, but not limited to: **CT-90325, CT-90326, CT-90329, CT-8037, CT-90302, CT-90275, CT-90366.**

It is compatible with a wide range of Toshiba TVs, including models such as: **55HT1U, 55S41U, 55SL412U, 65HT2U, 46G310U, 46SL41, 19AV600, 19AV600U, 19AV600UZ, 19C100U, 19C1D, 19C10, 19C10U, 19C100, 19C100U, 19AV600U, 19SL400, 19SL400U, 19SL410U, 22AV600, 22AV600U, 22AV600UZ, 32C120U, 22C10, 22C10U, 22C100, 22C100U, 22SL400, 22SL400U, 22SL410U,** and many more.

Important Note: This remote control is NOT compatible with Toshiba Fire TV models.



Universal Remote Control for **Toshiba** TV - All Models

No Setup Required

Compatible Toshiba Remote
Models: CT-90325/ CT-90326/
CT-90329/ CT-8037/ CT-90302/
CT-90275/ CT-90/ CT-90366 and
more...

The remote is **Not** for Fire TV

Image 4.1: Compatibility details for the remote control.

5. TROUBLESHOOTING GUIDE

If the remote control does not function as expected, please follow these steps:

1. **Check Batteries:** Ensure batteries are inserted correctly with the proper polarity. Replace old batteries with new

AAA batteries to rule out low power issues.

- 2. **Clear Remote's Residual Power:** Remove the batteries from the remote. Press each button on the remote control for approximately 3 seconds to discharge any residual power and check for any buttons that might be stuck.
- 3. **TV Power Cycle:** Unplug your Toshiba TV from the electrical outlet. Wait for at least 15 seconds. Then, press and hold the TV's physical power button (located on the TV itself, not the remote) for 5 seconds to clear any residual power from the TV. Plug the TV back into the outlet and turn it on.
- 4. **Line of Sight:** Verify that there are no physical obstructions (e.g., furniture, plants) between the remote control and the TV's infrared sensor. The remote requires a clear line of sight to transmit signals effectively.
- 5. **Test Functionality:** After performing the above steps, test the remote control again to see if the issue is resolved.



Troubleshoot

If the remote still doesn't work directly, try the following steps:

- 1. Remove the batteries from the remote.
- 2. Press each button for 3 seconds to drain any leftover power and check for stuck buttons.
- 3. Insert new batteries, making sure they're placed correctly (positive and negative ends in the right direction).
- 4. If the remote still doesn't work, the issue might be with the TV. Unplug the TV, then press and hold the power button on the TV for 15 seconds to clear any residual power. Plug the TV back in and turn it on.
- 5. Check if the remote works now.

Image 5.1: Troubleshooting guide for common remote control issues.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Smartby
Model Number	S-CT-90325
Compatible Devices	Toshiba TVs (LCD, LED, HDTV, 3D, 4K UHD Smart TVs)
Incompatible Devices	Toshiba Fire TV

Feature	Detail
Power Source	2 x AAA Batteries (not included)
Technology	Infrared (IR)
Dimensions (L x W x H)	6.5 x 2 x 1 inches
Item Weight	0.8 ounces
Color	Black

7. WARRANTY AND CUSTOMER SUPPORT

This Smartby Universal Remote Control is designed for reliable performance. For any questions, technical assistance, or warranty inquiries, please refer to the seller's contact information on the platform where the product was purchased.

In case of manufacturing defects, please contact the seller directly for support and resolution.

© 2025 Smartby. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01N049499>

More documents and user manuals: <https://manuals.plus/>