

[Manuals.plus](#) /

› [Hotpoint](#) /

› Hotpoint Refrigerator Door Latch - Left, C00285928 Instruction Manual

Hotpoint C00285928

Hotpoint Refrigerator Door Latch - Left, C00285928 Instruction Manual

Brand: Hotpoint | Model: C00285928

PRODUCT OVERVIEW

If your refrigerator is experiencing issues with opening and closing the door, this Hotpoint replacement part is designed to allow you to re-hang your refrigerator door, enabling it to open from the left side. This is an original replacement part directly from the manufacturer, suitable for selected Hotpoint refrigerators and freezers.

PRODUCT IMAGE



This image displays the Hotpoint refrigerator door latch, model C00285928. It is a white, plastic component designed to secure the refrigerator door. The latch features a main body with a circular hole for mounting and a curved, hook-like section for engaging with the door frame.

SETUP AND INSTALLATION

This Hotpoint refrigerator door latch is a replacement part. Proper installation is crucial for the correct functioning of your appliance door. It is recommended to consult your appliance's specific service manual for detailed instructions, or seek professional assistance if unsure.

Safety Precautions:

- Always unplug the refrigerator from the power outlet before attempting any installation or repair.
- Wear appropriate personal protective equipment, such as gloves, if necessary.
- Ensure the refrigerator door is properly supported during the process to prevent injury or damage.

General Installation Steps (Consult Appliance Manual for Specifics):

1. **Preparation:** Unplug the refrigerator. Open the door to access the existing latch mechanism.
2. **Removal of Old Latch:** Carefully locate and remove the screws or fasteners holding the old door latch in place. Keep track of all removed hardware.
3. **Installation of New Latch:** Position the new Hotpoint door latch (C00285928) in the correct orientation. Align the mounting holes with those on the refrigerator frame or door.
4. **Secure the Latch:** Use the appropriate screws or fasteners to securely attach the new latch. Do not overtighten.
5. **Test Functionality:** Once the latch is securely installed, gently close and open the refrigerator door several times to ensure it latches properly and smoothly.
6. **Final Step:** Plug the refrigerator back into the power outlet.

OPERATING INSTRUCTIONS

The Hotpoint refrigerator door latch C00285928 is designed for straightforward operation, ensuring your refrigerator door closes securely and opens smoothly from the left side.

- **Closing the Door:** Gently push the refrigerator door until the latch engages with the door frame. You should hear a soft click, indicating the door is securely closed.
- **Opening the Door:** Apply a gentle pull to the refrigerator door handle. The latch will disengage, allowing the door to open.
- **Proper Seal:** After closing, ensure the door gasket forms a complete seal around the refrigerator opening to maintain optimal cooling efficiency.

MAINTENANCE

Regular maintenance of your Hotpoint refrigerator door latch can help ensure its longevity and proper function.

- **Cleaning:** Periodically wipe the latch and surrounding area with a soft, damp cloth to remove dust and debris. Avoid abrasive cleaners that could damage the material.
- **Inspection:** Routinely check the latch for any signs of wear, cracks, or looseness. Ensure all mounting screws are tight.
- **Lubrication (if applicable):** If the latch mechanism feels stiff, a small amount of food-grade silicone lubricant can be applied to moving parts, if recommended by the appliance manufacturer. Avoid petroleum-based lubricants.

TROUBLESHOOTING

If you encounter issues with your Hotpoint refrigerator door latch, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Door does not close securely or pops open.	Latch is loose, damaged, or misaligned.	Check if the latch is securely fastened. Tighten any loose screws. Inspect the latch for visible damage; if damaged, replacement is necessary. Ensure the door hinges are not misaligned.
Door is difficult to open.	Latch mechanism is stiff or binding.	Clean the latch area. If applicable and recommended by the manufacturer, apply a small amount of food-grade silicone lubricant to the moving parts of the latch.
Visible damage to the latch.	Physical wear and tear or impact.	The latch needs to be replaced with an original Hotpoint part (C00285928).

If troubleshooting steps do not resolve the issue, it is recommended to contact a qualified appliance technician or Hotpoint customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Manufacturer	Hotpoint
Model Number	C00285928
Part Number	C00285928
Installation Type	Freestanding (Appliance type)
Color	White
Special Feature	Door lock (referring to the latch function)
Form Factor	Compact (Appliance type)

WARRANTY AND SUPPORT

For specific warranty information regarding your Hotpoint refrigerator door latch (C00285928), please refer to the documentation provided with your original appliance or contact Hotpoint customer service directly. Warranty terms typically cover manufacturing defects and vary by region and purchase date.

For technical support, replacement part inquiries, or service requests, please visit the official Hotpoint website or contact their customer support line. Ensure you have your appliance model number and the part number (C00285928) ready when contacting support.

Note: Using non-original replacement parts may void your appliance's warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question