

[Manuals.plus](#) /

> [Indesit](#) /

> Indesit IWC7123 Washing Machine Complete Hatch Door Instruction Manual

Indesit IWC7123

Indesit IWC7123 Washing Machine Complete Hatch Door

Instruction Manual

1. INTRODUCTION

This manual provides essential information regarding the Indesit IWC7123 Complete Hatch Door, a replacement component for compatible washing machines. The hatch door is a critical part of your washing machine, ensuring water containment and safe operation during wash cycles. This document covers compatibility, installation guidelines, maintenance, and technical specifications.



Image 1.1: The Indesit IWC7123 Complete Hatch Door. This image displays the full assembly of the washing machine door, including the outer frame and the transparent porthole, designed for a secure seal.

2. COMPATIBILITY

This complete hatch door is designed for specific Indesit and Ariston washing machine models. Before proceeding with installation, it is crucial to verify that this part is compatible with your appliance model. Refer to the model numbers listed below. If your model is not listed or you are unsure, please contact customer support for assistance.

Compatible Brands and Models:

- **ARISTON:** IWC7125FR - F06763860000
- **INDESIT:**
 - IWC6125FR, IWD6125FR, IWD71251CFR, IWC81251CFR
 - IWB 61051 C ECO, IWB 61451 C ECO, IWB 6165 (EU) - F061966, IWB 61651 (EU) - F083390, IWB 71 251 ECO UK - F087490
 - IWC 51451 EU - F087500, IWC 60851 ECO EU - F085009, IWC 60861 ECO IT - F085012
 - IWC 6105 (EU).C - F069240, IWC 61051 C ECO, IWC 61051 EU - F085004, IWC 61052 C ECO, IWC 61052 C FR - F087528
 - IWC 61251 C ECO, IWC 61251 ECO EU - F085008, IWC 61252 C FR - F08755229, IWC 61281 ECO DE - F085002, IWC 6165 (UK).C - F069949
 - IWC 7105 C ECO, IWC 71051 C ECO, IWC 71052 C ECO, IWC 71082 C ECO, IWC 7125 (FR).C - F069951
 - IWC 71251 C ECO, IWC 71251 C FR - F085029, IWC 71251 ECO (E), IWC 71251 ECO EU - F085016, IWC 71252 C ECO, IWC 71252 C FR - F087493
 - IWC 71281 ECO EU, IWC 71283 C ECO, IWC 71451 C (FR)
 - IWC 81051 C ECO, IWC 81081 ECO (E), IWC 81082 C ECO, IWC 81082 ECO (E), IWC 8109 ECO (IT), IWC 8123 (UK) - F069087
 - IWC 81251 C (FR) - F079899, IWC 81252 C FR - F083873, IWC 8128 (FR) - F062684, IWC 81282 (FR) - F074668, IWC 8148 (FR) - F07001111111111111111111111111111
 - IWC 8148 (UK) - F069086, IWC 81481 ECO, IWC 8168 (SK) - F061462, IWC 91082 ECO (E), IWC 91091 ECO (I), IWCN 61051X9 (CZ)
 - IWD 61051 C ECO, IWD 1451 C ECO, IWD 61451 C FR - F084301, IWD 61452 C ECO, IWD 71051 (CIS) - F078880
 - IWD 71251 C (FR) - F078760, IWD 71251 ECO UK - F085067, IWD 71252 C FR - F083877, IWD 71451 C (FR) - F078780
 - IWD 71451 C ECO, IWD 71451 ECO UK - F085033, IWD 71452 C FR - F085069, IWD 81251 C (FR) - F078783
 - IWD 81251 C ECO, IWD 8128 (FR) - F062698, IWD 81282 C (FR) - F078786, IWD 81283 ECO (E), IWD 8148 (FR) - F062694
 - IWD 81482 C (FR) - F079794, IWD 91282 C (FR) - F080088, IWDN 61251X9 (CZ), IWDN 61282X9 C, IWDN 71252X9 C C, IWE 61252 C ECO

3. INSTALLATION GUIDELINES

Replacing a washing machine hatch door requires careful attention to detail and basic mechanical skills. For safety and optimal performance, professional installation by a qualified technician is highly recommended. Incorrect installation can lead to water leaks, damage to the appliance, or personal injury.

General Steps (Consult a professional or your appliance's service manual for specific instructions):

1. **Safety First:** Always disconnect the washing machine from the main power supply and turn off the water supply before beginning any repair work.
2. **Access the Door Hinges:** Depending on your washing machine model, you may need to remove the top panel or front fascia to access the door hinges and locking mechanism.
3. **Remove the Old Door:** Carefully unbolt or unscrew the old door from its hinges. Be mindful of any electrical connections for the door lock, if present.
4. **Install the New Door:** Align the new hatch door with the hinge points on the washing machine frame. Secure it with the appropriate screws or bolts. Ensure the door opens and closes smoothly without obstruction.
5. **Connect Door Lock (if applicable):** Reconnect any electrical wiring for the door lock mechanism. Ensure connections are secure.
6. **Test for Proper Closure:** Close the door and ensure it latches securely. The door should sit flush with the machine's body.
7. **Reconnect Power and Water:** Once the installation is complete and all panels are reassembled, reconnect the power and water supply.
8. **Leak Test:** Run a short, empty wash cycle to check for any leaks around the door seal and to ensure the door locks and unlocks correctly.

Disclaimer: These are general guidelines. Always refer to your specific washing machine's service manual or consult a certified technician for detailed, model-specific installation instructions.

4. MAINTENANCE

Proper maintenance of your washing machine's hatch door can extend its lifespan and prevent common issues. Regular cleaning and inspection are key.

- **Clean the Door Seal (Gasket):** After each wash, wipe down the rubber door seal (gasket) to remove any trapped lint, hair, or detergent residue. This prevents mold growth and ensures a tight seal.
- **Inspect for Damage:** Periodically check the door and its components (hinges, latch, glass) for any signs of cracks, wear, or damage. Address minor issues promptly to prevent them from escalating.
- **Avoid Overloading:** Do not overload the washing machine, as this can put undue stress on the door and its hinges, potentially leading to misalignment or damage.
- **Leave Door Ajar:** When the washing machine is not in use, leave the door slightly ajar to allow air circulation. This helps to dry out the drum and gasket, preventing odors and mold.

5. TROUBLESHOOTING

If you encounter issues with your washing machine door, consider the following common problems and potential solutions:

Problem	Possible Cause	Solution
Door not closing/latching	Obstruction, faulty latch, misaligned hinges.	Check for trapped clothing. Inspect the latch mechanism for damage. Verify hinge alignment.
Water leaking from door	Damaged or dirty door gasket, door not fully closed, excessive suds.	Clean or replace the door gasket. Ensure the door is securely latched. Use appropriate detergent amount.

Problem	Possible Cause	Solution
Door not opening after cycle	Door lock mechanism engaged, water still in drum, faulty door lock.	Wait a few minutes after cycle ends. Check for water drainage. If persistent, the door lock may need replacement.
Excessive noise from door area	Loose hinges, worn components.	Tighten any loose screws on hinges. Inspect for worn parts that may need replacement.

For complex issues or if troubleshooting steps do not resolve the problem, it is advisable to contact a qualified appliance repair technician.

6. SPECIFICATIONS

Product Type	Complete Washing Machine Hatch Door
Brand	Indesit (Compatible with Ariston)
Model (Primary)	IWC7123
Manufacturer	INDESIT
Manufacturer Reference	C00306743
ASIN	B01N0I65VW
First Available Date	June 9, 2017

7. WARRANTY AND SUPPORT

This product is typically covered by a return policy. For specific details regarding warranty, returns, or technical support, please refer to the seller's policies or contact their customer service directly.

- **Return Policy:** A 30-day refund/replacement policy is generally available from the seller. Please check the specific terms at the point of purchase.
- **Seller Information:** This product is sold by Groupe Dragon, a specialist in appliance spare parts since 1984.
- **Customer Service:** For compatibility checks or any product-related inquiries, it is recommended to contact the seller's customer service.

For further assistance, you may visit the [Indesit Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01N0I65VW>

More documents and user manuals: <https://manuals.plus/>