

[Manuals.plus](#) /

› [Prestige](#) /

› Prestige PKOSS 1.8 Litres Electric Kettle User Manual

Prestige PKOSS 1.8

Prestige PKOSS 1.8 Litres Electric Kettle User Manual

Model: PKOSS 1.8 (41588)

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Never operate the appliance empty.
- Never lift the kettle from the base when the unit is in operation.
- This appliance is for household use only.

PRODUCT OVERVIEW

The Prestige PKOSS 1.8 Litres Electric Kettle is designed for efficient and safe water boiling. It features a stainless steel body, automatic cut-off, and a 360-degree swivel base for convenience.



Image: The Prestige PKOSS 1.8 Litres Electric Kettle, showcasing its stainless steel design and power indicator light.

Key Features:

- **1.8 Litres Capacity:** Ideal for boiling a significant amount of water.
- **1500W Power:** Ensures fast boiling.
- **Automatic Cut-off:** The kettle automatically switches off once water has boiled, preventing dry boiling and saving energy.
- **Stainless Steel Body:** Durable and easy to clean.
- **360 Degree Swivel Base:** Allows for easy placement and lifting from any angle.
- **Power Indicator:** An LED light indicates when the kettle is in operation.
- **Single-Touch Lid Locking:** For secure and easy opening/closing of the lid.
- **Concealed Heating Element:** For safety and easy cleaning.
- **Cool-touch Handle:** Designed for safe and comfortable handling.
- **Wide Mouth:** Facilitates easy filling and cleaning.

Designed For Ease

Auto Shut-Off
Once The Water Boils



Cord Winder
To Avoid Clutter



LED Power Indicator
For Quick Status



Image: Close-up views of the kettle highlighting the auto shut-off mechanism, the cord winder on the base, and the LED power indicator light.

Safe, Smart & Efficient Boiling



Stainless Steel
Lid



Stainless Steel
Body



Concealed
heating element



Image: An open view of the kettle's interior, showing the stainless steel lid, stainless steel body, and the concealed heating element at the bottom.

Stainless-Steel Body

With Cool-touch Handle



Cool-touch Handle

For Convenient Use & Safety



360° Degree Swivel Base

For Usage, Convenience & Portability

Image: The kettle on its base, illustrating the cool-touch handle for safe grip and the 360-degree swivel base for flexible positioning.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface, away from the edge of the countertop. Ensure the power cord is not dangling where it can be pulled or tripped over.
3. **Initial Cleaning:** Before first use, fill the kettle with clean water up to the MAX mark. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
4. **Connecting to Power:** Plug the power cord into a suitable 230V AC electrical outlet.

OPERATING INSTRUCTIONS

1. **Filling the Kettle:** Press the lid release button to open the lid. Fill the kettle with the desired amount of water. Do

not fill below the MIN mark or above the MAX mark. Close the lid securely until it locks.

2. **Placing on Base:** Place the kettle firmly onto the power base. The kettle can be placed in any direction on the 360-degree swivel base.
3. **Switching On:** Press the ON/OFF switch downwards. The power indicator light will illuminate, indicating that the kettle is heating.
4. **Boiling:** The kettle will begin to heat the water. Once the water reaches boiling point, the kettle will automatically switch off, and the power indicator light will extinguish.
5. **Pouring:** Carefully lift the kettle from its base using the cool-touch handle and pour the hot water. Exercise caution as steam may escape from the spout.
6. **Re-boiling:** If the kettle has just boiled, wait a few seconds before pressing the switch again to allow the internal thermostat to reset.

Compact Design Maximum Convenience

1.8L Fast boiling



Image: A hand pouring hot water from the electric kettle into a teacup, demonstrating its ease of use.

Regular cleaning and maintenance will ensure the longevity and optimal performance of your electric kettle.

- **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Interior Cleaning (Descaling):** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
 - a. Fill the kettle with a mixture of one part white vinegar and two parts water.
 - b. Boil the mixture and let it stand for at least 30 minutes, or longer for heavy scale.
 - c. Pour out the mixture and rinse the interior thoroughly with fresh water.
 - d. For stubborn deposits, gently scrub with a non-abrasive sponge.
 - e. Alternatively, use a commercial descaling solution designed for electric kettles, following the product's instructions.
- **Storage:** When not in use, store the kettle in a dry place. The cord winder on the base helps manage the power cord.

Wide Mouth, Hassle-free Use

Wide Opening Makes Filling & Cleaning Easy



Image: The electric kettle with its lid fully open, demonstrating the wide mouth design that allows for easy filling and cleaning of the interior.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in. Power switch not pressed. Kettle not properly seated on base. Automatic cut-off activated (e.g., dry boiling).	Ensure the plug is securely in the outlet. Press the ON/OFF switch downwards. Ensure the kettle is correctly placed on the power base. Allow the kettle to cool down, then refill with water and try again.
Water takes too long to boil.	Limescale buildup. Overfilling the kettle.	Descale the kettle as per the "Maintenance and Cleaning" section. Do not fill above the MAX mark.
Kettle switches off before boiling.	Limescale buildup affecting thermostat. Kettle is empty or underfilled.	Descale the kettle. Ensure water level is between MIN and MAX marks.

SPECIFICATIONS

Brand	Prestige
Model Name	PKOSS 1.8 (Model Number: 41588)
Capacity	1.8 Liters
Wattage	1500W (as per product title/feature bullets)
Voltage	230V
Material	Stainless Steel
Color	Silver - Black
Product Dimensions (L x W x H)	7.5L x 7.5W x 9.1H Centimeters
Item Weight	1.17 Kilograms
Special Features	Automatic Cut-off, 360 Degree Swivel Base, Power Indicator, Concealed Element, Portable
Included Components	Kettle, Warranty Card



Easy, Safe & Convenient

For Every Day Use

Image: A person holding the electric kettle, illustrating its approximate height of 9 inches (22.9 cm).

WARRANTY AND SUPPORT

Your Prestige PKOSS 1.8 Litres Electric Kettle comes with a **1 Year Warranty** from the date of purchase.

For any warranty claims, service requests, or product support, please contact Prestige customer care:

- **Customer Care Number:** 080-46824000
- **Email:** Customercare@ttkprestige.com
- **Manufacturer:** TTK PRESTIGE LIMITED, Plot No: 38, SIPCOT Industrial Complex, Hosur- 635126, Tamil Nadu.

Please retain your purchase receipt and the warranty card included in the product manual for future reference.

