

## Candy CMXG25GDSS

# Candy X-Range CMXG25GDSS Microwave Oven with Grill User Manual

Model: CMXG25GDSS

## INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation of your Candy X-Range CMXG25GDSS Microwave Oven with Grill. Please read this manual thoroughly before using the appliance and retain it for future reference. The Candy X-Range CMXG25GDSS is a 25L microwave with grill function, 1450W power, 5 power levels, digital display, and 40 automatic programs, designed to simplify your daily cooking with practical advice, tips, recipes, and food benefit information via the Simply-Fi app.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Always ensure the turntable and turntable support are correctly in place before operating the oven.
- Do not use corrosive chemicals or vapors in this appliance.
- The appliance is intended for household use only.
- Do not immerse the cord or plug in water.
- Use only utensils that are suitable for use in microwave ovens.
- The microwave oven is designed for heating food and beverages. Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- The appliance should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

## PRODUCT OVERVIEW

## Components

- Microwave Unit
- Glass Turntable (31.5 cm diameter)
- Turntable Support Ring
- Grill Rack (for grill function)
- Power Cord

The microwave features a mirror door finish and a stainless steel interior for easy cleaning.

## Control Panel and Display

The digital control panel allows for precise setting of cooking times, power levels, and access to various programs. It includes a digital display for time and program indicators, and a rotary knob for adjustments.

- **Digital Display:** Shows time, power level, and program status.
- **Function Buttons:** For selecting microwave, grill, defrost, and special programs.
- **Rotary Knob:** Used to set time, weight, and navigate menus.
- **Start/Express Button:** Initiates cooking or adds 30 seconds of express cooking.
- **Stop/Cancel Button:** Stops cooking or clears settings.
- **Child Lock Function:** Prevents accidental operation.



Figure 1: Front view of the Candy X-Range CMXG25GDSS Microwave Oven, showing the mirror door and digital control panel.



Figure 2: Close-up of the control panel, highlighting the digital display, function buttons, and rotary knob.

## SETUP AND INSTALLATION

---

Follow these steps for proper setup of your microwave oven:

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check for any damage such as dents or a broken door. Do not operate the oven if it is damaged.
2. **Placement:** Place the oven on a flat, stable surface that can support its weight. Ensure there is adequate ventilation space: at least 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side. Do not block any ventilation openings.
3. **Turntable Assembly:** Place the turntable support ring in the center of the oven cavity. Place the glass turntable securely on top of the support ring. Ensure it rotates freely.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (230 Volts).
5. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth.



Figure 3: The microwave oven positioned on a kitchen counter, demonstrating proper clearance for ventilation.

## OPERATING INSTRUCTIONS

---

### Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Press the "Microwave" button to select the desired power level (e.g., P100 for 100% power). The oven has 5 power levels.
4. Use the rotary knob to set the cooking time.
5. Press the "Start/Express" button to begin cooking.

### Grill Function

The grill function is ideal for browning and crisping food.

1. Place food on the grill rack provided, then place the rack on the turntable.
2. Close the oven door.
3. Press the "Grill" button.
4. Use the rotary knob to set the grilling time.
5. Press the "Start/Express" button to begin grilling.

### Defrost Function

The defrost program allows for quick and efficient thawing of food by weight.

1. Place the frozen food in the oven.

2. Press the "Defrost" button.
3. Use the rotary knob to select the weight of the food. The oven will automatically calculate the defrosting time.
4. Press the "Start/Express" button to begin defrosting.

## Automatic Programs (40 Programs)

The oven features 40 pre-set automatic programs for various food types, including specific programs for baby food and healthy cooking.

1. Press the "Auto Program" button.
2. Use the rotary knob to scroll through the available programs (P1, P2, ..., P40).
3. Select the desired program and confirm.
4. Press the "Start/Express" button to begin.

## Simply-Fi App Integration

The Candy X-Range CMXG25GDSS can be connected to the Candy Simply-Fi app for additional features, recipes, and cooking tips. Download the app from your device's app store and follow the in-app instructions for pairing.



Figure 4: A user interacting with the Simply-Fi app on a smartphone, demonstrating the smart connectivity feature of the microwave.

## MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** After each use, wipe the interior with a damp cloth to remove food splatters. For stubborn stains, use a mild detergent or a mixture of water and lemon juice. Do not use abrasive cleaners or scouring pads.
- **Exterior Cleaning:** Clean the exterior surface with a soft, damp cloth. Avoid using harsh chemicals.

- **Turntable and Support:** The glass turntable and support ring can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seal:** Regularly clean the door seals and adjacent parts to ensure proper closure and prevent microwave leakage.
- **Odor Removal:** To remove odors, combine a cup of water with the juice of one lemon in a microwave-safe bowl. Heat on high for 5-7 minutes, then let it sit in the oven for a few minutes before wiping clean.

## TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

| Problem                | Possible Cause   | Solution  |
|------------------------|--|---|
| Oven does not start    | Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.    | Ensure plug is securely in outlet; Close door firmly; Check household fuse/circuit breaker. |
| Food not heating       | Incorrect cooking time/power level; Door not closed properly; Food not suitable for microwave. | Adjust time/power; Close door firmly; Use microwave-safe dishes.                            |
| Sparkling inside oven  | Metal objects in oven; Food residue on cavity walls.   | Remove all metal utensils/foil; Clean oven interior thoroughly.                             |
| Turntable not rotating | Turntable not correctly placed; Obstruction under turntable.                                   | Re-position turntable and support; Remove any debris.                                       |
| Oven light not working | Bulb needs replacement.  | Contact qualified service personnel for bulb replacement.                                   |

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

- **Brand:** Candy
- **Model:** CMXG25GDSS
- **Capacity:** 25 Liters
- **Microwave Power:** 900 Watts
- **Grill Power:** 1450 Watts
- **Power Levels:** 5
- **Voltage:** 230 Volts
- **Dimensions (L x W x H):** 51.3 cm x 42.9 cm x 30.7 cm (20.2 x 16.9 x 12.1 inches)
- **Weight:** 16.1 Kilograms (35.5 lbs)
- **Turntable Diameter:** 31.5 cm
- **Material:** Stainless Steel (interior), Mirror Door
- **Special Features:** Defrost, Eco Function, Timer, Programmable, Quick Access Keys, Control Panel Lock, Simply-Fi App Connectivity, 40 Automatic Programs.
- **Noise Level:** 44 dB

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official


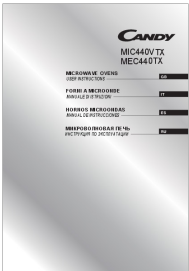




Candy website. Keep your proof of purchase for any warranty claims.

**Contact Information:** Please refer to the manufacturer's official website or the retailer's support page for the most up-to-date contact details for technical assistance and service.



Related Documents - CMXG25GDSS

|   |   |
|---|---|
|    | <p><a href="#">Candy MIC20GDFN-80 Microwave Oven User Instructions</a></p> <p>User instructions and safety precautions for the Candy MIC20GDFN-80 built-in microwave oven. Covers installation, operation, cleaning, and troubleshooting.</p>                     |
|   | <p><a href="#">Candy MIC440VTX MEC440TX Microwave Oven Instruction Manual</a></p> <p>Comprehensive user manual for the Candy MIC440VTX and MEC440TX microwave ovens, covering safety instructions, operation, cleaning, troubleshooting, and specifications.</p>  |
|  | <p><a href="#">Candy CMG20SMW/CMG20SMB Microwave Oven User Manual</a></p> <p>User manual and instructions for the Candy CMG20SMW and CMG20SMB microwave ovens, covering safety, operation, installation, and troubleshooting.</p>                                 |
|  | <p><a href="#">Candy CMXG20DR/DS/DW Microwave Oven User Manual</a></p> <p>User instructions and safety precautions for the Candy CMXG20DR, CMXG20DS, and CMXG20DW microwave ovens. Includes operating instructions, cooking guides, and troubleshooting tips.</p> |

**Microwave Oven  
Instructions**




Model: CMGA23TNDB

Please read these instructions carefully before installing and operating the oven.

[Candy CMGA23TNDB Microwave Oven User Manual](#)

Comprehensive user manual for the Candy CMGA23TNDB microwave oven, detailing safety, installation, operation, cooking functions, and care instructions for optimal appliance use.

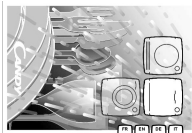

[Manuale d'Uso e Manutenzione Lavastoviglie Candy](#)

Guida completa per l'utilizzo sicuro ed efficiente della tua lavastoviglie Candy. Include istruzioni su installazione, programmi, manutenzione e risoluzione problemi.