

YONGNUO YN585EX

YONGNUO YN585EX TTL Wireless Speedlite Instruction Manual

For Pentax Digital Cameras

1. INTRODUCTION

Thank you for purchasing the YONGNUO YN585EX TTL Wireless Speedlite. This instruction manual provides detailed information on the proper setup, operation, and maintenance of your flash unit. Please read this manual thoroughly before use to ensure optimal performance and to prevent damage to the product.

The YN585EX is designed for Pentax digital cameras, offering TTL (Through-The-Lens) and manual flash capabilities, including wireless signal reception from compatible Pentax master units.

2. SAFETY INFORMATION

- Do not disassemble or attempt to repair the flash unit yourself. Refer all servicing to qualified personnel.
- Keep the flash unit dry. Do not expose it to rain, moisture, or high humidity.
- Avoid direct eye exposure to the flash light, especially at close range, as it can cause temporary vision impairment.
- Use only recommended batteries. Incorrect battery types or improper installation can lead to leakage, overheating, or explosion.
- Keep out of reach of children.
- Do not operate the flash in the presence of flammable gases or liquids.

3. PRODUCT FEATURES

- TTL Wireless Signal Reception:** Supports receiving wireless signals from Pentax master units such as AF-360FGZ and AF540FGZ II, as well as other compatible Pentax cameras.
- Multiple Channels:** Features 4 wireless channels for flexible off-camera flash setups.
- Flash Modes:** Supports off-camera TTL and manual flash modes.
- Zoom Function:** Offers auto and manual zooming of the flash head. A firmware upgrade may be required for optimal zoom functionality.
- Sync Modes:** Includes Rear Curtain Sync and S1/S2 pre-flash avoidance modes.
- AF Assist Light:** Integrated AF assist light for improved autofocus performance in low-light conditions.
- Compatibility:** Specifically designed for Pentax cameras.
- Flash Sync Speed:** Up to 1/250 second.
- Note:** This unit does not support High-Speed Sync (HSS).

4. SETUP

4.1. Battery Installation

The YN585EX uses four AA-size batteries. Ensure batteries are inserted with correct polarity.



Figure 4.1: Open the battery compartment cover and insert four AA batteries according to the polarity indicators.

1. Open the battery compartment cover located on the side of the flash unit.
2. Insert four AA batteries, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
3. Close the battery compartment cover securely.

4.2. Mounting on Camera

Attach the flash unit to your camera's hot shoe mount.



Figure 4.2: The hot shoe mount with its locking mechanism.

1. Slide the flash unit's hot shoe foot into your camera's hot shoe slot.
2. Tighten the locking ring or lever on the flash unit to secure it firmly to the camera.

4.3. Powering On/Off

Press the **ON/OFF** button to power the flash unit on or off. The LCD screen will illuminate upon power-on.



Figure 4.3: Front view of the YN585EX, highlighting the control panel and LCD display.

5. OPERATING INSTRUCTIONS

5.1. Basic Flash Modes

Press the **MODE** button to cycle through available flash modes:

- **P-TTL (Program Through-The-Lens):** The flash output is automatically controlled by the camera's metering system for optimal exposure.
- **M (Manual):** Allows you to manually set the flash output power from 1/1 (full power) to 1/128 in 1/3 stop increments. Use the directional buttons to adjust the power level.

5.2. Wireless Operation

The YN585EX can function as a slave unit, receiving wireless signals from a compatible Pentax master flash or camera's built-in flash.

1. Set your camera's master flash or built-in flash to wireless master mode.
2. On the YN585EX, press the **MODE** button until the wireless slave icon appears on the LCD.
3. Use the **SYNC/CH** button to select one of the 4 available channels (CH1-CH4) to match the master unit.
4. Position the YN585EX so its optical sensor can receive the master unit's signal.

5.3. Zoom Function

The flash head's zoom position can be adjusted to match the focal length of your lens.

- **Auto Zoom:** In P-TTL mode, the flash automatically adjusts the zoom position based on the camera's focal length information.
- **Manual Zoom:** Press the **ZOOM/FN** button to manually adjust the zoom range. Use the directional buttons to select the desired focal length (e.g., 24mm, 35mm, 50mm, 70mm, 85mm, 105mm).

5.4. Sync Modes

- **Rear Curtain Sync:** Synchronizes the flash with the closing of the shutter, creating a natural-looking blur effect for moving subjects. This setting is typically controlled via your camera's menu.
- **S1/S2 Modes:** These are optical slave modes. S1 fires the flash when it detects another flash burst. S2 ignores the pre-flash of a master unit and fires on the main flash. These modes are useful for triggering the YN585EX as an optical slave with non-TTL master flashes.

5.5. AF Assist Light

The AF assist light projects a pattern to help the camera's autofocus system in low-light conditions. It activates automatically when needed, provided the flash is mounted on the camera and powered on.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the flash unit. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Do not use solvents or abrasive cleaners.
- **Battery Care:** Remove batteries if the flash unit will not be used for an extended period to prevent leakage. Store batteries in a cool, dry place.
- **Storage:** Store the flash unit in a cool, dry, and dust-free environment. Avoid extreme temperatures and direct sunlight.

7. TROUBLESHOOTING

- **Flash Not Firing:**
 - Check if the flash is powered on and batteries are correctly installed and charged.
 - Ensure the flash is securely mounted on the camera's hot shoe.
 - Verify camera and flash settings are compatible (e.g., flash mode, sync mode).
- **Incorrect Exposure:**
 - In P-TTL mode, check camera exposure compensation settings.
 - In Manual mode, adjust flash power output.
 - Ensure the flash head zoom matches the lens focal length for even illumination.
- **Overheat Error:** If an overheat error occurs, power off the flash and allow it to cool down before further use. This typically happens after rapid, consecutive full-power flashes.
- **Zoom Function Issues:** If the auto or manual zoom function does not operate as expected, check the YONGNUO website for potential firmware updates. Connecting the flash via USB and updating firmware may resolve such issues.

8. SPECIFICATIONS

Feature	Detail
Brand	YONGNUO
Model	YN585EX
Compatible Mountings	Pentax
Flash Modes	P-TTL, Manual, Wireless Slave (Optical)
Wireless Channels	4 Channels
Flash Sync Speed	1/250s



Feature	Detail
Connectivity Technology	Wired (Hot Shoe)
Product Dimensions	7.09 x 2.36 x 2.36 inches
Item Weight	1.19 pounds
Power Source	4x AA Batteries (not included)


9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official YONGNUO website. Keep your proof of purchase for warranty claims.

© 2023 YONGNUO. All rights reserved.

Related Documents - YN585EX

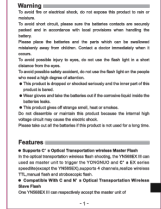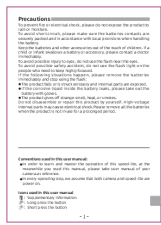	Yongnuo YN568EX III Speedlite User Manual Comprehensive user manual for the Yongnuo YN568EX III Speedlite, covering features, operation, advanced applications, and troubleshooting for Canon and Nikon cameras.
	YONGNUO YN685EX-RF Speedlite User Manual Comprehensive user manual for the YONGNUO YN685EX-RF Speedlite, detailing its features, operation, advanced applications, wireless shooting capabilities, custom settings, troubleshooting, and technical specifications.
	Yongnuo YN465 Speedlite User Manual User manual for the Yongnuo YN465 Speedlite, detailing its features, installation, operation modes, advanced applications, specifications, and troubleshooting.
	Yongnuo YN-622N-TX Wireless Flash Controller User Manual Comprehensive user manual for the Yongnuo YN-622N-TX i-TTL wireless flash controller, covering setup, functions, troubleshooting, and specifications for Nikon cameras.
	YONGNUO YN32-TX Wireless Flash Transmitter User Manual Detailed user manual for the YONGNUO YN32-TX Wireless Flash Transmitter, covering features, specifications, operation, troubleshooting, and FCC compliance. Learn how to set up and use your transmitter for optimal photography.
	YONGNUO YNRAY260 LED Video Light User Manual User manual for the YONGNUO YNRAY260 LED Video Light, detailing its features, operation, specifications, and control methods including DMX and app connectivity.

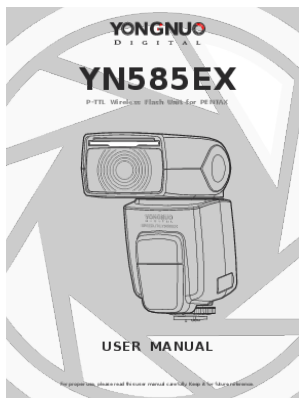


[\[pdf\]](#) User Manual Accessories

Yongnuo YN585EX User Manual Pentax Photo Speedlite Flash Zelig Vitor Pires pentaxforums forums attachments 60 accessory n articles 479355d1576274037 yongnuo yn585ex flash unit user manual |||

YN585EX P-TTL Wireless Flash Unit for PENTAX USER MANUAL For proper use, please read this user manual carefully. Keep it for future reference. 2 Introduction and disclaimer This is not an official YONGNUO manual I ve made this User Manual to get familiar with Scribus a Desktop Publishing Softwar...

 lang:en score:51 filesize: 9.24 M page_count: 56 document date: 2019-12-10

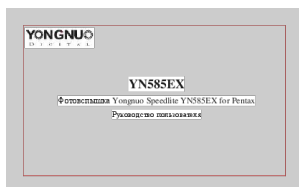

[\[pdf\]](#)

Инструкция по эксплуатации Yongnuo Speedlite YN585EX for Pentax telepka SPecialiST RePack Скачать инструкцию Фотовспл купить низким ценам отзывы фото видеообзоры 7ab9965e7a7f26a456f4966e6517e475 m fotosklad ru upload iblock 7ab |||

YN585EX Yongnuo Speedlite **YN585EX** for Pentax I. , , , , , , , . : , , , , , , , . 1 II. **YN585EX** Pentax AF FGZ, AF-540 F...

lang:i-klngon score:38 filesize: 288.28 K page_count: 33 document date: 2019-08-24



 
[\[pdf\]](#)

YN585EX ♦ Немедленно выньте батареи и прекратите использование изделия при следующие случаи Вспышка перегревт виден дым или чувствуется запах ru yongnuo cn snwww app jbw

YN585EX For Pentax **YN585EX** YONGNUO Speedlite, . .

I.
1 II.

lang:i-klngon score:37 filesize: 1.04 M page_count: 32 document date: 2017-06-27

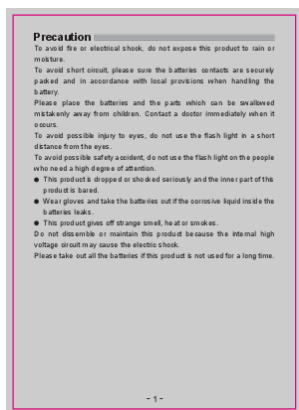

[\[pdf\]](#) User Manual

YN686EX RT ENGLISH USER MANUAL 2017 11 1 user manual SHENZHEN YONGNUO PHOTOGRAPHIC EQUIPMENT CO LT SPEEDLITE 2ACYP 2ACYPYN686EXRT yn686ex rt

Precaution To avoid fire or electrical shock, do not expose this product to rain or moisture. To avo ... ss opt shooting, YN686EX-RT can be used as master unit to trigger YONGNUO EX speedlites except **YN585EX** Canon EX series speedlite, and realize wireless flash in TTL/M/MULTI mode. Supports Wire...

lang:en score:34 filesize: 3.97 M page_count: 32 document date: 2018-12-28



[pdf] User Manual

YN650EX RF 20220409 User manual SHENZHEN YONGNUO PHOTOGRAPHIC EQUIPMENT CO LTD YN650RF 2ACYPYN yn650rf

Precautions To avoid fire or electrical shock, do not expose this product to rain or moisture. To av ... F can be used as the main control unit to trigger YONGNUO and C brand EX series flashes except for **YN585EX** , w total of 4 channels to choose , realizing wireless TTL, manual flash, and strobosco... lang:en score:31 filesize: 5.02 M page_count: 30 document date: 2022-04-15



[pdf] User Manual

 
YN600EX RT II for Canon 20220409 User manual SHENZHEN YONGNUO PHOTOGRAPHIC EQUIPMENT CO LTD YN600RT 2ACYPYN600RTII yn600rtii

Precautions To avoid fire or electrical shock, do not expose this product to rain or moisture. To av ... EX-R can be used as master unit to trigger the YONGNUO and Canon EX series flash excluding the **YN585EX** , supports 4 channels, realize wireless TTL, manual flash and stroboscopic flash. Supports Ca... lang:en score:30 filesize: 2.72 M page_count: 32 document date: 2022-04-15




[pdf]

SKY YN568EXIIIC ru yongnuo cn 80 cnwww app jbw
YN568EXIII For Canon YN568EXIII YONGNUO Speedlite, . . I..... .. - , , , . . 1 II. YN568EX III , YONGN **YN585EX** EX- Canon, . anon/Nikon YN568EX III YN600EX-RT II, YN568EX II, YN56... lang:i-klinton score:29 filesize: 1.62 M page_count: 36 document date: 2017-10-31

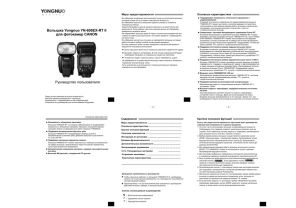

[pdf]

Инструкция по эксплуатации Yongnuo Speedlite YN860 telepka e36db43d0b9b9d8831cc8d41c0123232fotosklad ru upload iblock e36db43d0b9b9d8831cc8d41c0123232 |||
Yongnuo YN-600EX-RT II CANON ... YONGNUO Canon EX **YN585EX** . 4 , ... lang:i-klinton score:29 filesize: 1.66 M page_count: 6 document date: 2018-06-18

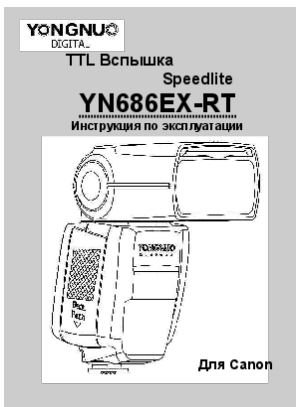 

[pdf]

Инструкция по эксплуатации Yongnuo Speedlite YN686EX RT для Canon ad4ba726e480f8e6b87343ed1abec442 m fotosklad ru upload iblock ad4 |||
TTL Speedlite YN686EX-RT Canon TTL Speedlite YN686EX-RT YONGNUO Speedlite, ... , TTL, M , MUL YONGNUO Canon RT. , YONGNUO EX **YN585EX** Canon EX. TTL/M/MULTI . Canon Nikon. S1 S2 . , GN ISO100, 200; YN686... lang:i-klinton score:29 filesize: 663.64 K page_count: 35 document date: 0000-00-00

lang:i-klingon score:28 filesize: 828.31 K page_count: 35 document date: 0000-00-00



[\[pdf\]](#)

YN600EX RT II ♦ Немедленно выньте батареи и прекратите использование изделия при следующие случаи Вспышка перегрелась виден дым или чувствуется запах RTII ru yongnuo cn cnwww app jbw 80

Speedlite YN600EX-RT II For C Speedlite YN600EX-RT II For C YONGNUO Speedlite, ... II , TTL, M Multi anon YN600EX-RT II , YONGNUO **YN585EX** EX- Canon, TTL/M/MULTI . 4 . anon/Nikon YN600EX-RT II YN600EX-RT II,...

lang:i-klngon **score:27** filesize: 1.13 M page_count: 40 document date: 2017-06-27



[\[pdf\]](#)

Инструкция по эксплуатации Yongnuo Speedlite YN 568EX III N для Nikon Скачать инструкцию Фотовспышка купить низким и отзывы фото видеообзоры 46e47dbc4c1b68e4ed3b9e4529a25280 m fotosklad ru upload iblock 46e |||

YN568EXIII For Nikon YN568EXIII YONGNUO Speedlite, . . I..... ... YN568EXIII TTL, M Multi , . : 25 ., 15 YN568EX III , YONGNUO **YN585EX** EX- Canon. YN568EX III YN600EX-RT II, YN568EX II, YN568EX III, 600EX II -RT, 580E...

lang:i-klngon **score:25** filesize: 834.38 K page_count: 34 document date: 0000-00-00

 


[\[pdf\]](#)

SKY YN568EXIII ♦ Немедленно выньте батареи и прекратите использование изделия при следующие случаи Вспышка перегрелась виден дым или чувствуется запах YN568EXIIIN ru yongnuo cn cnwww app jbw 80

YN568EXIII For Nikon YN568EXIII YONGNUO Speedlite, . . I..... ... YN568EXIII TTL, M Multi , . : 25 ., 15 YN568EX III , YONGNUO **YN585EX** EX- Canon. YN568EX III YN600EX-RT II, YN568EX II, YN568EX III, 600EX II -RT, 580E...

lang:i-klngon **score:25** filesize: 1.61 M page_count: 35 document date: 2017-10-31

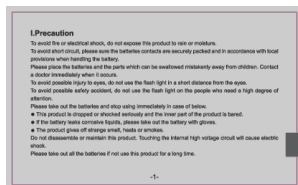


[\[pdf\]](#) User Manual

YN585EX for Pentax V1 0 Manual Yongnuo TTL YN 585EX P en yongnuo fr notices |||

...

 lang:i-klngon **score:25** filesize: 3.72 M page_count: 30 document date: 2017-05-05

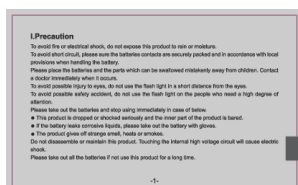


[\[pdf\]](#) User Manual

YN585EX for Pentax V1 0 Yongnuo PENTAX User Manual Speedlite Cameras B H 343665 bhphotovideo lit files |||

...

 lang:i-klngon **score:22** filesize: 6.66 M page_count: 30 document date: 2017-06-05

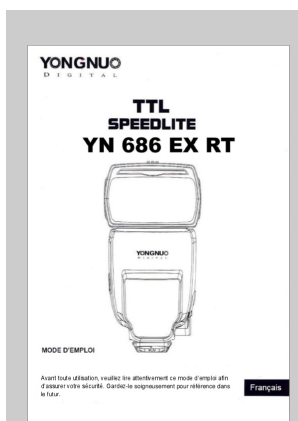


[\[pdf\]](#)

Avant toute utilisation veuillez lire attentivement ce mode d emploi afin assurer votre sécurité Gardez le soigneuseme YN 686EX R yongnuo notices |||

Avant toute utilisation, veuillez lire attentivement ce mode d emploi afin d assurer votre scurit. G ... es TTL, MULTI.. En unit-matre, le flash peut commander les flashes Yougnuo series EX except le **YN585EX**. Il peut recevoir des signaux des YN686EX-RT, YN600EX-RT II, YN568EX II, Canon 600EX I...

 lang:fr **score:19** filesize: 843.2 K page_count: 29 document date: 2019-06-07

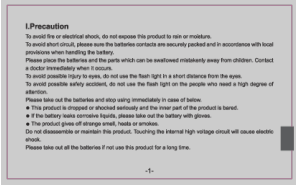

[\[pdf\]](#) User Manual

YN585EX for Pentax V1 0 master units supports 4 channels achieves off camera TTL and manual flash COMPREHENSIVELY SUPPORTS FUNCTIONS Supports Exposure Quick Start If you don t have much time to read the whole user we advise this section Please avoid excessive use of output with a1c32cfcc7edd63678a94bd40450f7be9a15fb2f83c5fcd8d2e217397e2eadd d3lfzbr90tc cloudfront net epi resource r yongnuo yn685c

...

lang:fr score:14 filesize: 6.66 M page_count: 30 document date: 2016-09-26