

Fujifilm X-T20 Body - Black

Fujifilm X-T20 Mirrorless Digital Camera Instruction Manual

Model: X-T20 Body - Black | Brand: Fujifilm

PRODUCT OVERVIEW

The compact and lightweight Fujifilm X-T20 comes with an updated sensor and Processor, a reworked AF algorithm, and a tilting touchscreen LCD monitor. The X-T20 also has enhanced video functionality and is capable of capturing 4K movies with popular film simulation modes. It features a Focal Plane Shutter type.

SETUP GUIDE

What's in the Box

- Fujifilm X-T20 Camera Body
- NP-W126S Battery
- Battery Charger
- Shoulder Strap
- USB Cable
- User Manual (this document)
- U.S.A. Warranty Information

Initial Setup

Before first use, ensure the battery is fully charged using the provided battery charger. Insert the charged battery and a compatible SDXC memory card (UHS-1 type, class 3 recommended) into the camera's battery/card slot.



Figure 1: Front view of the Fujifilm X-T20 camera body, showing the lens mount and main controls.



Figure 2: Back view of the Fujifilm X-T20 camera, highlighting the tilting LCD touchscreen and various rear control buttons.



Figure 3: Top view of the Fujifilm X-T20 camera, displaying the shutter speed dial, exposure compensation dial, and hot shoe.

Getting Started Video Guide

Watch this official video for a quick guide on setting up and getting started with your Fujifilm X-T20 camera.

Your browser does not support the video tag.

Video 1: "Getting Started with the Fujifilm X-T20" - An official guide to initial camera setup and basic functions.

OPERATING YOUR CAMERA

Shooting Modes

- **Auto Mode:** For beginners, the camera can be set to Auto mode via the top plate switch. This allows the camera to select optimal settings automatically.
- **Manual Controls:** For advanced users, the X-T20 offers extensive external controls (dials for shutter speed, aperture, ISO) for direct access to exposure and focus settings.
- **RAW Mode:** For total control over image quality and post-processing, shooting in RAW mode (RAF format) allows you to get the most out of the camera's 24.3MP X-Trans CMOS III APS-C sensor.
- **Film Simulation Modes:** Utilize Fujifilm's various film simulation modes (e.g., Velvia, Acros, Classic Chrome) to achieve distinct photographic looks directly in-camera.

Autofocus System

- **AF-S Mode:** For best autofocus performance with stationary subjects, use AF-S mode with face detection enabled.
- **Touch Autofocus:** The autofocus point can be positioned directly on the tilting touchscreen LCD monitor when shooting with the rear screen.
- **Customizable 4-way Controller:** The 4-way controller can be customized to provide direct control over autofocus point positioning when shooting using the electronic viewfinder.

Video Recording

The X-T20 is capable of shooting 4K video at up to 30 frames per second (30p). The tilting screen is useful for composing video footage and setting focus.

Connectivity

The camera features built-in Wi-Fi. Download the Fujifilm Camera Remote mobile app to connect your X-T20 to your smartphone or tablet for quick image sharing and remote control.

Maintenance and Care

- **Cleaning:** Use a soft, lint-free cloth to clean the camera body. For the lens and sensor, use specialized cleaning kits and follow manufacturer guidelines to avoid damage.
- **Storage:** Store the camera in a dry, cool place away from direct sunlight and extreme temperatures. Use a desiccant packet if storing in humid environments.
- **Battery Care:** Fully charge the battery before extended storage. Remove the battery if the camera will not be used for a long period.
- **Firmware Updates:** Periodically check the Fujifilm website for firmware updates to ensure optimal performance and access to new features.

Troubleshooting Common Issues

Problem	Solution
Camera does not power on.	Ensure the battery is fully charged and correctly inserted. Check if the battery contacts are clean.
Images are blurry.	Check focus mode (AF-S for still subjects), ensure sufficient light, or increase shutter speed to prevent motion blur. Verify lens is clean.
Memory card error.	Ensure the memory card is inserted correctly. Try reformatting the card (this will erase all data). If the problem persists, try a different card.
Wi-Fi connection issues.	Ensure the Fujifilm Camera Remote app is updated. Restart both the camera and your mobile device. Check camera's Wi-Fi settings.

Technical Specifications

Feature	Specification
Sensor Type	24.3MP X-Trans CMOS III APS-C
Processor	X-Processor Pro
Compatible Mountings	Fujifilm X
Screen Size	3.0 Inches
Display Type	Tilting Touchscreen LCD
Video Resolution	4K UHD 2160p
Autofocus Points	91-Point Hybrid AF System
Connectivity	USB, HDMI, Wi-Fi
Supported File Format	RAW (RAF), JPEG
Item Weight	0.84 Pounds (Body Only)

Warranty Information

This product is sold with **No Warranty**. Please refer to any specific warranty documentation provided at the time of purchase for details on retailer or extended warranties, if applicable.

Additional Support

For a comprehensive user manual in PDF format, please refer to the official document available at:[Fujifilm X-T20 User Manual \(PDF\)](#).

For further assistance, please visit the official Fujifilm support website or contact their customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01N10DO3R>

More documents and user manuals: <https://manuals.plus/>