

[Manuals.plus](#) /

> [Dyson](#) /

> [Dyson 949852-05 Motorised Brush Instruction Manual](#)

Dyson 949852-05

Dyson 949852-05 Motorised Brush Instruction Manual

Product Model: 949852-05 | Brand: Dyson

PRODUCT OVERVIEW

This document provides instructions for the Dyson 949852-05 Motorised Brush, an original manufacturer part designed for specific Dyson vacuum models. This attachment enhances cleaning performance on various surfaces.

Key Features:

- Genuine Dyson part, ensuring compatibility and quality.
- Motorised brush bar for effective dirt and debris removal.
- Designed for easy attachment and removal.
- Brush bar is removable for convenient cleaning and maintenance.

Compatibility:

This motorised brush is compatible with the following Dyson models:

- DC59 Animal Complete UK 204841-01
- DC59 Animal UK 64955-01
- V6 / SV03 Animal UK 211317-01
- V6 / SV03 Cord Free UK Ir/MWh/Nt 227342-01
- V6 / SV03 Fluffy UK 210321-01

Important: This attachment will only fit the specified models and is not compatible with other Dyson vacuum models.

PRODUCT VISUALS AND DEMONSTRATION



Image: The Dyson 949852-05 Motorised Brush, showing its grey body with a clear cover revealing red and purple brush bristles.

Demonstration Video:

Your browser does not support the video tag.

Video: This demonstration shows how to attach the Dyson motorized brush to a Dyson V6 slim vacuum and how to remove the brush bar for cleaning.

SETUP AND INSTALLATION

1. **Prepare your Dyson Vacuum:** Ensure your Dyson V6 series vacuum is turned off and disconnected from any power source.
2. **Attach the Extension Wand (Optional):** If using an extension wand, align the end of the wand with the main body of the vacuum until it clicks securely into place.
3. **Attach the Motorised Brush:** Align the connector on the motorised brush with the end of the extension wand (or directly to the vacuum body if not using a wand). Push firmly until you hear a click, indicating it is securely attached.
4. **Verify Connection:** Gently pull on the brush head to ensure it is firmly connected and will not detach during use.

OPERATING INSTRUCTIONS

Once the Dyson 949852-05 Motorised Brush is securely attached to your compatible Dyson V6 vacuum, it operates automatically when the vacuum is powered on. The motorised brush bar will spin to agitate dirt and debris from carpets and hard floors, facilitating effective cleaning.

- **Power On:** Activate your Dyson V6 vacuum as per its standard operating instructions.
- **Cleaning:** Guide the vacuum across the surface to be cleaned. The motorised brush will engage to provide deep cleaning.
- **Maneuverability:** The brush head features a swivel joint, allowing for easy navigation around furniture and obstacles.

MAINTENANCE

Regular maintenance of your motorised brush ensures optimal performance and extends its lifespan. The brush bar is designed for easy removal and cleaning.

1. **Disconnect Power:** Always ensure the vacuum is turned off and disconnected from any power source before performing maintenance.
2. **Remove End Cap:** Locate the end cap on the side of the brush head. Use a coin or a flat tool to turn the fastener counter-clockwise to unlock the end cap.
3. **Remove Brush Bar:** Once the end cap is removed, gently slide the brush bar out of the housing.
4. **Clean Brush Bar:** Remove any tangled hair, threads, or debris from the brush bar. A pair of scissors can be used carefully to cut through stubborn tangles.
5. **Clean Housing:** Wipe the inside of the brush head housing to remove any accumulated dust or dirt.
6. **Reassemble:** Slide the clean brush bar back into the housing, ensuring it is correctly seated. Replace the end cap and turn the fastener clockwise to lock it securely.

Refer to the demonstration video in the "Product Visuals and Demonstration" section for a visual guide on brush bar removal and cleaning.

TROUBLESHOOTING

If you encounter issues with your Dyson 949852-05 Motorised Brush, consider the following common troubleshooting steps:

- **Brush Bar Not Spinning:**
 - Check for obstructions: Remove the brush bar as described in the Maintenance section and clear any tangled hair or debris that might be preventing it from spinning.
 - Ensure proper connection: Verify that the brush head is securely attached to the vacuum or extension wand, with an audible click.
- **Reduced Suction:**
 - Clean the brush head: Accumulated dirt can reduce airflow. Follow the Maintenance instructions to clean the brush bar and housing.
 - Check vacuum filters: Ensure your main Dyson vacuum filters are clean and properly installed, as this can affect overall suction.
- **Unusual Noises:**

- Inspect for foreign objects: Turn off the vacuum and carefully inspect the brush head for any foreign objects lodged within the brush bar or housing.
- Check for wear: Examine the brush bar for any signs of damage or excessive wear that might be causing noise.

If issues persist after performing these steps, please contact Dyson customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	9.84 x 9.65 x 2.95 inches
Item Weight	1.47 pounds
Manufacturer	Dyson
Item Model Number	949852-05
ASIN	B01N1PQTHG
Date First Available	March 21, 2017

WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or technical support for your Dyson 949852-05 Motorised Brush, please refer to the official Dyson website or contact Dyson customer service directly.

Dyson Official Website: www.dyson.com

Please have your product model number (949852-05) and proof of purchase available when contacting support.