

Breville VST072X

Breville VST072X Waffle Maker Instruction Manual

Model: VST072X

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Breville VST072X Waffle Maker is designed to prepare two waffles simultaneously. It features a durable DuraCeramic coating on its deep plates, ensuring efficient cooking and easy release. The appliance includes power and ready-to-cook indicator lights for optimal timing, cool-touch handles for safe operation, and a large hinge to minimize mess during use. For convenient storage, it offers a vertical storage option and integrated cord storage.



Image: The Breville VST072X Waffle Maker shown with its lid open, displaying the two non-stick waffle plates ready for use.

Key Features:

- Makes 2 waffles.
- Deep fill plates.
- High hinge for reduced mess.
- Cool-touch handle.
- DuraCeramic coating.

GETTING STARTED

Unpacking

- Carefully remove the waffle maker and all packaging materials.
- Ensure all components are present and undamaged.

Before First Use

- Wipe the DuraCeramic plates with a damp cloth or sponge to remove any dust or residue from manufacturing.
- Dry thoroughly.
- Wipe the exterior of the appliance with a clean, damp cloth.
- Do not immerse the appliance in water or any other liquid.



Image: A close-up of the Breville VST072X waffle plates, highlighting the DuraCeramic non-stick surface.

OPERATING YOUR WAFFLE MAKER

Preheating

1. Plug the waffle maker into a suitable electrical outlet. The power indicator light will illuminate.
2. Close the lid and allow the appliance to preheat. The ready-to-cook indicator light will illuminate when the waffle maker has reached the optimal cooking temperature. This typically takes a few minutes.

Making Waffles

1. Once the ready-to-cook indicator light is on, open the lid using the cool-touch handle.
2. Pour your waffle batter evenly onto the center of each waffle plate. Do not overfill, as the batter will expand during cooking.
3. Carefully close the lid. The ready-to-cook indicator light may turn off temporarily as the appliance adjusts

temperature.

4. Allow the waffles to cook until the ready-to-cook indicator light illuminates again, or until they are golden brown and cooked to your preference. Cooking time may vary based on batter type and desired crispness.
5. Once cooked, open the lid and carefully remove the waffles using a heat-resistant plastic or wooden utensil. Do not use metal utensils, as they can damage the non-stick coating.
6. If making additional waffles, close the lid and wait for the ready-to-cook indicator light to illuminate again before adding more batter.



Image: The Breville VST072X Waffle Maker in operation, with two freshly cooked, golden-brown waffles on the lower plate.

CARE AND CLEANING

Proper care and cleaning will extend the life of your Breville VST072X Waffle Maker.

Before Cleaning

- Always unplug the waffle maker from the power outlet and allow it to cool completely before cleaning.

Cleaning the Plates

- The DuraCeramic plates are removable for easy cleaning. Locate the release buttons on the side of the appliance.

- Press the release buttons and carefully lift each plate out of the waffle maker.
- Wash the plates in warm, soapy water using a non-abrasive sponge or cloth. Rinse thoroughly and dry completely before reattaching.
- Do not use abrasive cleaners or scouring pads, as these can damage the non-stick coating.
- The plates are not dishwasher safe.



Image: A hand demonstrating the removal of a waffle plate from the Breville VST072X Waffle Maker by pressing the release button.

Exterior Cleaning

- Wipe the exterior surfaces of the waffle maker with a soft, damp cloth.
- Do not use abrasive cleaners or immerse the appliance in water.

Storage

- Ensure the waffle maker is clean and completely cool before storing.
- The VST072X Waffle Maker can be stored vertically to save space. Wrap the power cord around the integrated cord storage area.



Image: The Breville VST072X Waffle Maker positioned vertically for compact storage, with its power cord neatly wrapped.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Waffles sticking to plates.	Plates not properly seasoned or cleaned; too little oil/butter in batter; plates not hot enough.	Ensure plates are clean. Lightly brush plates with cooking oil before adding batter. Allow waffle maker to fully preheat until the ready-to-cook light illuminates.

Problem	Possible Cause	Solution
Waffles not cooking evenly.	Uneven batter distribution; insufficient preheating.	Ensure batter is spread evenly across the plates. Allow the waffle maker to fully preheat.
Waffle maker not heating up.	Not plugged in; power outlet issue; appliance malfunction.	Check if the appliance is securely plugged into a working outlet. Try a different outlet. If the issue persists, contact customer support.
Steam escaping from sides.	Normal during cooking process.	This is normal and indicates the moisture is being cooked out of the waffles. Do not open the lid prematurely.

PRODUCT SPECIFICATIONS

Specification	Detail
Brand	Breville
Model Number	VST072X
Color	Grey/Silver
Product Dimensions (L x W x H)	22.8 x 21.4 x 8.4 cm (approx. 9 x 8.4 x 3.3 inches)
Power	850 Watts
Voltage	240 Volts
Material	Stainless Steel
Item Weight	2.38 Kilograms (approx. 5.25 lbs)
Special Feature	Compact, Vertical Storage
Components Included	Waffle Maker with 2 waffle plates
Country of Origin	China

WARRANTY AND CUSTOMER SUPPORT

This Breville VST072X Waffle Maker comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage duration and limitations.

For technical assistance, troubleshooting beyond this manual, or to inquire about warranty claims, please

contact Breville customer support. Contact information can typically be found on the Breville official website or on the product packaging.

When contacting support, please have your model number (VST072X) and proof of purchase readily available.