

EASY EKG-88S

Easy Karaoke EKG-88S Karaoke Machine User Manual

Model: EKG-88S

1. INTRODUCTION

Thank you for purchasing the Easy Karaoke EKG-88S Karaoke Machine. This manual provides essential information for the safe and efficient operation of your new device. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain or moisture.
- Do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- Keep the unit away from direct sunlight, heat sources, and strong magnetic fields.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Easy Karaoke EKG-88S Karaoke Machine
- 1 x Black Microphone
- AV Cable
- Demo Disc

- Power Adapter (Mains powered)
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your EKG-88S Karaoke Machine.



Figure 4.1: Top-down view of the EKG-88S Karaoke Machine, highlighting the control panel and CD compartment.



Figure 4.2: Front view of the EKG-88S Karaoke Machine, detailing the microphone inputs, AUX input, volume, and echo controls.

Control Panel Features:

- **VOLUME Knob:** Adjusts the overall sound output level.
- **ECHO Knob:** Controls the echo effect for the microphone.
- **PROGRAM Button:** Used to program the playback order of tracks.
- **REPEAT Button:** Repeats the current track or all tracks.
- **PLAY/PAUSE Button:** Starts or pauses CD playback.
- **STOP Button:** Stops CD playback.
- **SKIP Buttons (◀◀ / ▶▶):** Skips to the previous or next track.
- **CDG/AUX Switch:** Selects between CDG disc playback and AUX input.
- **Microphone Jacks (MIC 1, MIC 2):** Connect microphones.
- **AUX Input Jack:** Connect external audio devices (e.g., MP3 player).
- **Headphone Jack:** For private listening.
- **LED Display:** Shows track number and playback status.

5. SETUP

Follow these steps to set up your karaoke machine:

1. **Power Connection:** Connect the power adapter to the DC IN jack on the back of the unit and plug it into a standard wall outlet.
2. **TV Connection:** Use the supplied AV cable to connect the karaoke machine to your television. Match the colored plugs (Yellow for Video, White for Audio Left, Red for Audio Right) from the machine's AV OUT jacks to the corresponding AV IN jacks on your TV.
3. **Microphone Connection:** Plug the included microphone into either the MIC 1 or MIC 2 jack on the front of the unit. You can connect a second microphone (sold separately) to the other jack for duets.
4. **Insert Disc:** Gently press the 'PUSH TO OPEN' area on the top cover to open the CD compartment. Place a CD or CDG disc onto the spindle with the label side facing up. Close the lid firmly.

6. OPERATING INSTRUCTIONS

6.1. Playing CD/CDG Discs

1. Ensure the CDG/AUX switch is set to **CDG**.
2. Press the **PLAY/PAUSE** button to start playback. The track number will appear on the LED display.
3. If using a CDG disc, lyrics will appear on your connected TV screen.
4. Adjust the **VOLUME** knob to your desired listening level.
5. Adjust the **ECHO** knob to add an echo effect to your voice through the microphone.
6. Use the **SKIP** buttons (◀◀ / ▶▶) to navigate between tracks.
7. Press the **STOP** button to stop playback.

6.2. Using AUX Input

1. Connect your external audio device (e.g., smartphone, MP3 player) to the **AUX Input Jack** on the front of the

unit using a 3.5mm audio cable (not supplied).

2. Ensure the CDG/AUX switch is set to **AUX**.
3. Start playback on your external audio device.
4. Adjust the **VOLUME** knob on the karaoke machine and the volume on your external device to achieve the desired sound level.
5. Microphone functions (volume, echo) will still be active when using AUX input.

6.3. Microphone Controls

- **Microphone Volume:** The main VOLUME knob controls the microphone volume along with the music volume.
- **Echo Effect:** Rotate the **ECHO** knob clockwise to increase the echo effect on your voice.

7. MAINTENANCE

Proper care will ensure the longevity of your karaoke machine:

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store them in their cases when not in use.
- **Storage:** If not using the unit for an extended period, unplug it from the power outlet and store it in a cool, dry place.

8. TROUBLESHOOTING

If you encounter issues with your EKG-88S, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet not working.	Ensure power adapter is securely plugged into the unit and a working wall outlet.
No sound from speakers	Volume too low; incorrect input selected; AV cables not connected properly.	Increase VOLUME knob. Check CDG/AUX switch. Verify AV cable connections to TV.
No microphone sound	Microphone not plugged in; microphone switch off; VOLUME knob too low.	Ensure microphone is fully plugged into MIC jack. Check if microphone has an on/off switch. Increase VOLUME knob.
Lyrics not appearing on TV	Not a CDG disc; AV cables not connected properly; TV input not selected correctly.	Ensure you are using a CDG disc. Verify AV cable connections. Select correct AV input on your TV.
Disc not playing	Disc inserted incorrectly; disc dirty or scratched; CD compartment lid not closed.	Re-insert disc correctly. Clean disc. Ensure CD compartment lid is fully closed.

9. SPECIFICATIONS

Brand	EASY
Model Number	EKG-88S
Color	Black
Connectivity Technology	Wired
Special Features	Volume Control, Echo Effects Control
Included Components	AV Cable, 1 Microphone
Number of Speakers	1 (internal)
Compatible Discs	CD/CDG/CD-R/CD-RW
Dimensions (H x W x D)	7.3 x 20.3 x 21.3 cm
Weight	0.68 kg
Power Source	Mains Powered

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact the retailer where you purchased the Easy Karaoke EKG-88S machine. Keep your proof of purchase for warranty claims.

For further assistance, you may also visit the official Easy Karaoke website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question