

[Manuals.plus](#) /

› [STAR WARS](#) /

› STAR WARS Bladebuilders Kylo Ren Deluxe Electronic Lightsaber Instruction Manual

STAR WARS C1440

STAR WARS Bladebuilders Kylo Ren Deluxe Electronic Lightsaber

Model: C1440

INTRODUCTION

The STAR WARS Bladebuilders Kylo Ren Deluxe Electronic Lightsaber is an electronic toy lightsaber designed for immersive play. It features light and sound effects that replicate the iconic weapon from the Star Wars universe. This lightsaber includes a connector for integration with other Bladebuilders components (sold separately), allowing for customized configurations.

Key Features

- Pulsating light effect
- Authentic lightsaber power-up and battle sounds
- Includes a connector for Bladebuilders customization

WHAT'S INCLUDED

- Electronic Lightsaber (1)



Image: Kylo Ren Deluxe Electronic Lightsaber in use.

SETUP

Battery Installation

The lightsaber requires 3 AA batteries for operation. These batteries are included with the product. To install or replace batteries, locate the battery compartment on the hilt, open it, insert the batteries according to the polarity indicators, and securely close the compartment.

Assembly

The Kylo Ren Deluxe Electronic Lightsaber comes with a connector piece. This connector allows you to attach other compatible Bladebuilders lightsaber components (sold separately) to create unique lightsaber configurations. Align the connector with the designated slot on the lightsaber hilt and push firmly until it clicks into place.

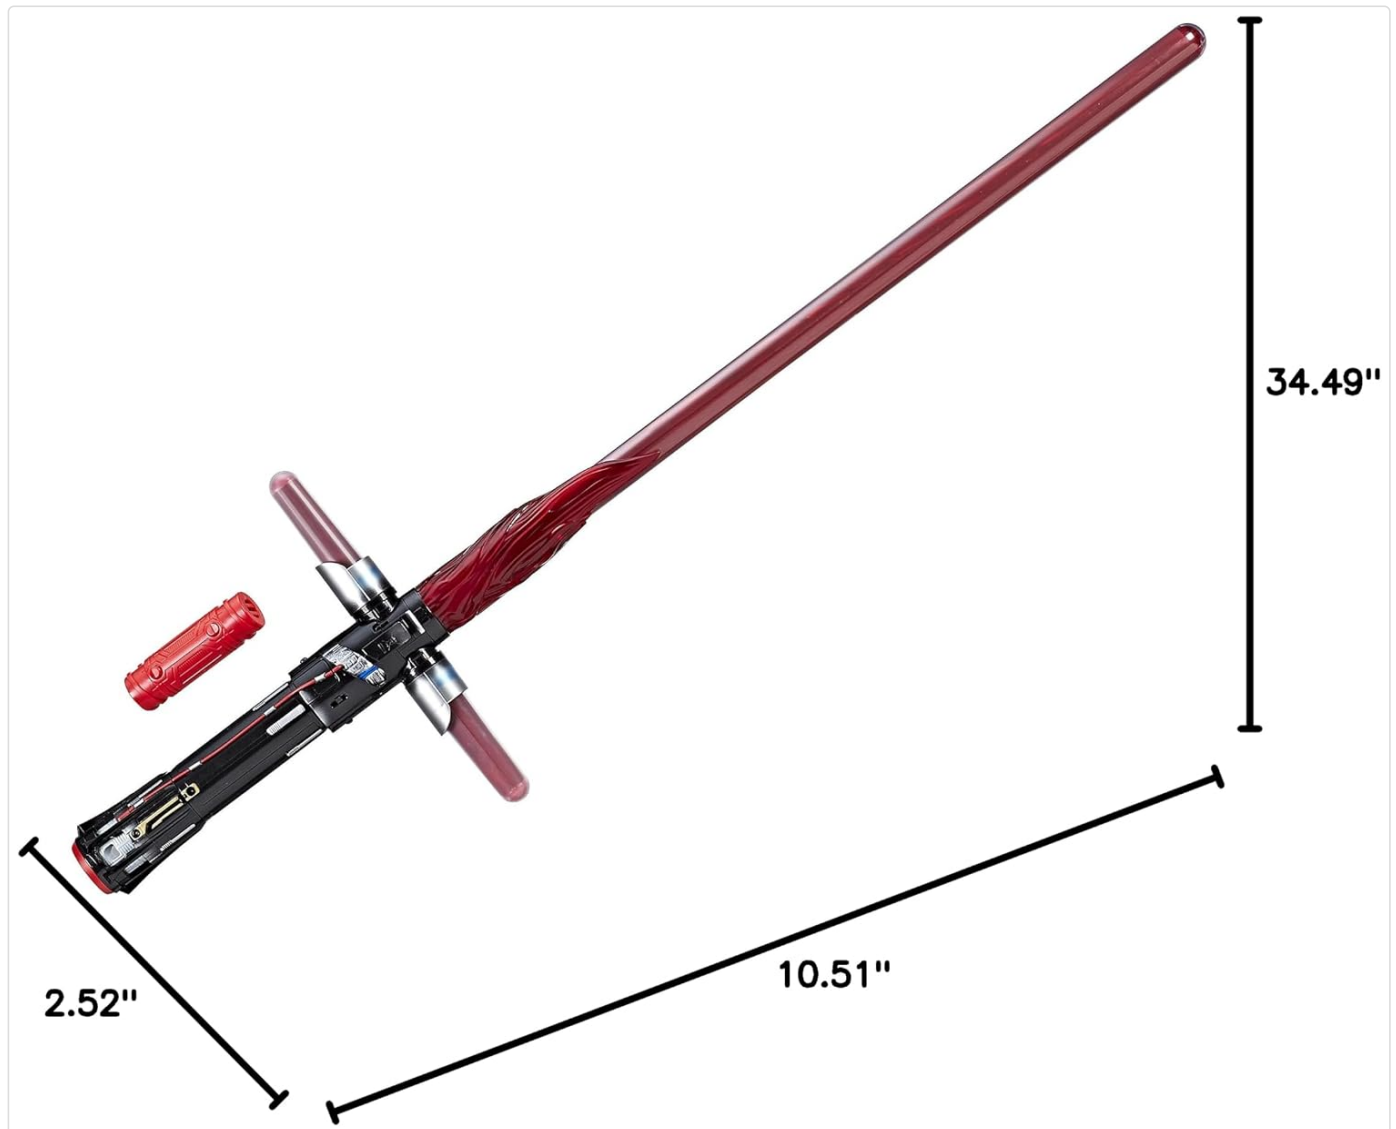


Image: Lightsaber components and connector.

OPERATING INSTRUCTIONS

Power On/Off

To activate the lightsaber, locate the power button on the hilt and press it. The lightsaber will emit a power-up sound and the blade will illuminate. To turn off the lightsaber, press the power button again. A power-down sound will play, and the blade will extinguish.

Light and Sound Effects

The lightsaber features a pulsating red light effect, mimicking Kylo Ren's distinctive lightsaber. It also produces authentic lightsaber sounds, including power-up, idle hum, and battle clash sounds that respond to movement and impact.

Your browser does not support the video tag.

Video: Demonstration of the Kylo Ren Deluxe Electronic Lightsaber's light and sound effects.

MAINTENANCE

To clean the lightsaber, wipe it with a soft, dry cloth. Do not immerse the product in water or use harsh chemicals, as this may damage the electronic components. Store the lightsaber in a dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **No Power/Lights/Sounds:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new AA batteries.
 - Check if the power button is fully pressed.
- **Flickering Lights/Distorted Sounds:**
 - This may indicate low battery power. Replace batteries.
 - Ensure no obstructions are interfering with the blade or hilt.

SPECIFICATIONS

Feature	Detail
Brand	STAR WARS
Model Name	Kylo Ren Deluxe Electronic Lightsaber
Model Number	C1440
Manufacturer	Hasbro
Material	Plastic
Color	Red
Item Dimensions (L x W x H)	10.51" x 2.52" x 34.49" (26.7 cm x 6.4 cm x 87.6 cm)
Item Weight	0.27 g
Batteries Required	3 AA batteries (included)
Age Range	6 years to 99 years (72 to 1188 months)
Included Components	Electronic Lightsaber
Additional Features	Pulsating Light Effect, Authentic Lightsaber Sounds, Customizable Connector



Image: Lightsaber dimensions overview.

WARRANTY INFORMATION

This product is sold without a manufacturer's warranty.

SUPPORT

For further assistance or inquiries regarding the STAR WARS Bladebuilders Kylo Ren Deluxe Electronic Lightsaber, please contact Hasbro customer support. Refer to the product packaging for specific contact details or visit the official Hasbro website for support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question