

[manuals.plus](#) /

› [Hot Wheels](#) /

› [Hot Wheels Dine & Dash Playset Instruction Manual \(Model FJN39\)](#)

Hot Wheels FJN39

Hot Wheels Dine & Dash Playset Instruction Manual

Model: FJN39

INTRODUCTION

The Hot Wheels Dine & Dash Playset (Model FJN39) offers an engaging play experience for children aged 4-8 years. This fold-out playset allows for instant action and imaginative storytelling with its recognizable theme and push-around play activities. It is designed for portability and easy storage, and can connect to other Hot Wheels track sets to expand play possibilities.

SETUP INSTRUCTIONS

The Hot Wheels Dine & Dash Playset is designed for easy assembly and quick setup. Follow these steps to prepare your playset for play:

- 1. Unpack Components:** Carefully remove all parts from the packaging. Ensure you have the main playset unit and any included Hot Wheels vehicle.
- 2. Unfold the Playset:** The playset is designed to fold out. Gently extend the sections of the playset until it forms the full play area. Ensure all connecting points click securely into place.
- 3. Attach Accessories:** If any small accessories, such as the Hot Wheels sign or specific track pieces, are separate, attach them to their designated slots on the playset. Refer to the molded guides for correct placement.
- 4. Connect to Other Tracks (Optional):** The playset features connection points for other Hot Wheels track sets. Align the track connectors and push firmly to create an extended play environment.



Image: The playset in a partially folded state, illustrating its compact design and potential connection points for other tracks.

OPERATING THE PLAYSET

Once assembled, the Hot Wheels Dine & Dash Playset offers several interactive features for dynamic play:

- **Drive-Through Action:** Place a Hot Wheels vehicle at the entrance of the drive-through. Push the car through the designated path to activate internal mechanisms.
- **Burger Flipping Feature:** As the car progresses through the playset, it can trigger the 'burger flipping' action. This involves a mechanism that launches a burger-shaped disc into the air.
- **Ramp Exit:** After navigating the drive-through and activating features, the vehicle will exit via a ramp, ready for further adventures or connection to other track sets.
- **Vehicle Compatibility:** Use standard Hot Wheels vehicles for optimal performance. Larger or non-standard vehicles may not function correctly with all playset features.



Image: A child interacting with the playset, demonstrating the burger-flipping action and vehicle movement.



Image: A close-up of a hand operating a lever, which is part of the playset's interactive features.



Image: The playset in full operation, showing a green car exiting the drive-through and the burger disc in motion.

MAINTENANCE

To ensure the longevity and optimal performance of your Hot Wheels Dine & Dash Playset, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the playset with a soft, damp cloth to remove dust and dirt. Avoid using harsh chemicals or abrasive cleaners, as these can damage the plastic.
- **Storage:** When not in use, the playset can be folded for compact storage. Ensure all parts are securely folded and stored in a dry, cool place away from direct sunlight to prevent warping or fading.
- **Inspection:** Periodically inspect the playset for any loose or damaged parts. If any components are broken, discontinue use and contact customer support for assistance.

TROUBLESHOOTING

If you encounter any issues with your Hot Wheels Dine & Dash Playset, refer to the following common troubleshooting tips:

- **Car Not Moving Smoothly:** Ensure the track sections are properly connected and free of

obstructions. Check that the Hot Wheels vehicle being used is compatible and not too wide or heavy for the track.

- **Burger Flipping Mechanism Not Activating:** Verify that the vehicle is passing over the activation point correctly and with sufficient momentum. Ensure no debris is blocking the mechanism.
- **Playset Not Folding/Unfolding Correctly:** Check for any misaligned parts or obstructions preventing the playset from folding or unfolding smoothly. Do not force the components.
- **Connections to Other Tracks Are Loose:** Ensure the track connectors are fully engaged. If connections remain loose, inspect the connector tabs for damage.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.38 x 12 x 7.5 inches
Item Weight	9.8 ounces
Item Model Number	FJN39
Manufacturer Recommended Age	4 - 8 years
Manufacturer	Mattel

WARRANTY AND SUPPORT

Specific warranty information for the Hot Wheels Dine & Dash Playset (Model FJN39) was not provided in the product data. For details regarding warranty coverage, product support, or replacement parts, please contact Mattel customer service directly. You can typically find contact information on the product packaging or the official Mattel website.

PRODUCT VIDEOS

No official product videos from the seller were available in the provided data for embedding. Please refer to the images and instructions above for guidance on product setup and operation.