

[Manuals.plus](#) /

> [STAR WARS](#) /

> STAR WARS Disney Darth Vader Lightsaber Instruction Manual Model 461712662540

STAR WARS 461712662540

STAR WARS Disney Darth Vader Lightsaber

MODEL: 461712662540

Introduction

This instruction manual provides essential information for the safe and proper use of your STAR WARS Disney Darth Vader Lightsaber. This lightsaber is designed to replicate the iconic weapon, featuring a bright red blade, power-activation humming sounds, motion-sensor sounds, battle-clash rumble, and dueling effects. Please read this manual thoroughly before operating the product.

Safety Information

- Read all instructions before initial use and retain for future reference.
- This product is not suitable for children under 3 years due to small parts which may present a choking hazard.
- Adult supervision is recommended during play.
- Do not aim the lightsaber at eyes or face.
- **Battery Safety:**
 - Use only the specified battery type (3 x AAA).
 - Do not mix old and new batteries, or different types of batteries.
 - Insert batteries with correct polarity (+ and -).
 - Remove exhausted batteries promptly.
 - Remove batteries if the product is to be stored for an extended period.
 - Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are only to be charged under adult supervision.

Package Contents

- 1 x STAR WARS Disney Darth Vader Lightsaber

Setup: Battery Installation

The lightsaber requires 3 AAA batteries (not included) for operation.

1. Locate the battery compartment on the hilt of the lightsaber. This is typically secured with a small screw.
2. Using a small Phillips head screwdriver, carefully loosen the screw and open the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover and tighten the screw to secure it. Do not overtighten.



This image displays the complete STAR WARS Disney Darth Vader Lightsaber, featuring its black hilt with detailed grips and a glowing red blade extending upwards. The power button and other controls are located on the hilt, where the battery compartment is also found.

Operating Instructions

Your Darth Vader Lightsaber features an On/Off switch and a power activation button to control its light and sound effects.

1. **Power On/Off:** Locate the main On/Off switch on the hilt. Slide it to the 'ON' position to enable the lightsaber's functions. Slide to 'OFF' to conserve battery life when not in use.
2. **Activate Lights and Sounds:** With the main switch in the 'ON' position, press the activation button on

the hilt. The red blade will illuminate with a progressive light-up effect, accompanied by a power-activation humming sound.

3. **Motion-Sensor Sounds:** Move the lightsaber through the air to hear realistic motion-sensor sounds.
4. **Battle-Clash Rumble and Dueling Effects:** Gently tap the lightsaber blade against another object or another lightsaber to trigger battle-clash rumble and dueling sound effects. The blade lights may flicker during these effects.
5. **Test Mode:** Some models may feature a 'Test' position on the main switch. In this mode, the lightsaber will cycle through its light and sound sequences for a few seconds and then automatically turn off. This is for demonstration purposes.

Maintenance

- **Cleaning:** Wipe the lightsaber with a clean, dry, soft cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the lightsaber in a cool, dry place away from direct sunlight. If the product will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Impact:** While designed for play, excessive force or impact can damage the internal components or the blade.

Troubleshooting

Problem	Possible Cause	Solution
No power, lights, or sound.	Batteries are dead, incorrectly installed, or missing.	Check battery compartment. Ensure 3 AAA batteries are installed with correct polarity. Replace with fresh batteries if needed. Ensure On/Off switch is in 'ON' position.
Lights or sounds are intermittent or weak.	Low battery power or loose battery connection.	Replace batteries with fresh ones. Ensure batteries are securely seated in the compartment.
Blade does not light up fully or has dark spots.	Internal LED malfunction.	This may indicate an internal component issue. If the product is new and within the return period, contact the retailer for exchange or refund. Otherwise, contact the manufacturer for support.

Specifications

- **Brand:** STAR WARS
- **Model Number:** 461712662540
- **Material:** Plastic
- **Power Source:** Battery powered
- **Batteries Required:** 3 x AAA (not included)
- **Item Dimensions:** Approximately 15 x 4.95 x 2.4 inches (Hilt length x Width x Depth)
- **Item Weight:** Approximately 1 Pound

- **Color:** Red blade, black hilt
- **Manufacturer Minimum Age:** 48 months (4 years)
- **Manufacturer:** Disney

Warranty and Support

This product is covered by the standard warranty provided by the retailer or manufacturer. For specific warranty details, return policies, or technical support, please refer to your purchase documentation or contact the retailer where the product was purchased. You may also visit the official Disney or STAR WARS website for further support information.