

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Barbie](#) /
- › [Barbie DreamHorse & Black Hair Doll \(Model FDB40\) Instruction Manual](#)

### Barbie FDB40

# Barbie DreamHorse & Black Hair Doll (Model FDB40) Instruction Manual

## INTRODUCTION

Welcome to the world of Barbie DreamHorse! This interactive horse and doll set provides an engaging play experience with realistic reactions to touch and sound. The DreamHorse can walk, turn, neigh, feed, nuzzle, and even respond to questions with a nod. Get ready for imaginative adventures with Barbie and her loyal companion.



The Barbie DreamHorse and Black Hair Doll set, ready for play.

## WHAT'S IN THE BOX

Your Barbie DreamHorse set includes the following items:

- One Barbie doll, dressed in a riding tunic, molded pants, removable boots, and a helmet.
- One interactive DreamHorse, featuring a pink saddle and reins.
- One bunch of carrots accessory for feeding.
- One brush for grooming the horse's mane and tail.



The product packaging displaying the Barbie DreamHorse and Black Hair Doll.

## SETUP

1. **Install Batteries:** The DreamHorse requires 3 AA batteries (not included). Locate the battery compartment, typically on the horse's underside, and insert the batteries according to the polarity indicators.
2. **Prepare Barbie Doll:** Ensure Barbie is wearing her riding outfit, including the helmet and boots.
3. **Place Barbie on Horse:** Use the included waist clip to securely attach Barbie doll to the saddle. This allows her to ride along with the DreamHorse during movement.



Barbie doll securely placed on the DreamHorse's saddle, ready for riding.

## OPERATING INSTRUCTIONS

The Barbie DreamHorse offers over 30 realistic reactions to touch and sound, providing a dynamic play experience.

### Interactive Features:

- **Movement:** The DreamHorse can walk forward and turn 360 degrees. Tap the horse's side to initiate movement.
- **Sound Reactions:** The horse will neigh in response to sounds.
- **Feeding:** Hold the bunch of carrots to the horse's mouth, and it will make eating sounds and nuzzle in response.
- **Answering Questions:** Ask the DreamHorse a question, and it will nod its head yes or no.
- **Music and Dance:** Press the button located on the saddle to activate three different songs and three unique dance routines.



A child gently tapping the Barbie DreamHorse to activate its movements.



A child offering carrots to the Barbie DreamHorse, which responds with eating sounds.

Official product video demonstrating the interactive features of the Barbie DreamHorse, including movement, sounds, and responses to touch.

## MAINTENANCE

To keep your DreamHorse looking its best, use the included brush to groom its super-long, curly mane and tail. Regular brushing helps maintain the hair's quality and prevents tangles.



A child using the provided brush to groom the Barbie DreamHorse's long, blonde mane.

## TROUBLESHOOTING

If your DreamHorse is not performing as expected, consider the following:

- **Battery Check:** Ensure fresh 3 AA batteries are correctly installed.
- **Surface Compatibility:** The DreamHorse may not function optimally on certain floor types, such as thick carpet. For best performance, use on hard, flat surfaces.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	6.5 x 20 x 12.75 inches
Item Weight	3 pounds
Item Model Number	FDB40
Manufacturer Recommended Age	36 months - 7 years
Batteries	3 AA batteries required

Manufacturer	Mattel
Release Date	July 1, 2017

## **WARRANTY AND SUPPORT**

---

For any questions, concerns, or support regarding your Barbie DreamHorse & Black Hair Doll, please refer to the manufacturer's official website or contact their customer service department. Specific warranty information may be included with your product packaging.