

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Philips](#) /

› [Philips Norelco Electric Shaver Series S1570/82 User Manual](#)

Philips S1570/82

Philips Norelco Electric Shaver Series S1570/82 User Manual

Model: S1570/82

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your Philips Norelco Electric Shaver. Failure to follow these safety guidelines may result in injury or damage to the product.

- Always hold the shaver gently to avoid cuts.
- Be careful not to let the cord get in the way while shaving.
- Charge the shaver on a flat, stable surface.
- Do not submerge the shaver in water.
- Always unplug the shaver before cleaning and allow it to dry completely before charging again.

2. PRODUCT OVERVIEW

The Philips Norelco Electric Shaver Series S1570/82 is designed for a comfortable and close shave. It features advanced PowerCut Blades and 4-direction flex heads to adapt to your facial contours.

2.1 Components

- Shaver Body
- Rotary Shaving Heads (3) with PowerCut Blades
- Pop-up Trimmer
- Power Button
- Charging Port
- Protective Cap
- Charger



Figure 1: Shaver head with ComfortCut blades and 4D flex heads.

The shaver features three rotary heads equipped with PowerCut Blades, designed for a smooth and efficient shave. The 4-direction flex heads move independently to follow the curves of your face, ensuring optimal skin contact.

Figure 2: Shaver with pop-up trimmer and battery indicator.

A convenient pop-up trimmer is integrated into the shaver body for precise trimming of sideburns and mustaches. The shaver is rechargeable and can be used corded or cordless.

3. SETUP AND CHARGING

3.1 Initial Charge

Before first use, fully charge the shaver. Connect the charger to the shaver and plug it into a wall outlet. The charging indicator light will illuminate. A full charge takes approximately 8 hours and provides up to 40 minutes of cordless shaving time.

3.2 Corded and Cordless Use

The shaver can be used both corded (while plugged in) and cordless (after charging). For optimal battery life, it is recommended to fully discharge and recharge the battery periodically.

4. OPERATING INSTRUCTIONS

4.1 Shaving

1. Ensure your face is clean and dry for a dry shave, or apply shaving foam/gel for a wet shave.

2. Press the power button to turn on the shaver.
3. Move the shaver in small, circular motions over your skin. Apply gentle pressure.
4. The 4-direction flex heads will adjust to the contours of your face for an efficient shave.
5. For best results, shave against the direction of hair growth.
6. After shaving, press the power button to turn off the shaver.



Figure 3: Proper technique for using the rotary shaver.

4.2 Using the Pop-up Trimmer

1. Slide the trimmer release button (located on the back of the shaver) upwards to activate the pop-up trimmer.
2. Use the trimmer to shape sideburns, mustaches, or to pre-trim longer hairs before shaving.
3. After use, push the trimmer back down until it clicks into place.

5. MAINTENANCE

5.1 Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the shaver and unplug it from the power outlet.

2. Press the release button on the shaver head to open it.
3. Rinse the shaving heads thoroughly under warm running water. You can also rinse the inside of the shaving unit.
4. Shake off excess water and leave the shaver head open to air dry completely before closing it or charging.
5. For a more thorough cleaning, you can remove the individual shaving heads and rinse them separately.

5.2 Replacing Shaving Heads

For continued optimal performance, it is recommended to replace the shaving heads approximately every 12 months. Replacement heads can be purchased from authorized Philips Norelco retailers.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is discharged.	Charge the shaver for at least 8 hours.
Shaver does not provide a close shave.	Shaving heads are worn or dirty.	Clean the shaving heads thoroughly. If performance does not improve, replace the shaving heads.
Shaver pulls hair.	Shaving heads are worn or hair is too long.	Replace shaving heads. Use the pop-up trimmer to pre-trim longer hairs before shaving.
Charging indicator light is not working.	Charger or power outlet issue.	Ensure the charger is properly connected and the outlet is functional. Try a different outlet.

7. SPECIFICATIONS

Feature	Detail
Model Number	S1570/82
Brand	Philips Norelco
Head Type	Rotary, 4-direction flex heads
Blade System	PowerCut Blades, CloseCut blade system
Trimmer	Integrated Pop-up Trimmer
Power Source	Battery Powered (Rechargeable)
Battery Type	Lithium-Ion
Charging Time	Approx. 8 hours for full charge
Cordless Shaving Time	Up to 40 minutes
Blade Material	Stainless Steel
Color	Black

Feature	Detail
UPC	075020054906

8. WARRANTY INFORMATION

This Philips Norelco product is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

For further assistance, product registration, or to purchase replacement parts and accessories, please visit the official Philips Norelco website or contact their customer service department. Contact information can typically be found in the product packaging or on the official brand website.