

Home Accents Holiday 39412

Home Accents Holiday Lighted Inflatable Santa with Present Instruction Manual

Model: 39412

INTRODUCTION

Thank you for choosing the Home Accents Holiday Lighted Inflatable Santa with Present. This product is designed to bring festive cheer to your outdoor space. This manual provides essential information for the safe and proper setup, operation, and maintenance of your inflatable decoration. Please read all instructions carefully before assembly and use.

SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Always anchor the inflatable securely to prevent movement, especially in high winds. Use all provided stakes and tethers.
- Ensure proper ventilation around the built-in fan during operation. Do not block air intake or exhaust.
- Do not operate the inflatable if the cord, plug, or fan is damaged.
- Keep away from open flames, heaters, and other heat sources.
- Do not allow children to play with the inflatable or its components.
- Unplug the inflatable from the electrical outlet when not in use or during severe weather conditions.
- Use only with a 110-volt electrical outlet.
- This product is intended for temporary outdoor use during the holiday season.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Lighted Inflatable Santa with Present
- 1 x Heavy-Duty Built-in Fan (pre-installed)

- Yard Stakes
- Tether Ropes

SETUP INSTRUCTIONS

Follow these steps to set up your inflatable Santa:

1. **Choose a Location:** Select a flat, clear area in your yard, away from obstructions, sharp objects, and excessive foot traffic. Ensure the location is within reach of a standard 110-volt electrical outlet.
2. **Unpack the Inflatable:** Carefully remove the inflatable Santa from its packaging. Lay it flat on the ground, ensuring the fabric is spread out and not tangled.
3. **Position the Inflatable:** Place the inflatable in your desired display location. Ensure the fan intake is clear of debris and facing away from any potential blockages.
4. **Secure with Stakes and Tethers:**



Image: The Lighted Inflatable Santa with Present displayed in a snowy outdoor setting, anchored to the ground. Use the provided yard stakes to secure the base of the inflatable to the ground. Attach the tether ropes to the designated loops on the inflatable and secure the other end of the ropes to additional stakes driven into the ground at an angle. Adjust the ropes to ensure stability.

5. **Plug In:** Once the inflatable is securely anchored, plug the 5.5 ft. power cord into a standard 110-volt electrical outlet. The built-in fan will immediately begin to inflate the Santa.

6. **Adjust and Display:** As the inflatable fills with air, gently adjust its position to ensure it stands upright and is fully expanded. The internal lights will illuminate for nighttime display.

OPERATING INSTRUCTIONS

Operating your Lighted Inflatable Santa is straightforward:

- **Inflation:** The inflatable will automatically inflate when plugged into a power source. Ensure the fan is running continuously for the Santa to remain inflated.
- **Lighting:** Internal lights are pre-installed and will illuminate automatically when the unit is powered, providing a glowing nighttime display.



Image: The Lighted Inflatable Santa with Present shown against a dark background, highlighting its internal illumination.

- **Deflation:** To deflate, simply unplug the power cord from the electrical outlet. The inflatable will slowly deflate. For storage, gently press out any remaining air and fold neatly.

MAINTENANCE

Proper care will extend the life of your inflatable decoration:

- **Cleaning:** If the inflatable becomes dirty, wipe it gently with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.

- **Storage:** When not in use, unplug and allow the inflatable to fully deflate. Fold it neatly and store it in its original packaging or a suitable storage container in a cool, dry place, away from direct sunlight and pests.
- **Inspection:** Periodically inspect the power cord, plug, fan, and fabric for any signs of damage or wear. Do not use if damaged.

TROUBLESHOOTING

If you encounter issues with your inflatable Santa, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Inflatable does not inflate or inflates slowly.	<ul style="list-style-type: none"> • Not plugged in or power outlet is not working. • Fan intake/exhaust is blocked. • Zipper or opening is not fully closed. • Fan is damaged. 	<ul style="list-style-type: none"> • Ensure the power cord is securely plugged into a working 110-volt outlet. Test the outlet with another device. • Check that the fan intake and exhaust are clear of fabric, leaves, or other debris. • Verify that all zippers or openings on the inflatable are completely closed. • If the fan is damaged, discontinue use and contact customer support.
Lights are not working.	<ul style="list-style-type: none"> • Power issue. • Damaged internal lights. 	<ul style="list-style-type: none"> • Ensure the inflatable is powered on and the fan is running. • If individual lights are out, they may be damaged. The entire unit may need replacement if multiple lights fail.
Inflatable falls over or is unstable.	<ul style="list-style-type: none"> • Insufficient anchoring. • High winds. 	<ul style="list-style-type: none"> • Ensure all provided stakes and tether ropes are used and securely fastened. • Reposition stakes and ropes for better stability. • In severe weather conditions, deflate and store the inflatable to prevent damage.

SPECIFICATIONS

Detailed information about your Home Accents Holiday Lighted Inflatable Santa with Present:

- **Brand:** Home Accents Holiday
- **Model Number:** 39412
- **UPC:** 086786394120
- **Inflated Dimensions (Approximate):** 77.95 inches (6.5 ft) H x 42.52 inches (3.5 ft) W x 33.47 inches D
- **Material:** Polyvinyl Chloride (PVC)
- **Light Color:** Warm White

- **Power Cord Length:** 5.5 ft.
- **Power Source:** 110-volt electrical outlet
- **Item Weight:** 4.44 pounds
- **Special Feature:** Lighted, Self-inflating
- **Manufacturer:** Home Accents Holiday



Image: A full front view of the Lighted Inflatable Santa with Present, showing Santa waving and holding a blue gift.