

[Manuals.plus](#) /

› [Kärcher](#) /

› Kärcher FC Floor Cleaner Microfiber Multi-Surface Replacement Roller User Manual

Kärcher 20550070

Kärcher FC Floor Cleaner Microfiber Multi-Surface Replacement Roller User Manual

Model: 20550070

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Kärcher FC Floor Cleaner Microfiber Multi-Surface Replacement Rollers. These rollers are designed to effectively clean various hard floor surfaces when used with compatible Kärcher FC Hard Floor Cleaners.

The Kärcher FC Floor Cleaner Microfiber Multi-Surface Replacement Rollers are a 2-pack set of grey microfiber rollers. They are specifically engineered to deliver gentle yet effective cleaning and care for a wide range of hard floors.

COMPATIBILITY

These replacement rollers are compatible with the following Kärcher FC Hard Floor Cleaner models:

- Kärcher FC 3 Cordless
- Kärcher FC 5
- Kärcher FC 5 Cordless
- Kärcher FC 7 Cordless

Ensure your Kärcher FC Hard Floor Cleaner model is listed above for proper fit and function.

SETUP AND INSTALLATION

Follow these steps to properly attach the replacement rollers to your Kärcher FC Floor Cleaner:

1. **Preparation:** Ensure your Kärcher FC Floor Cleaner is turned off and unplugged (if corded) before attempting to replace the rollers.
2. **Remove Old Rollers:** Gently pull the existing rollers off the cleaner's roller shafts. They are designed for easy removal.
3. **Attach New Rollers:** Align the new microfiber rollers with the roller shafts on your Kärcher FC Floor Cleaner. Push them firmly onto the shafts until they click securely into place. The rollers are designed for easy attachment.
4. **Color-Coding:** Note that the rollers may be color-coded for convenience, ensuring correct placement if applicable to your specific cleaner model.



Image: Two Kärcher microfiber rollers, showing their distinct green and blue end caps, indicating they are ready for installation onto the floor cleaner.

OPERATING INSTRUCTIONS

These microfiber rollers are designed for effective cleaning on a variety of hard floor surfaces. Always refer to your Kärcher FC Floor Cleaner's main instruction manual for detailed operating procedures.

Suitable Floor Types:

- Tile
- Stone
- Sealed Wood
- Oiled/Waxed Wood
- PVC
- Laminate Flooring

The 100% microfiber composition ensures gentle cleaning and care, preventing damage to sensitive floor surfaces while effectively removing dirt.



Image: A single Kärcher microfiber roller, highlighting its grey end cap and the textured, absorbent microfiber material designed for multi-surface cleaning.

MAINTENANCE AND CLEANING

Regular cleaning of your microfiber rollers is crucial for maintaining optimal cleaning performance and hygiene.

Cleaning the Rollers:

- The rollers are lint-free, highly absorbing, and sturdy, designed for repeated use.
- For hygienic cleaning, the rollers can be machine washed.
- **Machine Wash:** Wash the rollers in a washing machine at temperatures up to 140 degrees Fahrenheit (60 degrees Celsius).
- **Drying:** Allow the rollers to air dry completely before reattaching them to the cleaner or storing them.

Proper care ensures the longevity and effectiveness of your Kärcher replacement rollers.

SPECIFICATIONS

Product Specifications

Feature	Detail
Product Dimensions	11.8 x 2.4 x 2.4 inches
Item Weight	5.6 ounces
Manufacturer	Kärcher
Item Model Number	20550070
Material	Microfiber (100%)
Number of Pieces	2

Feature	Detail
Care Instructions	Machine / hand wash (up to 140°F / 60°C)
Specific Uses	Hard floor surface cleaning

TROUBLESHOOTING

If you encounter issues with the performance of your Kärcher FC Floor Cleaner after installing new rollers, consider the following:

- **Improper Installation:** Ensure the rollers are securely attached and fully seated on the shafts. Re-install if necessary.
- **Roller Condition:** Check if the rollers are clean and free from debris or excessive wear. Clean them as per the maintenance instructions.
- **Compatibility:** Verify that these rollers are indeed compatible with your specific Kärcher FC Floor Cleaner model.

For issues related to the Kärcher FC Floor Cleaner itself, please refer to the main instruction manual provided with your cleaner or contact Kärcher customer support.

WARRANTY AND SUPPORT

These Kärcher replacement rollers are genuine Kärcher accessories, ensuring quality and compatibility. For information regarding product warranty, please refer to the warranty documentation included with your original Kärcher FC Floor Cleaner or visit the official Kärcher website.

For further assistance, technical support, or to purchase additional accessories, please visit the [Kärcher Store on Amazon](#) or the official Kärcher customer support channels.

© 2025 Kärcher. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01N2WLZ24>

More documents and user manuals: <https://manuals.plus/>