

Ridgeway QS-806

Ridgeway QS-806 Portable Bluetooth Speaker

USER MANUAL

Product Overview

The Ridgeway QS-806 is a versatile portable Bluetooth speaker designed for powerful audio output and convenient mobility. It features an 8-inch woofer with dynamic LED lighting that synchronizes with music, offering an immersive audio-visual experience. Equipped with multiple connectivity options including Bluetooth, USB, SD card, FM radio, and AUX input, it ensures compatibility with various devices. The speaker also includes a microphone input for announcements and karaoke, making it suitable for various events. Its long-lasting rechargeable battery provides up to 7 hours of music playback, and the integrated telescopic handle and wheels allow for easy transport.



Image: The Ridgeway QS-806 portable Bluetooth speaker, black in color, with an illuminated LED woofer displaying blue and white light. A wired microphone is shown next to the speaker. The speaker features a top handle and a mesh grille covering the woofer.

Package Contents

- 1 x Ridgeway QS-806 Portable Bluetooth Speaker (8-inch plastic speaker)
- 1 x Microphone
- 1 x Remote Control
- 1 x User Manual (this document)
- Cables (Power cable, etc.)

Setup

1. **Charging the Speaker:** Before first use, fully charge the speaker's 12V 4.5Ah rechargeable battery. Connect the power cable to the speaker's charging port and plug it into a standard 120V, 50-60Hz power outlet. The charging indicator will show the charging status.
2. **Powering On/Off:** Locate the power switch, usually on the back or side panel. Flip it to the 'ON' position to power on the speaker. Flip it to 'OFF' to power off.

- 3. Connecting Microphone:** Insert the microphone cable into the designated 'MIC IN' port on the speaker.
- 4. Connecting AUX Devices:** For wired audio input, connect an audio cable (not always included) from your device's headphone jack to the 'AUX IN' port on the speaker.

Operating Instructions

- Bluetooth Pairing:**
 - Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED or an audible prompt.
 - Enable Bluetooth on your smartphone, tablet, or computer.
 - Search for available devices and select "QS-806" (or similar name) from the list.
 - Once paired, the speaker will confirm the connection, and you can start streaming music wirelessly.
- USB/SD Card Playback:**
 - Insert a USB flash drive or SD card (with compatible audio files) into the respective slot.
 - The speaker should automatically detect the media and begin playback. Use the control buttons on the speaker or remote control to navigate tracks and adjust volume.
- FM Radio:**
 - Press the 'Mode' button on the speaker or remote control until 'FM Radio' mode is selected.
 - Use the scan button to automatically search and save available radio stations.
 - Use the previous/next buttons to switch between saved stations.
- AUX In Mode:**
 - Connect your external audio device to the 'AUX IN' port using an audio cable.
 - Press the 'Mode' button until 'AUX' mode is selected. Audio will now play through the speaker from your connected device.
- Microphone Usage:**
 - Ensure the microphone is connected to the 'MIC IN' port.
 - Adjust the microphone volume knob (if available) on the speaker's control panel.
 - Speak or sing into the microphone.
- LED Light Control:** The speaker features an integrated LED light that moves with the music. Specific controls for the LED light may be available on the speaker's control panel or remote control.

Maintenance

- Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not in use for extended periods.
- Water Exposure:** This speaker is not waterproof. Avoid exposing it to water or high humidity.

Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted; Power cable not connected properly.	Charge the speaker; Ensure power cable is securely connected.
No sound from speaker.	Volume is too low; Incorrect mode selected; Device not connected properly.	Increase volume; Press 'Mode' button to select correct input (Bluetooth, USB, AUX, FM); Reconnect device.
Bluetooth connection fails.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in pairing mode; Move device closer to speaker; Turn off other Bluetooth devices.
Microphone not working.	Microphone not connected; Microphone volume too low.	Ensure microphone is securely plugged into 'MIC IN' port; Adjust microphone volume knob.

Specifications

Feature	Specification
Model Number	QS-806
Speaker Type	Woofer
Woofer Diameter	8 inches (20.3 cm)
Max Speaker Output Power	80 Watts
Connectivity Technology	Bluetooth, USB
Wireless Communication Technology	Bluetooth
Compatible Devices	MP3 Player, Laptop, Tablet, Smartphone
Special Features	Bluetooth, LED Light, Microphone Input, FM Radio, AUX In, USB/SD Card Slot, Rechargeable Battery, Telescopic Handle, Wheels
Battery Life	Up to 7 hours (music only)
Battery Type	12V (specific type not detailed, likely lead-acid)
Color	Black
Product Dimensions	40.01 x 27.99 x 24 cm (15.75 x 11.02 x 9.45 inches)
Product Weight	10.7 kg (23.59 lbs)
Controller Type	Remote Control
Mounting Type	Floor Standing
Waterproof	No

Warranty and Support

For warranty information or technical support, please refer to the contact details provided on the product packaging or the official Ridgeway website. Keep your purchase receipt as proof of purchase for any warranty claims.