

Kärcher 2.642-724.0

Kärcher Vario Power Spray Wand Instruction Manual

Replacement Part for K1 & K2 Entry Electric Power Pressure Washers

1. PRODUCT OVERVIEW

The Kärcher Vario Power Spray Wand is an essential replacement part designed to enhance the functionality of your Kärcher K1 and K2 Entry Electric Pressure Washers. This versatile lance allows for seamless transition between a low-pressure detergent jet and a high-pressure jet, offering infinitely adjustable pressure regulation with a simple twist.

It is ideal for a wide range of cleaning tasks around the home and garden, from delicate surfaces to stubborn dirt.



Image: The Kärcher Vario Power Spray Wand, featuring its adjustable nozzle and robust construction.

2. COMPATIBILITY

This Vario Power Spray Wand is **only compatible** with Kärcher K1 and K2 Entry Electric Pressure Washers. Ensure your pressure washer model is one of these series for proper fit and function.

3. KEY FEATURES

- **Infinitely Adjustable Pressure:** Easily switch between low-pressure detergent application and high-pressure cleaning by twisting the lance.
- **Detergent Application:** Capable of applying detergent effectively for thorough cleaning.
- **Multi-Surface Cleaning:** Suitable for a variety of surfaces including concrete, pavement, driveways, patios, decks, sidewalks, RVs, cars, boats, homes, and fencing.
- **Durable Construction:** Designed for longevity and reliable performance.

4. SETUP INSTRUCTIONS

1. **Ensure Power Off:** Before attaching or detaching the spray wand, ensure your Kärcher pressure washer is turned off and disconnected from the power source.
2. **Connect to Spray Gun:** Align the Vario Power Spray Wand with the connection point on your pressure washer's spray gun.
3. **Secure Connection:** Push the wand firmly into the spray gun until it clicks securely into place. A secure connection is crucial to prevent leaks and ensure proper operation.
4. **Check for Leaks:** Once connected, briefly turn on the water supply (without power) to check for any leaks at the connection point.

5. OPERATING INSTRUCTIONS

The Kärcher Vario Power Spray Wand offers simple and intuitive operation for various cleaning needs.

Adjusting Pressure

The pressure level is regulated by **twisting the lance**. Rotate the nozzle end of the wand to cycle through different pressure settings:

- **Low-Pressure Detergent Jet:** Twist the lance to the 'Soft' or detergent setting. This setting is ideal for applying cleaning solutions or for gentle rinsing of delicate surfaces.
- **High-Pressure Jet:** Twist the lance towards the 'Hard' setting for a powerful, concentrated stream. This is suitable for removing stubborn dirt, grime, and tough stains from durable surfaces.

Application Examples



Image: High-pressure cleaning of a stone wall, demonstrating effective dirt removal.



Image: Applying foam to a car, showcasing the low-pressure detergent application capability.

Always test the pressure setting on an inconspicuous area first to ensure it is appropriate for the surface you are cleaning.



Image: A person using a Kärcher pressure washer with the Vario Power Spray Wand to clean outdoor furniture, illustrating its versatility for various tasks.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Vario Power Spray Wand.

- **Rinse After Use:** After each use, especially when using detergents, rinse the wand thoroughly with clean water to remove any chemical residues.
- **Inspect Nozzle:** Periodically check the nozzle for any blockages or debris. Clear any obstructions using a small pin or the nozzle cleaning tool (if provided with your pressure washer).
- **Store Properly:** Store the spray wand in a clean, dry place, away from extreme temperatures. Avoid bending or placing heavy objects on the wand.
- **Check Connections:** Regularly inspect the connection points for wear or damage. Replace if necessary to prevent leaks.

7. TROUBLESHOOTING

Low or No Pressure

- **Check Nozzle Setting:** Ensure the Vario Power Spray Wand is twisted to the appropriate high-pressure setting.
- **Inspect for Blockages:** The nozzle may be clogged. Turn off the pressure washer, disconnect the wand, and clear any debris from the nozzle opening.
- **Water Supply:** Verify that the water supply to your pressure washer is adequate and that the hose is not kinked.

Leaks at Connection

- **Secure Connection:** Ensure the wand is fully and securely inserted into the spray gun until it clicks.
- **Check O-rings/Seals:** Inspect the O-rings or seals on the wand's connection point for wear, damage, or displacement. Replace if necessary.

Wand Does Not Fit

- **Verify Compatibility:** Double-check that your pressure washer is a Kärcher K1 or K2 Entry Electric model. This wand is specifically designed for these series.

8. SPECIFICATIONS

Attribute	Detail
Model Number	2.642-724.0
Material	Wood, Pavement, Concrete <i>(referring to compatible cleaning surfaces)</i>
Item Dimensions (L x W x H)	17.7 x 1.6 x 1.6 inches
Item Weight	4.8 ounces
Exterior Finish	Stainless Steel

Attribute	Detail
Color	Black
Included Components	Vario Power Spray Wand

9. WARRANTY AND SUPPORT

Warranty Information

This Kärcher Vario Power Spray Wand comes with a **1-month warranty** from the date of purchase against defects in materials and workmanship.

Customer Support

For further assistance, technical support, or warranty claims, please visit the official Kärcher website or contact Kärcher customer service directly. Keep your proof of purchase for warranty validation. You can find more information and contact details on the [Kärcher Store on Amazon](#).

© 2025 Kärcher. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question