

PHOLSY S6

PHOLSY S6 Timer Remote Control Instruction Manual

MODEL: S6 FOR SONY CAMERAS

Brand: PHOLSY

Introduction

The PHOLSY S6 Timer Remote Control is a versatile wired remote designed for Sony cameras, offering advanced control over your photography. This multi-function remote provides simple trigger functions, a bulb function, self-timer, interval timer, long exposure timer, and an exposure counter. It is ideal for capturing time-lapse sequences, long exposures, and preventing camera shake during critical shots.



Figure 1: Overview of PHOLSY S6 Timer Remote Control functions.

Product Features

- **Multi-functional Wired Remote:** Integrates self-timer, interval timer, long exposure timer, and shot count settings.
- **Bulb Exposure Support:** Features a long exposure preset function and a shutter lock mechanism for bulb photography.
- **Adjustable Timing:** Settings range from 1 second up to 99 hours, 59 minutes, 59 seconds.
- **Interval Shooting:** Allows precise control over the time between shots, adjustable in 1-second increments up to 100 hours.
- **Shot Count Control:** Capture a specified number of images, from 1 to 399, or set to unlimited (indicated by '--').
- **Remote Shutter Release:** Enables half-press for focus and full-press for shooting without touching the camera, minimizing vibration.
- **Indicator Light:** The indicator flashes when the camera shutter is open.
- **Cable Length:** Equipped with an 85cm cord for flexible positioning.

Package Contents

- PHOLSY S6 Timer Remote Control
- Instruction Manual



Figure 2: PHOLSY S6 Timer Remote Control and included manual.

Setup

1. Battery Installation

The PHOLSY S6 Timer Remote Control requires two AAA batteries (not included). Open the battery compartment cover on the back of the remote, insert the batteries according to the polarity markings, and close the cover securely.

2. Connecting to Camera

Locate the remote control terminal on your Sony camera. Connect the remote control's cable plug firmly into this terminal. Ensure a secure connection for proper operation.

Video 1: Demonstrates connecting the PHOLSY S6 Timer Remote Control to a camera and basic usage of its timer functions.

Operating Instructions

Overview of Controls

Familiarize yourself with the buttons and display panel of the remote control:



Figure 3: Labeled components of the PHOLSY S6 Timer Remote Control.

Shutter Release Button

The main shutter release button operates in two stages:

- **Half-Press:** Press the button halfway down to activate the camera's autofocus and metering.
- **Full-Press:** Press the button completely down to trigger the shutter and take a photo.
- **Bulb Mode (Hold):** For long exposures in Bulb mode, press the shutter button fully and slide it to the 'HOLD' position. This locks the shutter open for the desired duration. Slide it back to release.

Shutter Release Button

Set the camera to single shot mode, continues shot mode, BULB mode



BULB:

Set the camera to BULB mode, press and slide the shutter button to the HOLD position. Slide it back to release the lock.

Continues shooting:

Set the camera to continues shot mode, press and slide the shutter button to the HOLD position. Slide it back to stop.

The shutter release button can be used when no batteries are inserted. The display panel will remain off and no beep will sound.

Figure 4: Shutter Release Button operation for focus, shooting, and Bulb mode.

Timer Functions

The PHOLSY S6 offers several timer functions for precise control:



When capturing the beautiful moments of sunrise and sunset and flowers bloom and fade, you don't need to wait for the whole time. You can set **delay timer**, **exposure time**, **interval time**, and **number of shoots**.

Timer Functions



DELAY

(Self timer)




LONG

(Exposure timer)



INTVL

(Interval timer)

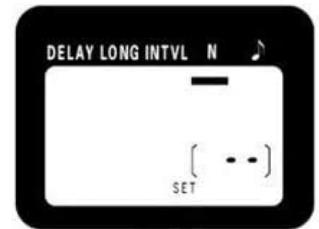

N

(Number of shots)

Figure 5: Timer Functions on the PHOLSY S6 Remote Control.

1. Setting Timer Parameters:

- Press the **SET** button to cycle through the timer parameters: DELAY (self-timer), LONG (exposure time), INTVL (interval time), and N (number of shots).
- Use the **arrow buttons** (up/down) to adjust the values for each parameter.
- The **DELAY** setting determines the time before the first shot is taken.
- The **LONG** setting specifies the duration of the exposure (for Bulb mode).
- The **INTVL** setting defines the time between consecutive shots in a sequence.
- The **N** setting specifies the total number of shots to be taken. Set to '--' for unlimited shots.

2. **Starting the Timer:** Once all parameters are set, press the **TIMER START/STOP** button to begin the timed sequence. The indicator light will illuminate.

3. **Stopping the Timer:** Press the **TIMER START/STOP** button again to stop an ongoing timed sequence.

4. **Speaker On/Off:** Use the designated button to toggle the speaker sound on or off.

Vibration Reduction

Using the PHOLSY S6 Timer Remote Control helps to:

- Release the shutter without direct contact with the camera body.
- Eliminate camera shake caused by pressing the shutter button manually.
- Achieve sharper images, especially in long exposure or macro photography.

Maximum reduces the vibration

Offers the high quality photo

- ✓ Allows the shutter to be released without making direct contact with the camera body.
- ✓ Eliminate your finger's shake while taking photos to get clear image.
- ✓ Very useful in preventing camera shake during shutter release.



Figure 6: Benefit of using a remote control for vibration reduction.

Compatibility

The PHOLSY S6 Timer Remote Control is compatible with the following Sony and Konica Minolta camera models:

- **Sony ILCA:** a77M2, a99M2, a99V
- **Sony SLT:** a33, a35, a37, a55, a57, a65, a67, a77, a99
- **Sony DSLR:** a100, a200, a300, a350, a400, a450, a500, a550, a560, a580, a700, a850, a900
- **Konica Minolta:** DIMAGE A2, A1, 9, 7Hi, 7i, 7, 5, 4, 3, DYNAX 7D, 5D

This remote replaces the Sony RM-L1AM.

Specifications

Brand	PHOLSY
Model Number	LSYYXDSKMS6

Color	Black
Connectivity	Cable
Features	Digital display
Product Dimensions	15.5 x 4 x 1.8 cm
Item Weight	105 g
Battery Required	Yes (AAA batteries, not included)
Compatible Devices	Sony Cameras (specific models listed above)

Troubleshooting

- **Remote not responding:** Ensure batteries are correctly installed and have sufficient charge. Check that the cable is securely connected to both the remote and the camera.
- **Display is off:** If no batteries are inserted, the display will remain off, but the shutter release button may still function as a basic wired remote. Insert fresh batteries for full functionality.
- **Camera not firing:** Verify that your camera is set to a compatible shooting mode (e.g., single shot, continuous, bulb). Check camera settings for remote control compatibility.
- **Incorrect timing:** Double-check all DELAY, LONG, INTVL, and N settings on the remote's display.

Maintenance

- Keep the remote control dry and clean. Avoid exposure to extreme temperatures or humidity.
- Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.
- Handle the cable and connectors with care to prevent damage.

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official PHOLSY website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question