

[Manuals.plus](#) /

> [PBS](#) /

> PBS John Lewis - Get in the Way DVD Instruction Manual


**PBS 43531228**

# PBS John Lewis - Get in the Way DVD Instruction Manual

Model: 43531228

## PRODUCT OVERVIEW

---

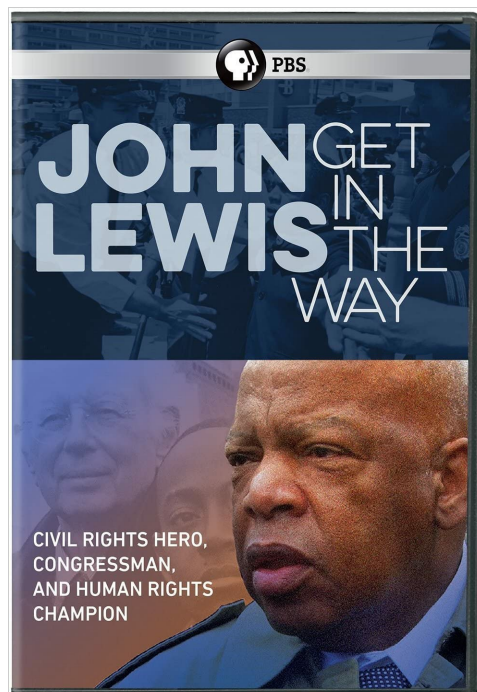

This image displays the DVD cover for "John Lewis - Get in the Way." The cover features a prominent portrait of John Lewis, with the title text "JOHN LEWIS GET IN THE WAY" and the PBS logo. Text at the bottom reads "CIVIL RIGHTS HERO, CONGRESSMAN, AND HUMAN RIGHTS CHAMPION."

The "John Lewis - Get in the Way" DVD presents a one-hour documentary focusing on the life and contributions of Representative John Lewis, a pivotal figure in the American Civil Rights Movement. This documentary highlights his role as a leader of the Student Nonviolent Coordinating Committee (SNCC), an original Freedom Rider, and the youngest speaker at the historic 1963 March on Washington.

## SETUP INSTRUCTIONS

---

1. **Unpack the DVD:** Carefully remove the DVD disc from its packaging. Handle the disc by its edges to avoid fingerprints or scratches on the playing surface.
2. **Insert into DVD Player:** Open the disc tray of your DVD player. Place the DVD disc onto the tray with the label side facing up. Close the disc tray.
3. **Connect DVD Player to TV:** Ensure your DVD player is properly connected to your television or display device. Typically, this involves an HDMI cable, RCA cables (red, white, yellow), or component cables (red, green, blue, red, white). Refer to your DVD player's manual for specific connection instructions.
4. **Select TV Input:** Turn on your television and use its remote control to select the correct input source (e.g., HDMI 1, Video 1, Component) that corresponds to the connection used for your DVD player.
5. **Power On:** Turn on your DVD player. The player should automatically detect the disc and display the DVD menu or begin playback.

## OPERATING INSTRUCTIONS

---

Once the DVD is loaded and the main menu appears on your screen, use your DVD player's remote control to navigate the options.

- **Main Menu Navigation:** Use the arrow keys (Up, Down, Left, Right) on your remote to highlight different options on the DVD menu. Press the "Enter" or "OK" button to select an option.
- **Play Film:** Select "Play Movie" or "Start" from the main menu to begin watching the documentary.
- **Scene Selection:** If available, select "Scene Selection" or "Chapters" to jump to specific parts of the documentary.
- **Audio and Subtitle Options:** Look for "Audio Settings" or "Subtitles" on the menu to adjust language tracks or enable/disable subtitles. This DVD includes English subtitles.
- **Playback Controls:** During playback, use the standard remote controls:
  - **Play/Pause:** To temporarily stop or resume playback.
  - **Stop:** To end playback and return to the menu or stop the disc.
  - **Fast Forward/Rewind:** To quickly move through the content.
  - **Skip:** To jump to the next or previous chapter/scene.

## MAINTENANCE AND CARE

---

Proper care of your DVD will ensure its longevity and optimal playback quality.

- **Cleaning the Disc:** If the disc becomes dirty or has fingerprints, gently wipe the playing surface (the shiny side) with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the DVD in its original case or a protective sleeve when not in use. Keep discs away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Always hold the DVD by its edges or by placing a finger through the center hole to prevent smudges and scratches on the playing surface.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Disc does not play or load.	Disc inserted incorrectly, dirty disc, incompatible region code, or player malfunction.	Ensure disc is inserted label-side up. Clean the disc. Verify your DVD player supports Region 1 (North America) DVDs. Try another DVD to check player functionality.
No audio or video during playback.	Incorrect TV input, loose cables, TV/player volume muted, or incorrect audio settings.	Check TV input selection. Ensure all cables are securely connected. Unmute TV and DVD player volume. Check audio settings on the DVD menu.
Video skips, freezes, or pixelates.	Dirty or scratched disc, or a temporary player reading error.	Clean the disc thoroughly. If scratches are visible, the disc may be damaged. Try pausing and resuming playback, or restarting the DVD player.
Subtitles not appearing.	Subtitles are disabled in the DVD menu or player settings.	Access the DVD's "Subtitle" menu and select "English" or your preferred option. Check your DVD player's settings for subtitle preferences.

If these troubleshooting steps do not resolve the issue, consult your DVD player's instruction manual or contact the manufacturer of your DVD player for further assistance.

## SPECIFICATIONS

---

- **Title:** John Lewis - Get in the Way
- **Brand/Studio:** PBS
- **Model Number:** 43531228
- **ASIN:** B01N3D41CM
- **Media Format:** DVD, NTSC, Widescreen
- **Run Time:** 1 hour
- **Release Date:** April 18, 2017
- **Subtitles:** English
- **Number of Discs:** 1
- **MPAA Rating:** PG (Parental Guidance Suggested)
- **Product Dimensions:** 0.7 x 7.5 x 5.4 inches
- **Item Weight:** 2.72 ounces
- **Genre:** Documentary, Special Interests
- **Language:** English

## WARRANTY AND SUPPORT

---

As a media product, specific warranty information for the "John Lewis - Get in the Way" DVD is typically not provided by the content producer in the same manner as electronic devices. The primary expectation is that the disc functions correctly upon purchase.

If you encounter a defective disc upon initial receipt, please contact the retailer from whom you purchased the DVD for their return or exchange policy. For content-related inquiries or general information about the documentary, you may refer to the official PBS website or contact PBS directly.

This manual does not imply any warranty beyond the standard consumer rights regarding product fitness for purpose.

© 2026 PBS. All rights reserved. This document is for informational purposes only.