

Logilink BP0015

LogiLink BP0015 Full Motion TV Wall Mount Instruction Manual

Model: BP0015

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup & Installation](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and proper installation, operation, and maintenance of your LogiLink BP0015 Full Motion TV Wall Mount. Please read this manual thoroughly before installation and retain it for future reference. This wall mount is designed to securely hold LCD, Plasma, or LED televisions ranging from 32 to 55 inches with a maximum weight capacity of 50 kg (110 lbs).

The full motion design allows for tilt, swivel, and level adjustments, providing optimal viewing angles in various room configurations.

2. SAFETY INFORMATION

WARNING: Failure to read and follow all instructions may result in personal injury, property damage, or voiding of warranty. If you do not understand these instructions or have doubts about the safety of the installation, please contact a qualified installer.

- Do not install this product on a wall that is not structurally sound. Ensure the mounting surface can safely support the combined weight of the equipment and all attached hardware.
- This product is intended for indoor use only.
- Use only the hardware provided by the manufacturer. Using unauthorized hardware may cause damage or lead to product failure.
- Always use two people for installation to prevent injury or damage.
- Ensure all screws are securely tightened but do not overtighten.
- Regularly check the mount for any signs of loosening or damage.
- Keep children and pets away during installation.

3. PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning installation. If any parts are missing or defective, contact your retailer for assistance.

- Wall Plate Assembly
- TV Bracket Arms (2x)
- Mounting Hardware Kit (screws, anchors, washers, spacers)
- Instruction Manual



Image 1: Overview of the LogiLink BP0015 Full Motion TV Wall Mount components. This image displays the main wall plate, the articulating arm, and the TV mounting brackets, all in a black finish.

4. SETUP AND INSTALLATION

4.1 Pre-Installation Checks

- **TV Size and Weight:** Ensure your TV is between 32 and 55 inches and weighs no more than 50 kg (110 lbs).
- **VESA Compatibility:** Check the VESA mounting pattern on the back of your TV. This mount supports VESA patterns: 200x200, 400x200, 300x300, and 400x400 mm.
- **Wall Type:** Determine your wall type (wood stud, concrete, brick). Different wall types require specific anchors and drilling techniques. Consult a professional if unsure.

4.2 Mounting the Wall Plate

- ### 4.3 Attaching TV Brackets to the TV

- #### 4.4 Mounting the TV to the Wall Plate

-
- Technical drawing of the mounting bracket showing dimensions and adjustment ranges:
- Top horizontal dimension: min. 62 – max. 475
 - Left vertical dimension: 204
 - Top-left horizontal dimension: 480
 - Right vertical dimension: 430
 - Inner right vertical dimension: 160
 - Bottom-right vertical dimension: min. 160 – max. 400
 - Bottom horizontal dimension: min. 34 – max. 426
 - Bottom-most horizontal dimension: 480
 - Adjustment ranges:
 - 180° (twice, for horizontal rotation)
 - $-3^\circ +3^\circ$ (for vertical tilt)
 - $+10^\circ -20^\circ$ (for vertical tilt)

5. OPERATION

- **Tilt Adjustment:** The TV can be tilted from -20° to +10°. Loosen the tilt adjustment knobs on the TV brackets, adjust to the desired angle, and then re-tighten the knobs.

- **Swivel Adjustment:** The articulating arm allows for a swivel range of -90° to +90°. Gently push or pull the TV to the desired horizontal viewing angle.
- **Level Adjustment:** A level adjustment of -3° to +3° is available to fine-tune the horizontal alignment of your TV after installation. This can typically be adjusted by loosening specific screws on the TV brackets, leveling the TV, and then re-tightening. Refer to the detailed diagram for specific adjustment points.
- **Distance from Wall:** The mount allows the TV to be positioned between 62 mm and 475 mm from the wall, providing flexibility for various viewing needs and cable management.

6. MAINTENANCE

- **Regular Inspection:** Periodically check all screws and connections to ensure they remain tight and secure.
- **Cleaning:** Clean the mount with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Lubrication:** The articulating joints are designed for smooth movement and generally do not require lubrication. If movement becomes stiff, consult customer support.

7. TROUBLESHOOTING

Problem: TV is not level.

Solution: Use the level adjustment feature (-3° to +3°) to correct the horizontal alignment. Loosen the relevant screws on the TV brackets, adjust the TV, and re-tighten.

Problem: Mount feels loose after installation.

Solution: Immediately remove the TV from the mount. Re-check all wall plate and TV bracket screws to ensure they are securely tightened. Verify the wall structure is adequate. If issues persist, consult a professional installer.

Problem: Difficulty adjusting tilt or swivel.

Solution: For tilt, ensure the tilt adjustment knobs are sufficiently loosened before attempting to adjust. For swivel, ensure no cables are snagged or obstructing movement. Do not force adjustments.

8. SPECIFICATIONS

Model Number	BP0015
Brand	LogiLink
Screen Size Compatibility	32" - 55"
Maximum Load Capacity	50 kg (110 lbs)
VESA Compatibility	200x200, 400x200, 300x300, 400x400 mm
Tilt Angle	-20° / +10°
Swivel Angle	-90° / +90°
Level Adjustment	-3° / +3°
Distance from Wall	62 mm - 475 mm

Color

Black

Voll beweglich / Full motion

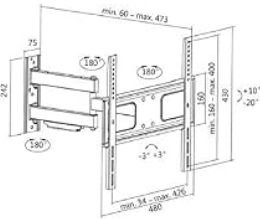 
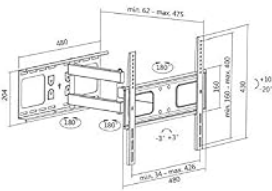 
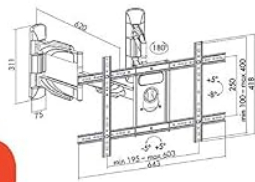 
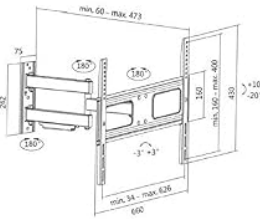 
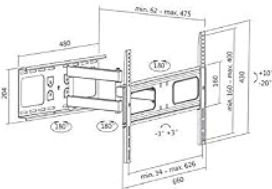 
Art.-Nr. Part no.	Passend für Suitable for	Funktion Function	VESA VESA	Abstand zur Wand (mm) Distance to the wall (mm)
 BP0014	32" – 55" Max. 50 kg/ 110 lbs	Neigung: -20° / +10° Schwenkung: -90° / +90° PegelEinstellung: -3° / +3° Tilt: -20° / +10° Swivel: -90° / +90° Level adjustment: -3° / +3°	200x200, 400x200, 300x300, 400x400	60-473 
 BP0015	32" – 55" Max. 50 kg/ 110 lbs	Neigung: -20° / +10° Schwenkung: -90° / +90° PegelEinstellung: -3° / +3° Tilt: -20° / +10° Swivel: -90° / +90° Level adjustment: -3° / +3°	200x200, 400x200, 300x300, 400x400	62-475 
 BP0047	37" – 70" Max. 45 kg/ 99 lbs	Neigung: -8° / +5° Schwenkung: -90° / +90° PegelEinstellung: -5° / +5° Tilt: -8° / +5° Swivel: -90° / +90° Level adjustment: -3° / +5°	200x200, 300x200, 300x300, 400x200, 400x300, 400x400, 600x400	Max. 620 Perfekt für Ecken Ideal for corners 
 BP0019	37" – 70" Max. 50 kg/ 110 lbs	Neigung: -20° / +10° Schwenkung: -90° / +90° PegelEinstellung: -3° / +3° Tilt: -20° / +10° Swivel: -90° / +90° Level adjustment: -3° / +3°	200x200, 400x200, 300x300, 400x400, 600x400	60-473 
 BP0028	37" – 70" Max. 50 kg/ 110 lbs	Neigung: -20° / +10° Schwenkung: -90° / +90° PegelEinstellung: -3° / +3° Tilt: -20° / +10° Swivel: -90° / +90° Level adjustment: -3° / +3°	200x200, 400x200, 300x300, 400x400, 600x400	62-475 



Image 3: A chart detailing VESA compatibility and other specifications for various LogiLink wall mount models, including BP0015. This helps users confirm their TV's compatibility.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official LogiLink website. Keep your proof of purchase for warranty claims.
Manufacturer: 2direct GmbH

© 2023 LogiLink. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question