



Manuals.plus /

- › Acorn /
- › LEVEL: SERIES 1 DVD User Manual

Acorn 43448694

LEVEL: SERIES 1 DVD User Manual

Model: 43448694

Brand: Acorn

PRODUCT OVERVIEW

LEVEL: SERIES 1 is a gripping crime thriller television series presented on DVD. This manual provides essential information for the proper use and care of your DVD set.

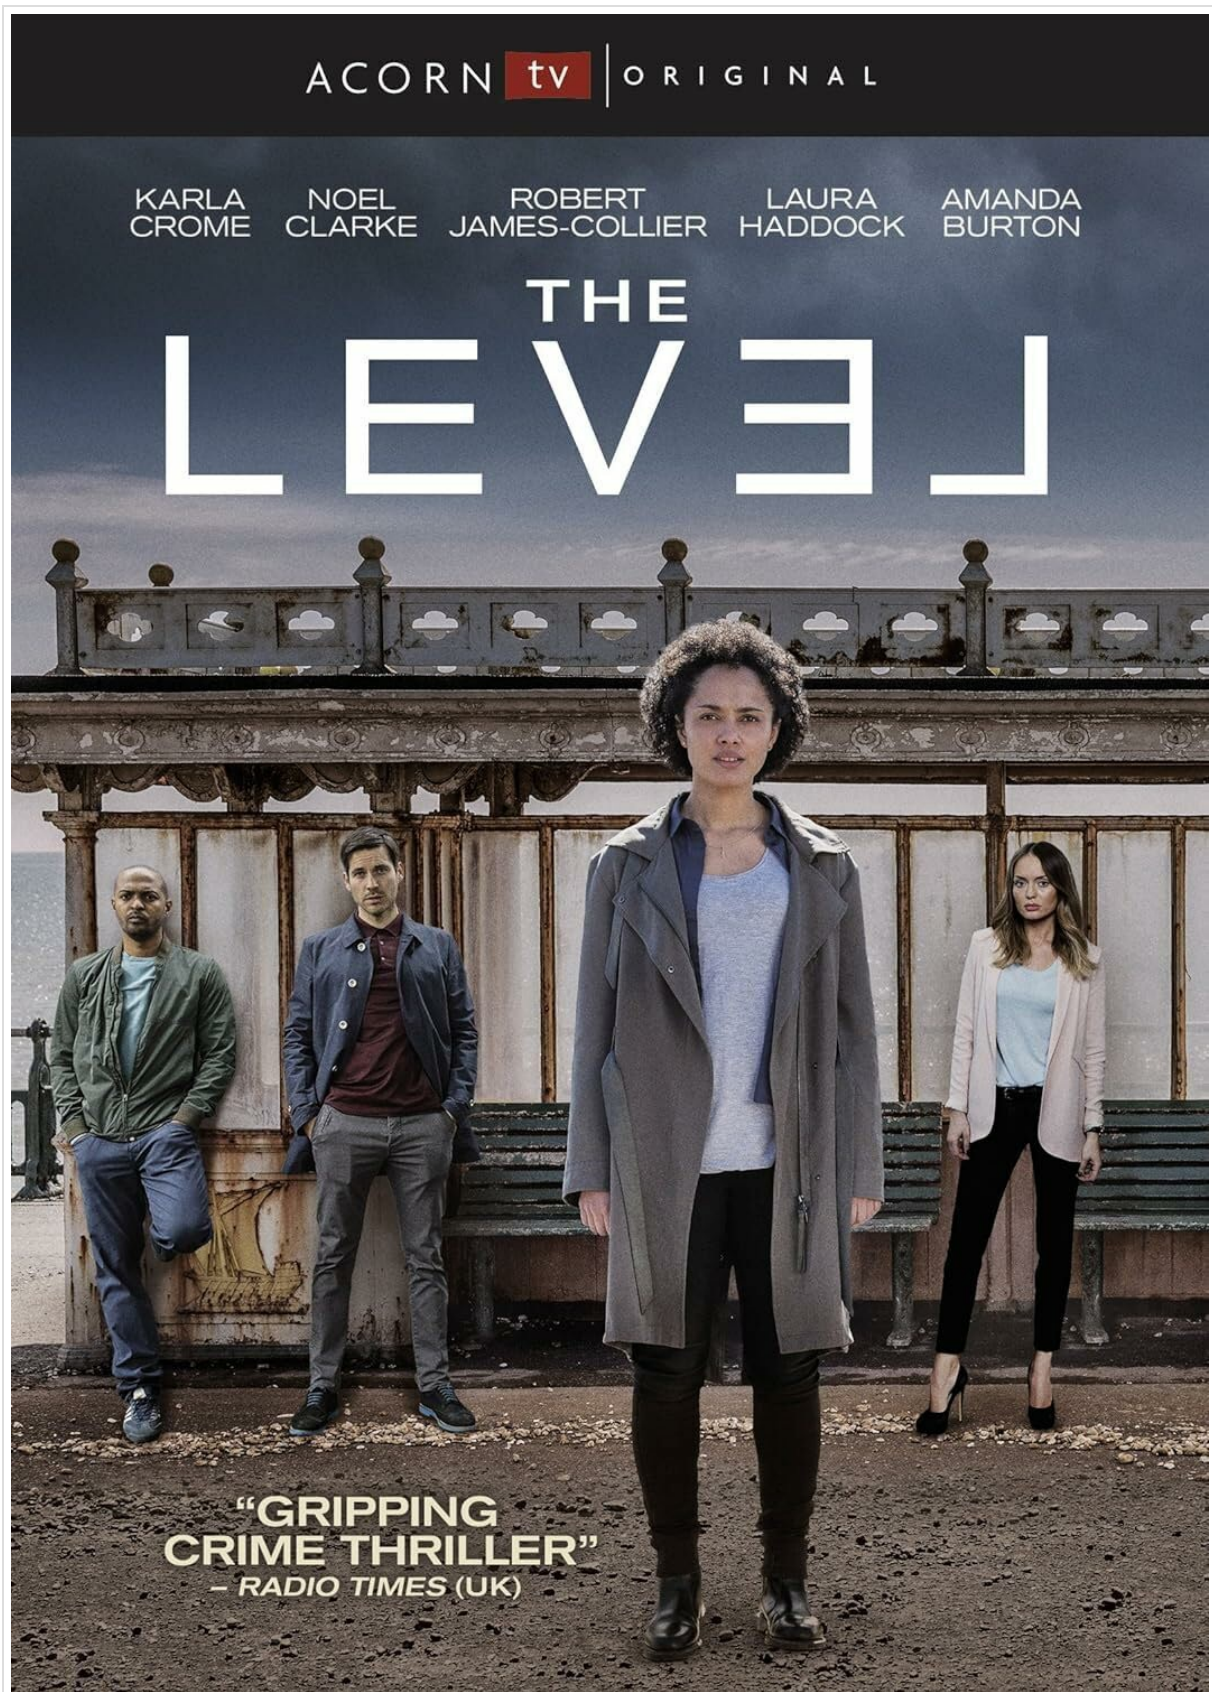


Figure 1: Front cover of the LEVEL: SERIES 1 DVD. The image displays the main cast members, including Karla Crome as Detective Sergeant Nancy Devlin, Noel Clarke as DS Gunner Martin, Robert James-Collier, Laura Haddock, and Amanda Burton. The title "THE LEVEL" is prominently featured in large white letters. The background depicts a coastal setting with a weathered structure, possibly a pier or shelter, and the sea in the distance. The top of the cover includes the "ACORN tv ORIGINAL" logo. Below the main image, a quote reads: "GRIPPING CRIME THRILLER" - RADIO TIMES (UK).

SETUP

To begin watching LEVEL: SERIES 1, follow these steps:

1. **Unpack the DVD set:** Carefully remove the DVD discs from their packaging. Ensure all discs (2 discs) are present and free from visible damage.
2. **Prepare your DVD player:** Ensure your DVD player is connected to your television or display device and is powered on.
3. **Insert Disc 1:** Open the disc tray of your DVD player and carefully place Disc 1 into the tray with the label side facing up. Close the disc tray.
4. **Select input:** On your television, select the correct input source (e.g., HDMI 1, AV) that corresponds to your DVD player connection.

OPERATING INSTRUCTIONS

Navigate the DVD menu and playback features:

- **Main Menu:** Upon inserting the disc, the DVD player should automatically display the main menu. Use your DVD player's remote control to navigate.
- **Play Episode:** Select "Play" or choose a specific episode from the episode list.
- **Scene Selection:** If available, use the "Scene Selection" option to jump to specific scenes within an episode.
- **Audio/Subtitles:** Access the "Audio" or "Subtitles" menu to select language options. This DVD supports English audio and English subtitles.
- **Playback Controls:** Use standard remote controls for playback (Play, Pause, Stop, Fast Forward, Rewind, Skip Chapter).
- **Disc Swapping:** When prompted, remove the current disc and insert the next disc (Disc 2) to continue watching the series.

MAINTENANCE AND CARE

Proper care ensures the longevity and optimal performance of your LEVEL: SERIES 1 DVD set:

- **Handling Discs:** Always hold discs by their edges or by placing a finger through the center hole. Avoid touching the playback surface.
- **Cleaning Discs:** If a disc becomes dirty, gently wipe it with a soft, lint-free cloth from the center outwards. Do not use abrasive materials or harsh chemicals.
- **Storage:** Store discs in their original case, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Prevent scratches by returning discs to their case immediately after use.

TROUBLESHOOTING

Common issues and their solutions:

Problem	Possible Cause	Solution
Disc does not play or skips.	Dirty or scratched disc; incorrect disc insertion; DVD player issue.	Clean the disc gently. Ensure the disc is inserted correctly. Try the disc in another DVD player to rule out player issues.
No audio.	TV/player volume too low; incorrect audio settings; faulty cables.	Increase volume. Check audio settings on DVD player and TV. Ensure audio cables are securely connected.
No picture.	Incorrect TV input; loose video cables; TV/player power off.	Select correct TV input. Check video cable connections. Ensure both TV and DVD player are powered on.

SPECIFICATIONS

Title: LEVEL: SERIES 1

Format: DVD

Media Format: NTSC, Widescreen

Run Time: 4 hours and 48 minutes

Number of Discs: 2

Language: English

Subtitles: English

Release Date: February 21, 2017

Studio: Acorn

Item Model Number: 43448694

Product Dimensions: 0.7 x 7.5 x 5.4 inches

Weight: 5.12 ounces

ASIN: B01N3RRGDF

MPAA Rating: NR (Not Rated)

Genre: Mystery & Suspense/British Mystery Theater, Television/Crime

WARRANTY AND SUPPORT

For issues beyond basic troubleshooting or for information regarding product warranty, please contact the distributor or retailer from whom you purchased the LEVEL: SERIES 1 DVD set. Refer to your purchase receipt for specific warranty terms and contact details.

Distributor: Acorn

For general inquiries about Acorn products, visit their official website or contact their customer support channels.