

[Manuals.plus](#) /

› [ClimaTek](#) /

› DE64-00760A Microwave Door Latch Key/Lock Hook Instruction Manual

ClimaTek DE64-00760A

Microwave Door Latch Key/Lock Hook Instruction Manual

Model: DE64-00760A

Brand: ClimaTek

INTRODUCTION

This manual provides essential information for the installation, maintenance, and troubleshooting of the DE64-00760A Microwave Door Latch Key/Lock Hook. This component is designed to ensure the proper and secure closure of your microwave door, which is crucial for safe operation and efficient cooking.

SAFETY INFORMATION

- Always disconnect the microwave oven from the power supply before attempting any installation, repair, or maintenance.
- If you are unsure about any step, consult a qualified appliance technician.
- Wear appropriate personal protective equipment, such as gloves, to prevent injury.
- Ensure all components are correctly installed and secured before restoring power to the appliance.

PRODUCT OVERVIEW

The DE64-00760A is a replacement door latch key/lock hook specifically designed for Inglis microwave ovens. It is a critical part of the microwave's door mechanism, ensuring the door remains securely closed during operation and preventing microwave energy leakage.



Image: The DE64-00760A Microwave Door Latch Key/Lock Hook. This black plastic component features a long central bar with two hook-like protrusions at each end, designed to engage with the microwave's door frame and latch mechanism.

INSTALLATION INSTRUCTIONS

Follow these steps carefully to replace the microwave door latch key/lock hook:

1. **Disconnect Power:** Unplug the microwave oven from the electrical outlet to prevent electric shock.
2. **Access the Door Panel:** Depending on your microwave model, you may need to remove screws from the inner door panel or the outer casing to access the latch mechanism. Refer to your specific microwave's service manual if available.
3. **Locate the Old Latch:** Identify the broken or worn-out door latch key/lock hook. Note its orientation and how it connects to the door assembly.
4. **Remove the Old Latch:** Carefully detach the old latch. This may involve releasing clips or removing small screws.
5. **Install the New Latch:** Position the new DE64-00760A latch in the exact same orientation as the old one. Ensure it snaps securely into place or is fastened with any necessary screws.
6. **Reassemble:** Reattach any panels or casings that were removed. Ensure all screws are tightened and the door operates smoothly.
7. **Test Functionality:** Plug the microwave back into the power outlet. Open and close the door several times to ensure the latch engages properly. Perform a test run (e.g., heating a cup of water) to confirm safe operation and proper door closure.

FUNCTIONALITY (OPERATING)

Once correctly installed, the DE64-00760A door latch key/lock hook ensures the microwave door is securely closed. This is vital for the microwave to operate, as safety interlocks prevent the magnetron from activating if the door is not fully latched. When the door is closed, the hook engages with the internal switch mechanism, allowing the microwave to power on and begin the cooking cycle.

MAINTENANCE

The DE64-00760A is a durable component, but regular inspection can prolong its life and ensure safe operation:

- **Regular Cleaning:** Keep the door latch area clean from food debris and grease, which can impede its movement. Use a soft, damp cloth.
- **Visual Inspection:** Periodically check the latch for any signs of wear, cracks, or damage. If the door feels loose or does not close securely, inspect the latch.
- **Avoid Forceful Closing:** Do not slam the microwave door, as this can put undue stress on the latch and other door components, leading to premature failure.

TROUBLESHOOTING

If you experience issues related to the microwave door or operation, consider the following:

Problem	Possible Cause	Solution
Microwave does not start when door is closed.	Door latch not engaging fully with safety switches.	Inspect the DE64-00760A latch for damage or misalignment. Ensure it is properly installed. Check door alignment.
Door feels loose or does not stay closed.	Worn, broken, or misaligned door latch hook.	Replace the DE64-00760A latch if it shows signs of damage or wear.
Door requires excessive force to close.	Misalignment of the latch or door, or debris obstructing the mechanism.	Clean the latch area. Check for proper alignment of the door and latch. If necessary, replace the latch.

SPECIFICATIONS

- **Part Number:** DE64-00760A
- **Type:** Microwave Door Latch Key/Lock Hook
- **Compatibility:** Fits Inglis microwave models (verify with your specific model).
- **Material:** Durable plastic.
- **Manufacturer:** Inglis (as per product data, though brand is ClimaTek, implying it's a compatible part for Inglis).
- **First Available:** November 10, 2016

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your DE64-00760A Microwave Door Latch Key/Lock Hook, please refer to the documentation provided by your retailer or contact the manufacturer, ClimaTek, directly. Keep your purchase receipt as proof of purchase.

For additional assistance, you may visit the [ClimaTek Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01N3UI0I1>

More documents and user manuals: <https://manuals.plus/>