

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar 30IMW Plant Milk Machine Instruction Manual

Aigostar 30IMW

Aigostar 30IMW Plant Milk Machine

Model: 30IMW

INTRODUCTION

Thank you for choosing the Aigostar 30IMW Plant Milk Machine. This versatile appliance is designed to help you prepare a variety of healthy beverages and dishes, including plant-based milks, soups, smoothies, and jams. Please read this manual carefully before first use to ensure safe and optimal operation.

E-recipe

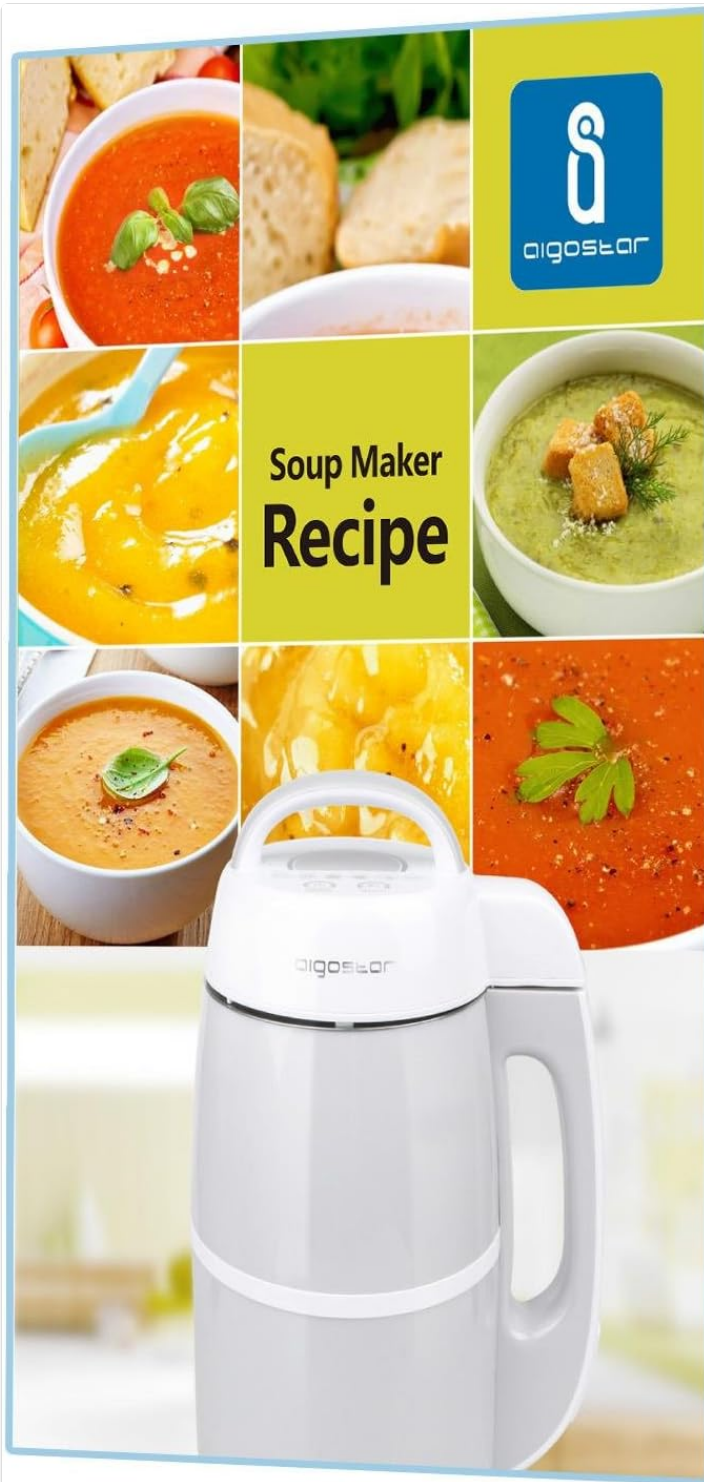


Image: The Aigostar 30IMW Plant Milk Machine, showcasing its multi-functionality for various recipes like soups and plant milks, with an accompanying e-recipe concept.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not immerse the main unit (containing electrical components) in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Keep hands and utensils out of the container while blending to prevent severe injury and/or damage to the appliance.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- The appliance generates heat during operation. Be cautious of hot surfaces and steam.
- Do not overfill the container beyond the maximum fill line to prevent overflow.
- Always ensure the lid is securely in place before operating.
- Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
- This appliance is for household use only.
- The plastic parts are 100% BPA-free, ensuring safe and healthy food preparation.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Aigostar 30IMW Plant Milk Machine:

1. Main Unit (with control panel and handle)
2. Lid (with integrated blades)
3. Stainless Steel Inner Pot
4. Power Cord
5. Measuring Cup (Accessory)
6. Cleaning Brush (Accessory)
7. Strainer/Filter (Accessory)
8. Strainer Jug (Accessory)



Image: Overview of the Aigostar 30IMW Plant Milk Machine and its accompanying accessories, including the main unit, a cleaning brush, a strainer jug, a strainer, and a measuring cup.

SETUP AND FIRST USE

Unpacking

- Carefully remove all components from the packaging.
- Check that all listed components are present and undamaged.
- Dispose of all packaging materials responsibly.

Initial Cleaning

- Before first use, clean the inner pot, lid, and all accessories with warm soapy water.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- Rinse thoroughly and dry all parts completely.

Placement

- Place the appliance on a stable, flat, heat-resistant surface.
- Ensure there is adequate ventilation around the unit.
- Keep the appliance away from heat sources and direct sunlight.

OPERATING INSTRUCTIONS

The Aigostar 30IMW features a user-friendly control panel with multiple functions. The control panel is located on the lid of the machine.



Image: A close-up of the Aigostar 30IMW's control panel, highlighting the various function buttons for different programs, along with the 'Start/Cancel' and 'Select' buttons.

General Operation Steps

1. **Prepare Ingredients:** Wash, chop, and measure your ingredients according to your recipe.
2. **Add Ingredients:** Place the prepared ingredients into the stainless steel inner pot. Ensure the liquid level is between the MIN and MAX marks.
3. **Secure Lid:** Place the lid onto the main unit and ensure it is properly seated and locked.
4. **Connect Power:** Plug the power cord into a suitable electrical outlet.
5. **Select Function:** Press the **SELECT** button repeatedly to cycle through the available programs (Smooth, Chunky, Juice, Blend, Soymilk, Jam). The indicator light for the selected function will illuminate.
6. **Start Program:** Once the desired function is selected, press the **START/CANCEL** button to begin the program.
7. **Program Completion:** The machine will emit an audible signal when the program is complete. It will automatically switch to a "keep warm" mode for one hour after certain programs.

8. **Serve:** Carefully unplug the machine, remove the lid, and pour out the contents. Use caution as contents will be hot.

Function Descriptions

- **Smooth:** Ideal for smooth soups or creams. This program blends ingredients and cooks them to a smooth consistency.
- **Chunky:** Perfect for chunky soups with vegetables, ensuring all ingredients are cooked thoroughly.
- **Juice:** For preparing cold juices and smoothies with thoroughly blended ingredients.
- **Blend:** A general blending function for various mixing tasks.
- **Soymilk (Milk):** Specifically designed for making plant-based milks, such as soy milk.
- **Jam:** For preparing homemade jams.



Image: The interior of the Aigostar 30IMW, illustrating the blending process with its robust blades mixing a liquid, likely for a soup or smoothie.



Image: A cutaway diagram of the Aigostar 30IMW, detailing its construction with a 304 food-grade stainless steel inner pot, a middle insulated heat layer for temperature retention, and a PP insulated heat shell for safety.



Image: A user adding chopped red onions into the stainless steel inner pot of the Aigostar 30IMW, demonstrating the ease of adding ingredients for various recipes.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your appliance.

- **Immediate Cleaning:** For best results, clean the inner pot and blades immediately after use. If food dries onto the surfaces, it becomes much harder to remove.
- **Inner Pot and Blades:** Add a small amount of water and a drop of dish soap to the inner pot. Secure the lid and select the "Blend" function for a few seconds. This helps dislodge food particles. Then, carefully scrub the inner pot and blades with a non-abrasive sponge or the provided cleaning brush.
- **Non-Removable Pot:** The inner pot is not removable. Do not attempt to detach it. This means you cannot immerse the entire pot in water. Be careful when cleaning around the electrical connections at the base of the pot.
- **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers.
- **Lid:** Clean the lid, especially around the blades, carefully. Use the cleaning brush to reach tight areas.

- **Accessories:** Wash the measuring cup, strainer, and strainer jug with warm soapy water and rinse thoroughly.
- **Drying:** Ensure all parts are completely dry before storing the appliance.

TROUBLESHOOTING

If you encounter issues with your Aigostar 30IMW, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; lid not properly secured.	Ensure the power cord is securely plugged in. Check your power supply. Make sure the lid is correctly placed and locked.
Ingredients are not blending properly (e.g., chunky when smooth is selected).	Too many ingredients; insufficient liquid; ingredients too large.	Do not exceed the MAX fill line. Add more liquid if necessary. Cut ingredients into smaller pieces before adding.
Liquid overflows during operation.	Overfilled container.	Ensure ingredients and liquid do not exceed the MAX fill line. The internal level sensor should prevent this, but manual check is advised.
Loud noise during operation.	Normal blending noise; hard ingredients.	Some noise is normal during blending, especially with harder ingredients. If the noise is unusual or excessive, ensure the lid is secure and there are no foreign objects.
Plant milk is too thin.	Incorrect ingredient ratio.	Adjust the ratio of solids to water according to your desired consistency. Experiment with different recipes.

If the problem persists after trying these solutions, please contact customer support.

TECHNICAL SPECIFICATIONS

- Model:** 30IMW
- Brand:** Aigostar
- Power:** 952 Watts
- Capacity:** 1.7 Liters
- Material:** 304 Food Grade Stainless Steel (inner pot)
- Dimensions (L x W x H):** 23.4 x 17.4 x 23.6 cm
- Weight:** 4.07 Kilograms
- Safety Features:** Double-layer insulation, non-slip base, internal level sensor, BPA-free plastic parts.

WARRANTY AND SUPPORT

Aigostar products are manufactured to high-quality standards. This product comes with a quality guarantee. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact Aigostar customer service.

Customer Support

If you have any questions, require technical assistance, or need to report a problem, please contact Aigostar customer support through the retailer where you purchased the product or visit the official Aigostar website for contact information. *Please retain your proof of purchase for warranty claims.*

© 2024 Aigostar. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question