

[Manuals.plus](#) /

› [Vitamix](#) /

› Vitamix A2500 Ascent Series Smart Blender User Manual

Vitamix 061007

Vitamix A2500 Ascent Series Smart Blender User Manual

Model: 061007 | Brand: Vitamix

INTRODUCTION

The Vitamix A2500 Ascent Series Smart Blender is a professional-grade appliance designed for versatile kitchen tasks. It features three program settings for smoothies, hot soups, and frozen desserts, which automatically adjust to the container size and process recipes to completion. Built-in wireless connectivity allows for future innovations, while Variable Speed Control and a Pulse Feature provide precise texture control. A digital timer assists with manual processing, ensuring consistent results. This blender is engineered for durability and ease of cleaning, making it a reliable tool for a wide range of culinary applications.





Image: The Vitamix A2500 Ascent Series Smart Blender in black, featuring its motor base and an empty 64-ounce low-profile container with lid.

IMPORTANT SAFETY INFORMATION

Before operating your Vitamix A2500 blender, please read and understand all safety instructions. Failure to follow these instructions may result in serious injury or damage to the appliance.

- Always unplug the blender from the power outlet before cleaning or when not in use.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils out of the container while blending to reduce the risk of severe personal injury. A tamper may be used only when the main lid is in place through the lid plug opening.
- Ensure the lid and lid plug are securely in place before operating the blender.
- Do not blend hot liquids above the maximum fill line to prevent overflow and scalding.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

SETUP GUIDE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the motor base on a clean, dry, and stable surface. Ensure adequate ventilation around the unit.
3. **Container Assembly:** Place the 64-ounce low-profile container securely onto the motor base. The Self-Detect technology will recognize the container size.
4. **Power Connection:** Plug the power cord into a dedicated 110V, 50-60 Hz, 12 Amps electrical outlet.
5. **Initial Cleaning:** Before first use, clean the container, lid, and lid plug as described in the "Maintenance and Cleaning" section.

OPERATING INSTRUCTIONS

Basic Blending

1. **Add Ingredients:** Place desired ingredients into the 64-ounce low-profile container. Ensure ingredients do not exceed the maximum fill line.
2. **Secure Lid:** Place the lid firmly onto the container and insert the lid plug into the opening.
3. **Select Speed:** Use the Variable Speed Control dial to select a desired speed from 1 to 10. Start at a lower speed and gradually increase as needed.
4. **Pulse Feature:** For quick bursts of power or to chop ingredients, use the Pulse feature.
5. **Start Blending:** Turn the machine on. The digital timer will display the blending duration.
6. **Stop Blending:** Turn the machine off when desired consistency is achieved.





Image: The Vitamix A2500 blender with its container filled with various fruits, ready for blending.

Using Program Settings

The Vitamix A2500 offers three pre-programmed settings for common recipes:

- **Smoothies:** Ideal for perfectly smooth beverages.
- **Hot Soups:** Blends and heats ingredients through friction, creating hot, ready-to-serve soups.
- **Frozen Desserts:** Perfect for creating creamy frozen treats like sorbet and ice cream.


To use a program setting, simply turn the dial to the desired program icon. The blender will automatically adjust speed and blending time, stopping when complete.



HEAT



CHOP

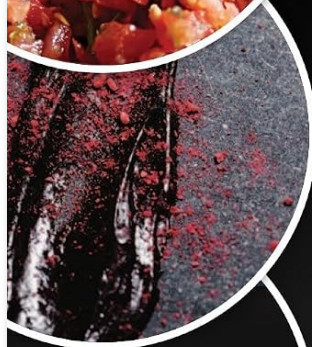

GRIND



BLEND



EMULSIFY



Image: The Vitamix A2500 blender illustrating its multi-functional capabilities including heating, chopping, grinding, blending, and emulsifying.



Image: A visual representation of various culinary creations possible with the Vitamix A2500, including hot soups, baby food, frozen desserts, and nut butters.

FEATURES OVERVIEW


- **Program Settings:** Three intelligent programs (Smoothies, Hot Soups, Frozen Desserts) for automated blending.
- **Variable Speed Control & Pulse:** Offers precise control over texture, from coarse chops to smooth purees.
- **Self-Detect Technology:** The motor base automatically recognizes the container size and adjusts program settings and blending times accordingly.
- **Digital Timer:** Provides accurate blending times for manual recipes, eliminating guesswork.
- **Durable Blades:** Laser-cut, hardened stainless-steel blades are designed to handle tough ingredients and maintain sharpness over time.
- **Wireless Connectivity:** Enables future updates and compatibility with new Vitamix innovations.

Pulse Feature

**Programs &
Variable Speed
Control**



Image: A detailed view of the Vitamix A2500 control panel, highlighting the pulse feature, program selection, and variable speed control dial.

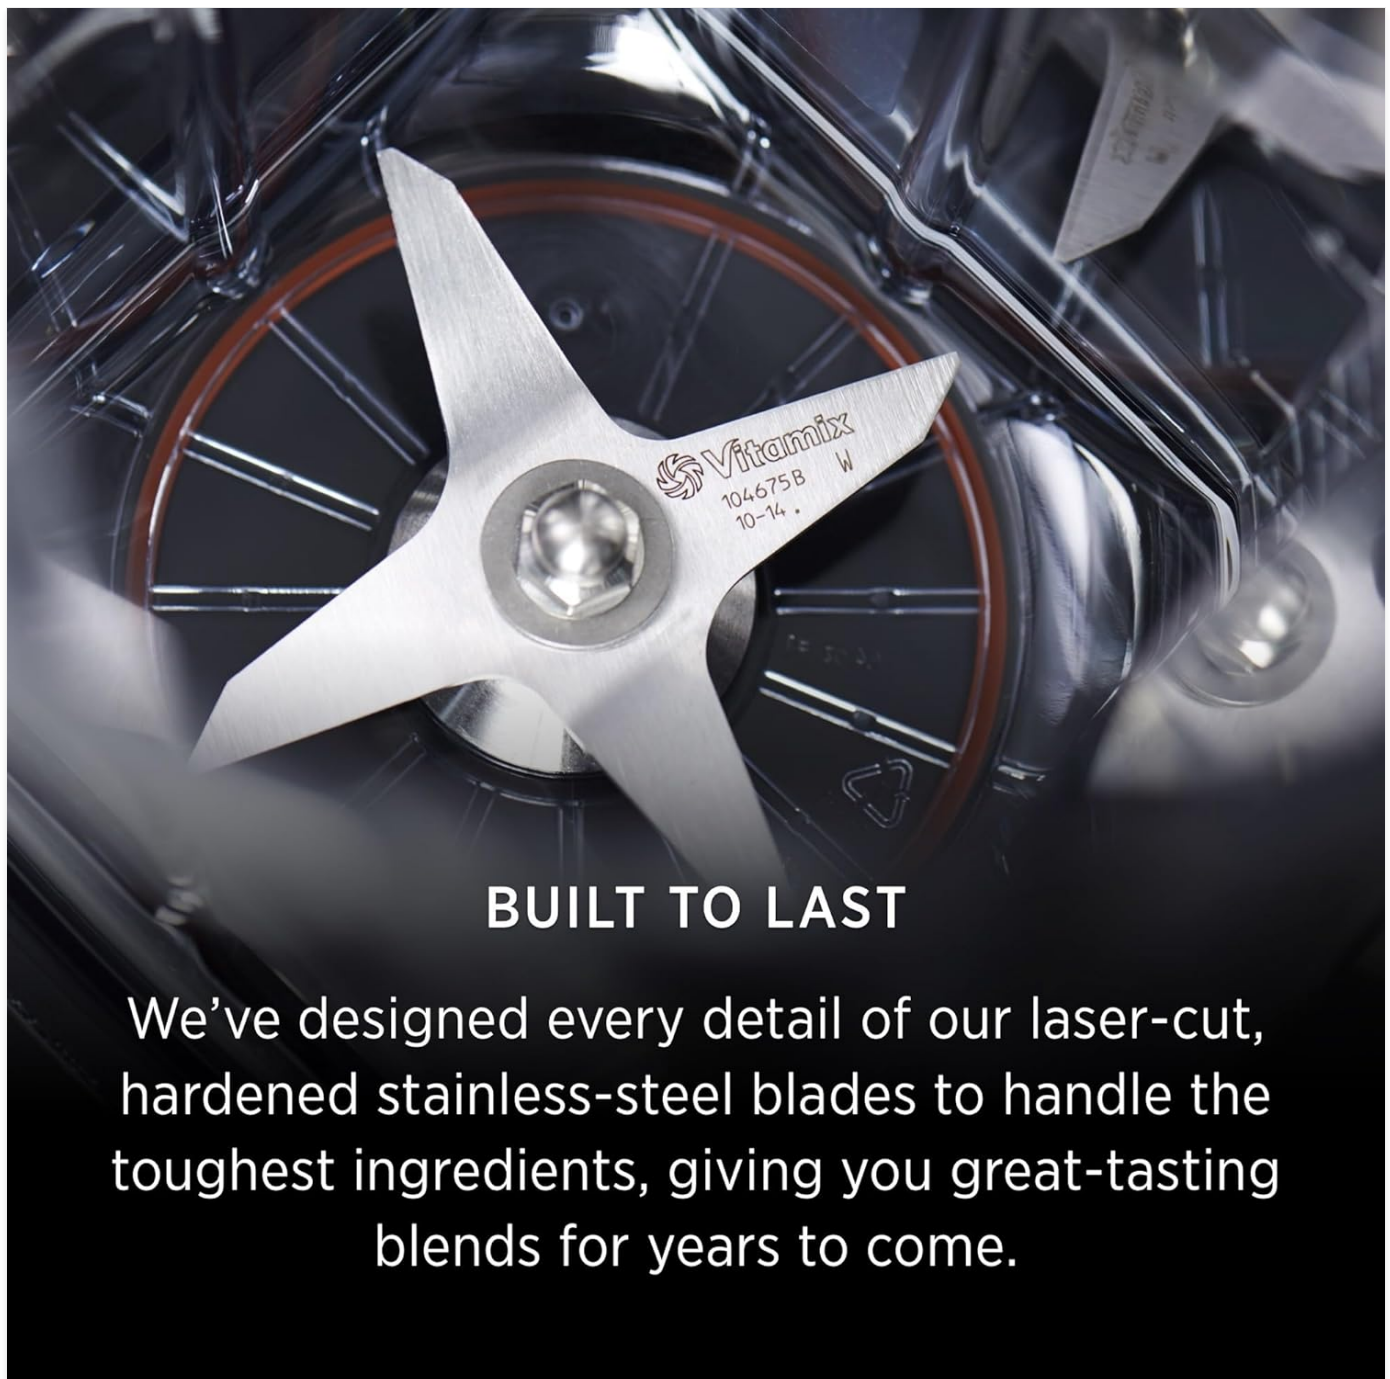

BUILT TO LAST

We've designed every detail of our laser-cut, hardened stainless-steel blades to handle the toughest ingredients, giving you great-tasting blends for years to come.

Image: A close-up shot of the robust laser-cut, hardened stainless-steel blades within the Vitamix container, designed for superior blending performance.

MAINTENANCE AND CLEANING

Self-Cleaning Function

The Vitamix A2500 features a convenient self-cleaning function:

1. Fill the container halfway with warm water.
2. Add a drop of dish soap.
3. Secure the lid and lid plug.
4. Run the machine on its highest speed for 60 seconds or less.
5. Rinse thoroughly.

Manual Cleaning

The container, lid, and lid plug are dishwasher-safe. Alternatively, they can be hand-washed with warm, soapy water. The motor base should be wiped clean with a damp cloth.

TROUBLESHOOTING

If you encounter issues with your Vitamix A2500, consider the following common solutions:

- **Blender not turning on:** Ensure the power cord is securely plugged into a working outlet. Check if the container is properly seated on the motor base.
- **Ingredients not blending smoothly:** Ensure sufficient liquid is added. Use the tamper to push ingredients towards the blades if necessary. Increase speed gradually.
- **Overheating:** If the blender stops unexpectedly, it may be due to overheating. Turn off the machine, unplug it, and allow it to cool for 20-30 minutes before resuming use.

For more detailed troubleshooting or persistent issues, please refer to the comprehensive user manual or contact Vitamix customer support.

SPECIFICATIONS

Brand	Vitamix
Model Number	061007
Color	Black
Capacity	64 Fluid Ounces
Product Dimensions	11"D x 8"W x 17"H
Item Weight	11.86 pounds
Power Source	AC
Voltage	110 Volts
Number of Speeds	10
Blade Material	Stainless Steel
Material Type Free	BPA Free
Included Components	Motor Base, 64-ounce Low-Profile Container with lid and lid plug, Low-Profile Tamper and Simply Blending Cookbook

WARRANTY AND SUPPORT

The Vitamix A2500 Ascent Series Smart Blender comes with a **10-year full warranty** that covers parts, labor, and return shipping both ways. This demonstrates Vitamix's commitment to quality and durability.

For comprehensive information, detailed troubleshooting, or to contact customer support, please refer to the official User Manual:

[Download User Manual \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question