

Smartby S-RMT-22

User Manual

SMARTBY WESTINGHOUSE RMT-22 REMOTE CONTROL

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Smartby RMT-22 Replacement Remote Control for Westinghouse TVs. This remote is designed to function immediately upon battery installation, requiring no programming for compatible models.

1.1 Package Contents

- 1 x Smartby RMT-22 Remote Control

2. SETUP

2.1 Installing Batteries

The RMT-22 remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2.1: Battery compartment of the RMT-22 remote.

Note: This remote is designed to work immediately after battery installation without any programming. If it does not respond, ensure batteries are inserted correctly and are fresh.

3. OPERATING INSTRUCTIONS

The Smartby RMT-22 remote control provides full functionality for compatible Westinghouse TV models. Below is an overview of the remote's layout and key button functions.





Figure 3.1: Front view of the RMT-22 remote control.

3.1 Button Functions

Button	Function
Power (●)	Turns the TV on or off.
Mute ()	Mutes or unmutes the TV sound.
Number Buttons (0-9)	Direct channel selection.
VOL (+/-)	Adjusts the volume level.
CH (+/-)	Changes the TV channel up or down.
INPUT	Cycles through available input sources (HDMI, AV, Component, etc.).
Navigation (Up, Down, Left, Right, SELECT)	Navigates menus and confirms selections.
Picture Mode	Adjusts picture settings.
Sleep	Sets a sleep timer for the TV.
EPG	Accesses the Electronic Program Guide.
C.C.	Activates or deactivates Closed Captions.
MTS	Selects Multi-channel Television Sound options.
INFO	Displays current channel information.
Colored Buttons (A, B, C, D)	Functionality varies by TV model and context (e.g., Favorite, HDMI selection).

4. COMPATIBILITY

This Smartby RMT-22 remote control is compatible with various Westinghouse TV models. It is a direct replacement and requires no programming for the following models:

- EW32S5UW
- UW32SC1W

- UW32S3PW
- EW39T6MZ
- UW39T7HW
- UW37SC1W
- UW40T8LW
- UW46T7HW
- UX28H1Y1
- RMT-11 (as a replacement)

If your TV model is not listed, please verify compatibility before use. The remote is designed for Westinghouse televisions.

5. MAINTENANCE

5.1 Cleaning the Remote

To maintain the remote's performance and appearance:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads.
- Avoid getting moisture into the battery compartment or button crevices.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Dispose of used batteries according to local regulations.

6. TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote does not work.	<ul style="list-style-type: none">• Ensure batteries are inserted correctly with proper polarity (+/-).• Replace old or depleted batteries with new ones.• Check if there is an obstruction between the remote and the TV's IR sensor.• Verify that your TV model is listed as compatible.
Remote works intermittently.	<ul style="list-style-type: none">• Batteries may be low; replace them.• Ensure a clear line of sight to the TV's IR sensor.
Certain buttons do not respond.	<ul style="list-style-type: none">• This remote is a direct replacement; however, some advanced functions specific to original TV remotes might not be supported if they rely on unique TV firmware.• Ensure the remote is pointed directly at the TV.

7. SPECIFICATIONS

Feature	Detail
Model Number	S-RMT-22
Brand	Smartby
Compatible Devices	Television (Westinghouse)
Max Number of Supported Devices	1
Color	Black
Special Feature	Ergonomic
Product Dimensions	7.3 x 2.3 x 1.1 inches
Item Weight	2.4 ounces

8. WARRANTY AND SUPPORT

This Smartby RMT-22 remote control is designed for reliable performance. For any issues not covered in this manual or for further assistance, please contact the seller or manufacturer through the platform where the product was purchased.

Please retain your proof of purchase for any warranty claims.

© 2024 Smartby. All rights reserved.

Product Model: S-RMT-22