

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Holiday Living](#) /
- › [Holiday Living 30-Count LED Battery Operated Red Mini & White Globe Lights Instruction Manual](#)

Holiday Living SG\_B01N4KGQLW\_US

# Holiday Living 30-Count LED Battery Operated Red Mini & White Globe Lights Instruction Manual

## INTRODUCTION

Thank you for purchasing the Holiday Living 30-Count LED Battery Operated Red Mini & White Globe Lights. This product is designed for both indoor and outdoor decorative lighting, featuring a built-in timer and multiple lighting functions. Please read this manual carefully before installation and use to ensure safe and optimal performance.



Image: Close-up view of the Holiday Living 30-Count LED Battery Operated Red Mini & White Globe Lights, showing a mix of red mini bulbs and larger white globe bulbs on a green wire.

## SAFETY INFORMATION

- This product is not a toy. Keep out of reach of children.
- Do not immerse the battery compartment in water. The lights are weather resistant, but the battery case should be protected from excessive moisture.
- Ensure batteries are inserted with correct polarity (+/-).
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product is not used for an extended period.
- Dispose of used batteries responsibly according to local regulations.
- Do not attempt to replace non-replaceable bulbs.

## PACKAGE CONTENTS

- 1 x Holiday Living 30-Count LED Battery Operated Red Mini & White Globe Lights String

**Note:** 3 'D' batteries are required for operation and are NOT included in the package. Please purchase them separately.

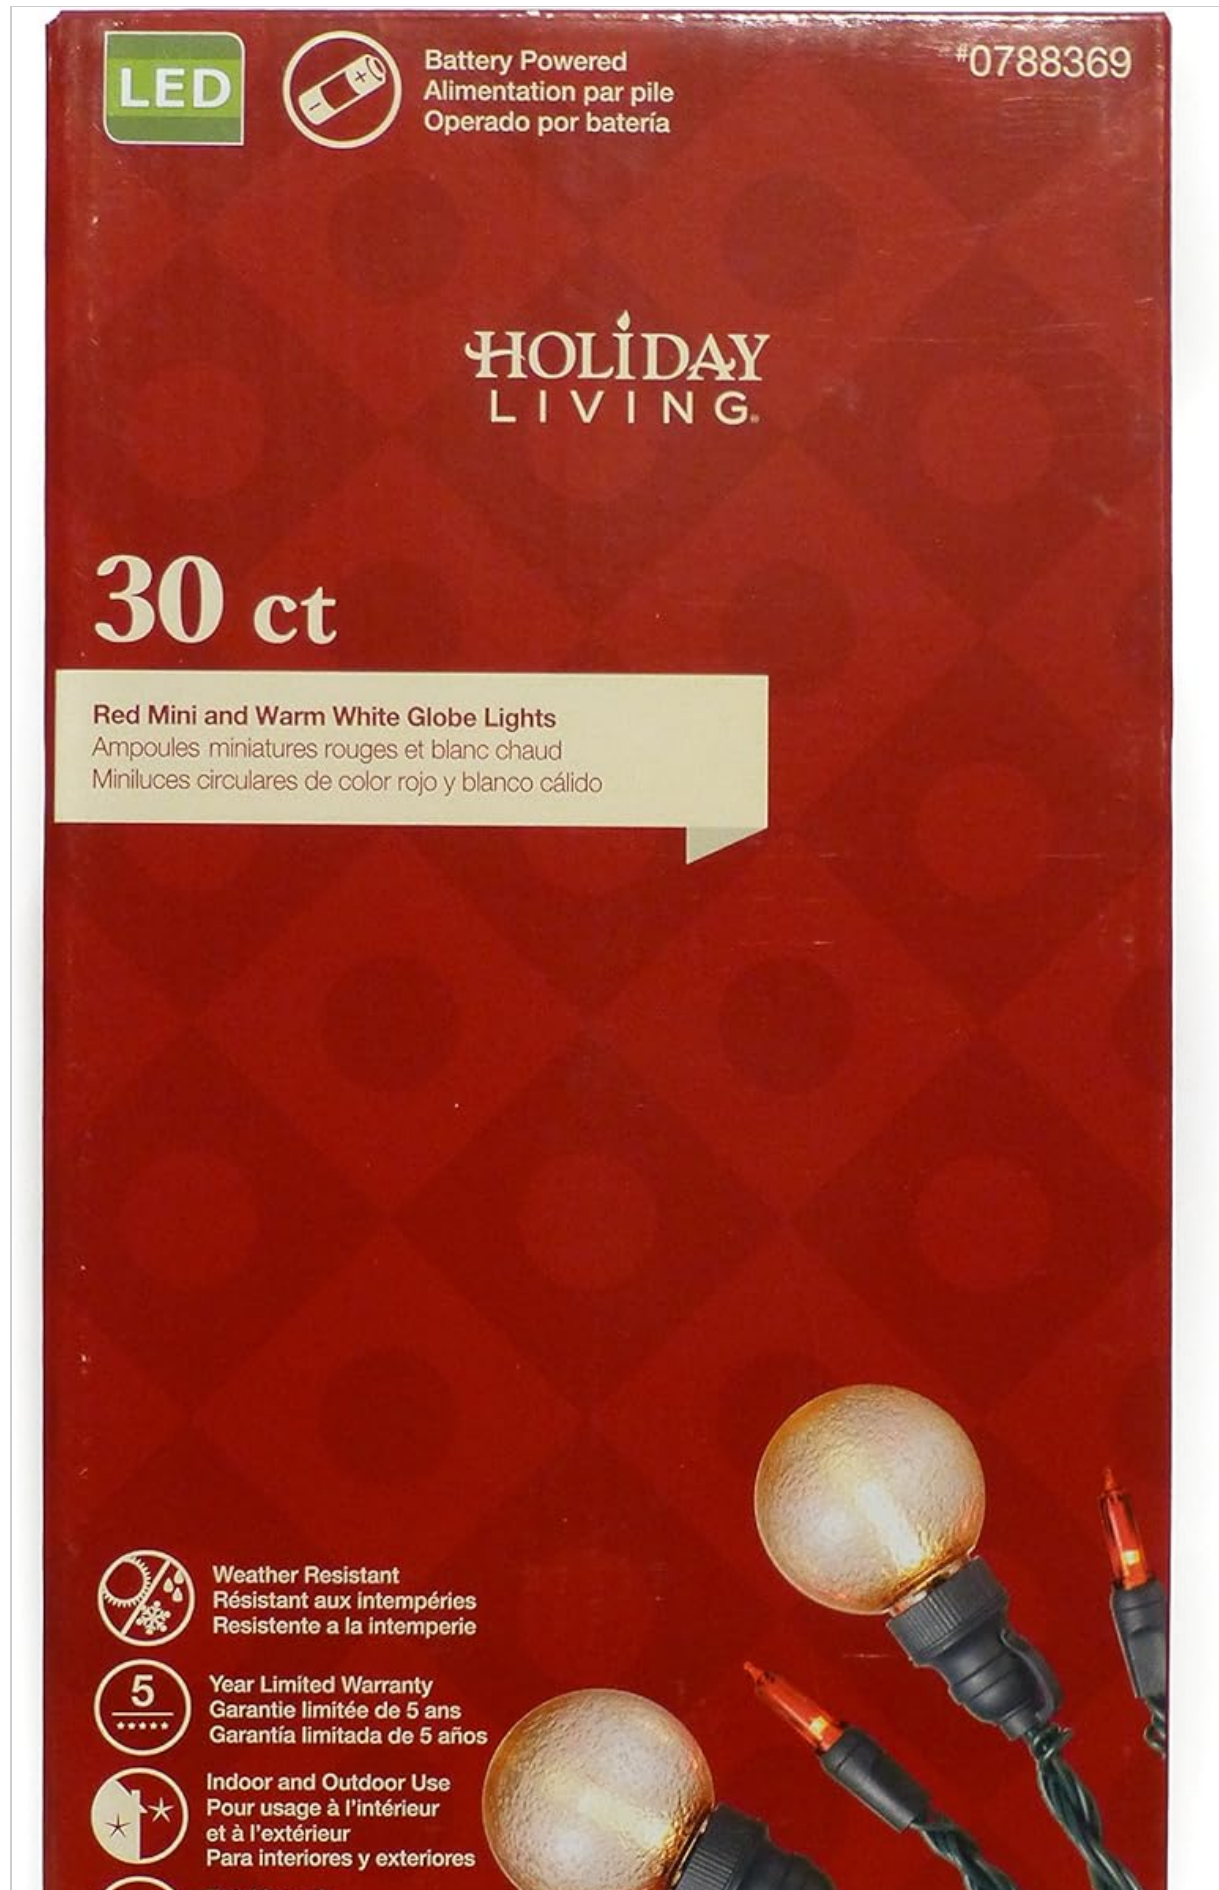




Image: Front view of the product packaging, displaying the Holiday Living brand logo, '30 ct', and 'Red Mini and Warm White Globe Lights' text.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the string lights.
2. Open the battery compartment cover.
3. Insert 3 'D' batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Securely close the battery compartment cover to ensure weather resistance.


### 2. Placement

- Uncoil the light string carefully to prevent tangling. The total length is 15.16 feet, with 14.5 feet of lighted section and an 8-inch lead wire.
- Position the lights in your desired indoor or outdoor location. Ensure the battery compartment is placed in a location protected from direct heavy rain or standing water, despite its weather-resistant design.
- Use appropriate clips or fasteners (not included) to secure the lights if hanging.

## OPERATION

### Power On/Off and Function Selection

The lights are controlled via a switch on the battery compartment. This switch allows you to cycle through the various lighting functions, including turning the unit off and activating the timer.

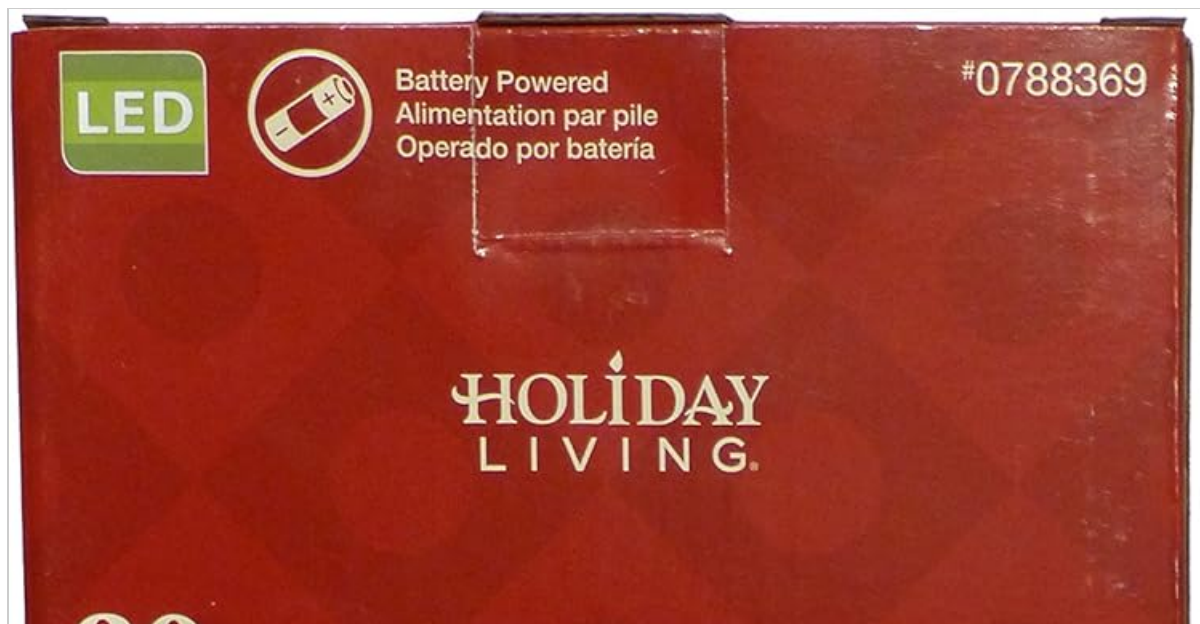

# 30 ct

## Red Mini and Warm White Globe Lights

Ampoules miniatures rouges et blanc chaud

Miniluces circulares de color rojo y blanco cálido

- **14.5 ft with lights**
  - **8-inch green lead wire**
  - **240 burn hours (varies by batteries brand)**
  - **7 functions: off, steady on, steady on with timer, twinkle, twinkle with timer, glisten and glisten with timer**
  - **Built-in timer: 6 hours on, 18 hours off**
- Jeu de lumières de 4,41 m avec ampoules
  - Fil de connexion vert de 20,32 cm
  - 240 heures de combustion (varie selon la marque de piles)
  - 7 réglages : arrêt, éclairage en continu, éclairage en continu avec minuterie, clignotement, clignotement avec minuterie, scintillement et scintillement avec minuterie
  - Minuterie intégrée : 6 heures en fonction, 18 heures hors fonction
- 4,41 m con luces
  - Cable conductor verde de 20,32 cm
  - 240 horas de encendido (varía según la marca de las baterías)
  - 7 funciones: apagado, encendido permanente, encendido permanente con temporizador, parpadeo, parpadeo con temporizador, brillo y brillo con temporizador
  - Temporizador integrado. 6 horas de encendido, 18 horas de apagado



**3 D Batteries Required (Sold Separately)**  
**3 piles D requises (vendues séparément)**  
**Requiere 3 baterías D (se venden por separado)**

**WARNING:** This is not a toy and not intended for children.

**AVERTISSEMENT :** Cet article n'est pas un jouet; il ne doit pas être manipulé par des enfants.

**ADVERTENCIA:** Esto no es un juguete y no está dirigido a los niños.

Distributed by/Distribué par  
Distribuido por:  
L G Sourcing, Inc.  
P.O. Box 1535  
N. Wilkesboro, NC 28659  
www.lgsourcing.com

1-888-345-7869

**MADE IN CHINA**  
**FABRIQUÉ EN CHINE**  
**HECHO EN CHINA**

0816

Item/Article/Artículo #0788369



Model/Modèle/Modelo #110401BO-T  
LW100018-082016

Holiday Living and Design® is a registered trademark of LF, LLC. All Rights Reserved.  
Holiday Living and Design® est une marque de commerce déposée de LF, LLC. Tous droits réservés.  
Holiday Living and Design® es una marca registrada de LF, LLC. Todos los derechos reservados.

Image: Back view of the product packaging, detailing features such as length, battery requirements, and lighting functions.

## LIGHTING FUNCTIONS

Your Holiday Living lights offer 7 distinct lighting functions:

1. **Off:** Lights are turned off.

2. **Steady On:** Lights remain continuously illuminated.
3. **Steady On with Timer:** Lights remain continuously illuminated and activate the built-in timer (6 hours on, 18 hours off).
4. **Twinkle:** Lights flash on and off in a twinkling pattern.
5. **Twinkle with Timer:** Lights flash in a twinkling pattern and activate the built-in timer (6 hours on, 18 hours off).
6. **Glisten:** Lights slowly fade in and out.
7. **Glisten with Timer:** Lights slowly fade in and out and activate the built-in timer (6 hours on, 18 hours off).

To activate the timer, select any function that includes "with Timer." The lights will stay on for 6 hours, then turn off for 18 hours, and repeat the cycle automatically.

## MAINTENANCE

- **Cleaning:** Gently wipe the lights and battery compartment with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** When the lights dim or stop working, replace all 3 'D' batteries with new ones. Follow the battery installation steps outlined in the Setup section.
- **Storage:** When not in use, store the lights in a cool, dry place. Remove batteries before storing for extended periods to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or incorrectly installed.	Replace batteries with new 'D' batteries, ensuring correct polarity.
Lights are dim.	Batteries are low.	Replace batteries with new 'D' batteries.
Timer function is not working correctly.	Incorrect function selected or timer reset needed.	Ensure a "with Timer" function is selected. To reset the timer, turn the lights off and then back on to a timer function at your desired start time.
Some bulbs are not lighting up.	Individual bulb failure.	LED bulbs are generally long-lasting. If a bulb fails, the rest of the string should remain lit. Bulbs are not user-replaceable.

## SPECIFICATIONS

Feature	Detail
Model Number	SG_B01N4KGQLW_US
Light Source Type	LED
Number of Lights	30
Colors	Red Mini, Warm White Globe
Total Length	15.16 ft (14.5 ft lighted length + 8 inch lead wire)
Power Source	Battery Powered (3 x 'D' batteries, not included)
Voltage	4.5 Volts
Indoor/Outdoor Usage	Indoor, Outdoor

<b>Feature</b>	<b>Detail</b>
Special Feature	Weather Resistant, Built-in Timer (6 hours on, 18 hours off)
Control Method	Switch on battery compartment
Material	Plastic
Item Weight	16 ounces
UPC	886778110017

## **WARRANTY AND SUPPORT**

---

For warranty information or product support, please refer to the original product packaging or contact the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.