

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hornady](#) /

› [Hornady Rapid Safe Shotgun Wall Locker \(Model 98180\) - Instruction Manual](#)

Hornady 98180

Hornady Rapid Safe Shotgun Wall Locker (Model 98180)

Instruction Manual

PRODUCT OVERVIEW

The Hornady Rapid Safe Shotgun Wall Locker (Model 98180) provides secure and quick access storage for long guns. Designed for reliability and ease of use, it features multiple entry methods including RFID, keypad, and traditional key access. Its robust construction ensures the safety of your firearm while allowing for rapid deployment when needed.

- **Fast and Dependable Touch-Free Entry:** Utilize RFID technology for instant access.
- **Certified Child-Resistant:** Exceeds ASTM international safety standards for child and pry resistance, lock strength, drop/pick/saw tests, and hinge attack resistance.
- **Durable Construction:** Exterior housing made of thick 14-gauge steel with two internal hardened locking lugs.
- **Mobile Security:** Includes a cable for securing the safe in various locations. Meets TSA requirements for handgun safety in checked luggage.

INCLUDED COMPONENTS

Verify that all the following components are present in your package:

- RAPID® Safe Shotgun Wall Lock (No. 98180)
- One (1) RFID Adjustable Wristband (No. 98166)
- Two (2) RFID Adhesive Decals (No. 98168)
- One (1) RFID Key Fob Tag (No. 98167)
- Two (2) Circular Barrel Keys
- Four (4) 1/4" x 2.0" Lag Screws
- Muzzle Ring
- Wall Power Supply


HORNADY® SECURITY

Our Hornady Security products feature patented technologies to provide firearm owners, or anyone wanting to protect their valuables, enhanced peace of mind.

Figure 1: All included components for the Hornady Rapid Safe Shotgun Wall Locker.

SETUP

1. **Choose Mounting Location:** Select a suitable wall stud for mounting. Ensure there is adequate space for the safe door to open and for the shotgun to be inserted and removed. Consider any accessories on your shotgun that might affect clearance.
2. **Mounting the Safe:** Use the provided four 1/4" x 2.0" lag screws to securely attach the safe to the wall stud. Drill pilot holes as necessary.
3. **Install Muzzle Ring:** Attach the muzzle ring to the wall above the safe, ensuring it aligns with the shotgun's muzzle when the gun is properly seated in the safe. This provides additional stability and prevents the gun from being used as a pry bar.
4. **Power Connection:** Connect the wall power supply to the safe for continuous operation. Alternatively, insert four (4) AA batteries (not included) for battery-powered operation. Use good quality batteries for optimal performance.
5. **Program RFID Tags:** Follow the instructions in the Operating section to program your RFID wristband, key fob, and adhesive decals to the safe. Up to five RFID items can be programmed.

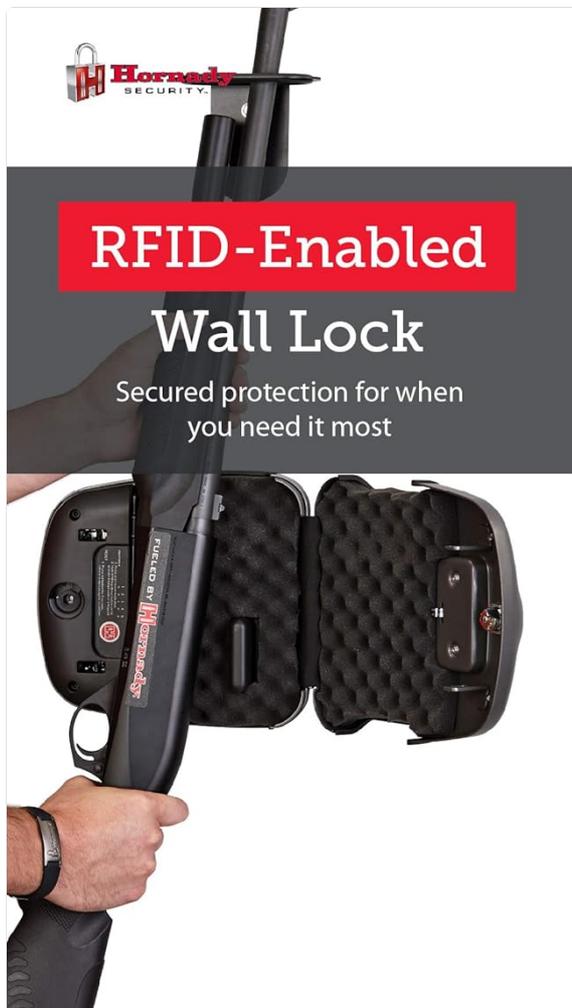

RFID Technology allows instant access with tags that can be programmed to a specific safe.



RFID Tags include wristbands, key fobs and decals.



RFID-enabled devices can be programmed to read up to five different tags—no need to find a key, combination or use your fingerprint.



Figure 2: The Hornady Rapid Safe Shotgun Wall Locker securely mounted on a wall.

OPERATING INSTRUCTIONS

The Hornady Rapid Safe offers multiple methods for quick and secure access.

RFID Access

1. Programming RFID Tags:

- Ensure the safe is powered (AC or batteries).
- Press and hold the program button (refer to manual for exact location, typically inside the safe or near the keypad).
- While holding the program button, present an unprogrammed RFID tag (wristband, key fob, or decal) to the RFID reader on the safe.
- The safe will indicate successful programming (e.g., a beep or light change). Repeat for all desired RFID tags (up to 5).

2. **Opening with RFID:** Simply place a programmed RFID tag over the reader on the safe. The safe will instantly open, presenting your shotgun.



Figure 3: Using an RFID tag for quick access to the safe.

Keypad Entry

1. **Setting a Code:** Refer to the detailed instructions in the full product manual for setting your personal 4 to 6 digit code using the keypad buttons.
2. **Opening with Keypad:** Enter your programmed code using the keypad buttons. The safe will open upon correct entry.

Manual Key Access

In case of electronic failure or dead batteries, the safe can be opened using the provided circular barrel keys. Insert the key into the lock cylinder and turn to open the safe.

Your browser does not support the video tag.

Video 1: Demonstration of Hornady RFID Safes, showcasing the rapid access features.

MAINTENANCE

- **Battery Replacement:** If using battery power, replace the four (4) AA batteries regularly (e.g., annually) or when the low battery indicator activates.
- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents. Ensure the interior foam is free of debris.
- **Functionality Check:** Periodically test all access methods (RFID, keypad, key) to ensure they are functioning correctly.

TROUBLESHOOTING

- **Safe Not Opening with RFID/Keypad:**

- Check power source: Ensure AC adapter is securely plugged in or batteries are fresh and correctly installed.
- Re-program RFID tags: If an RFID tag is not recognized, attempt to re-program it following the instructions in the Operating section.
- Verify keypad code: Ensure the correct code is being entered.
- Use backup key: If electronic methods fail, use the manual circular barrel key for access.

- **Safe Door Not Closing Properly:** Ensure no obstructions are preventing the door from fully closing and latching. Check the interior foam for proper placement.

SPECIFICATIONS

Feature	Detail
Brand	Hornady
Model Name	98180
Product Dimensions	2.8"D x 8.5"W x 9.5"H
Lock Type	Electronic, Key
Color	Black
Material	Alloy Steel
Mounting Type	Wall Mount
Item Weight	1 Kilogram
Water Resistance Level	Not Water Resistant

SAFETY INFORMATION

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Always follow proper firearm safety procedures. Ensure the firearm is unloaded before placing it into or removing it from the safe. Keep keys and RFID tags in a secure location away from unauthorized users, especially children. This safe is designed to deter unauthorized access but is not a substitute for responsible firearm handling and storage practices.

WARRANTY AND SUPPORT

This Hornady Rapid Safe Shotgun Wall Locker (Model 98180) comes with a **2-Year Manufacturer Warranty**. For warranty claims, technical support, or additional product information, please contact Hornady customer service directly.

For further assistance, visit the official Hornady website or consult the full product manual included with your purchase.