

[Manuals.plus](#) /

› [Nelson](#) /

› Nelson Manual and Mechanical Hose Faucet Water Timer Instruction Manual

Nelson B01N4UC1PE

Nelson Manual and Mechanical Hose Faucet Water Timer

Model: B01N4UC1PE | Brand: Nelson

PRODUCT OVERVIEW

The Nelson Manual and Mechanical Hose Faucet Water Timer is designed to simplify your watering tasks. This device allows for both automatic timed watering and manual on-demand watering, providing flexibility for your garden and lawn care needs. Its robust design ensures reliable performance for controlling water flow from your hose faucet.



A close-up view of the Nelson Manual and Mechanical Hose Faucet Water Timer, showing its grey body, yellow timer dial with time markings, and hose connections. The dial indicates settings for 1/2 hour, 1 3/4 hours, and 2 hours, among others.

SETUP GUIDE

1. **Unpack:** Carefully remove the water timer from its packaging. Inspect for any visible damage.
2. **Connect to Faucet:** Screw the top connector of the timer onto your outdoor hose faucet. Ensure the connection is hand-tight to prevent leaks. Do not overtighten.
3. **Attach Hose:** Screw your garden hose onto the bottom outlet of the water timer. Again, ensure a hand-tight connection.
4. **Check for Leaks:** Slowly turn on your faucet to full pressure. Check all connections for leaks. If leaks occur, tighten slightly until they stop.

OPERATING INSTRUCTIONS

The Nelson water timer features a simple mechanical dial for setting watering duration.

- **Setting Automatic Watering:**
 1. Ensure your hose faucet is fully open.
 2. Rotate the yellow dial clockwise to the desired watering duration. The dial has markings for various times, including 1/2 hour, 1 3/4 hours, and 2 hours.
 3. Once the set time elapses, the timer will automatically shut off the water flow.
- **Manual Watering (Always On):**
 1. To provide continuous water flow, rotate the yellow dial counter-clockwise to the "ON" position (usually indicated by a specific mark or the end of the dial's range).
 2. Water will flow continuously until you manually turn the dial back to the "OFF" position or a timed setting.

MAINTENANCE

- **Cleaning:** Periodically wipe the exterior of the timer with a damp cloth to remove dirt and debris. Do not use harsh chemicals.
- **Winter Storage:** Before the first frost, disconnect the timer from the faucet and hose. Drain any remaining water from the timer. Store it indoors in a dry, frost-free location to prevent damage from freezing.
- **Gasket Inspection:** Annually inspect the rubber washer (gasket) inside the faucet connector for wear or damage. Replace if necessary to ensure a leak-free seal.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Water leaking from connections	Loose connection or damaged washer.	Tighten connections by hand. Check and replace rubber washer if worn or cracked.
Timer not shutting off water	Dial not set correctly or internal mechanism issue.	Ensure dial is set to a timed duration, not "ON". If problem persists, the unit may be faulty.
No water flow	Faucet not fully open, timer set to "OFF", or debris in filter.	Ensure faucet is fully open. Rotate timer dial to a timed setting or "ON". Check for and clear any debris in the inlet filter.

SPECIFICATIONS

- **Model Number:** B01N4UC1PE
- **Brand:** Nelson
- **Item Weight:** 1.1 pounds (0.5 Kilograms)
- **UPC:** 816602021523
- **Type:** Manual and Mechanical Hose Faucet Water Timer

WARRANTY INFORMATION

For detailed warranty information regarding your Nelson Manual and Mechanical Hose Faucet Water Timer, please

refer to the documentation included with your purchase or visit the official Nelson website. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase.

CUSTOMER SUPPORT

If you require further assistance, have questions not covered in this manual, or need to report an issue, please contact Nelson customer support. You can usually find contact information on the product packaging or by visiting the official Nelson website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question