

Beyution AK59-00123A --0001

User Manual for Beyution AK59-00123A Blu-ray Remote Control

Model: AK59-00123A --0001

INTRODUCTION

This manual provides comprehensive instructions for the Beyution AK59-00123A replacement Blu-ray remote control. This remote is designed to be compatible with various Samsung Blu-ray player models, including BDD5490, BDD6500, BDD5500, BDD5700, BDD5500C, BDD5500C/ZA, BDD5700, BDD5700/ZA, and BDD5700/ZC. It offers direct functionality without the need for complex programming or pairing.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.

The remote is ready for use immediately after battery installation. No programming or pairing is required for compatible Samsung Blu-ray players.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible Samsung Blu-ray player. Simply point the remote towards the player and press the desired button.





Figure 1: Front view of the AK59-00123A Remote Control.

This image displays the full layout of the remote control, highlighting the arrangement of all functional buttons, including power, source, numeric keypad, navigation, playback controls, and dedicated app buttons.

Key Functions

- **POWER (Red Button):** Turns the Blu-ray player on or off.
- **SOURCE:** Selects the input source for the connected device.
- **Numeric Keypad (0-9):** Used for direct channel input or menu selections.
- **BONUSVIEW:** Accesses BonusView features on compatible Blu-ray discs.
- **SUBTITLE:** Toggles subtitle display.
- **AUDIO:** Changes audio tracks or modes.
- **Playback Controls (Rewind, Play, Fast Forward, Stop, Pause):** Standard controls for media playback.
- **DISC MENU:** Accesses the main menu of the Blu-ray disc.
- **MENU:** Navigates to the player's main menu.
- **TITLE MENU:** Accesses the title menu of the Blu-ray disc.
- **POPUP:** Displays pop-up menus.
- **TOOLS:** Opens a context-sensitive tools menu.
- **INFO:** Displays information about the current content or system status.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate through menus and selections.
- **RETURN:** Goes back to the previous screen or menu.
- **EXIT:** Exits the current menu or function.
- **Color Buttons (A, B, C, D):** Functionality varies depending on the content or application.
- **NETFLIX:** Direct access button for the Netflix application.
- **SMART HUB:** Direct access button for Samsung Smart Hub.
- **SEARCH:** Initiates a search function within compatible applications or menus.
- **VOL (Volume Up/Down):** Adjusts the volume of the connected audio system (if controlled by the Blu-ray player).
- **MUTE:** Mutes or unmutes the audio.
- **CH (Channel Up/Down):** Changes channels (if the Blu-ray player has tuner functionality or controls a connected TV).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and player. Remote out of range.	• Replace batteries with new AAA batteries, ensuring correct polarity. • Remove any objects blocking the line of sight between the remote and the Blu-ray player's IR sensor. • Move closer to the Blu-ray player.
Certain buttons not working.	Button stuck or damaged. Player not compatible with specific function.	• Gently press the button multiple times to dislodge any debris. • Ensure your Samsung Blu-ray player model supports the specific function (e.g., Smart Hub, Netflix).
Remote works intermittently.	Low battery power. Interference.	• Replace batteries. • Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the IR signal.

SPECIFICATIONS

- **Model:** AK59-00123A --0001
- **Brand:** Beyution
- **Compatible Devices:** Samsung Blu-ray Players (BDD5490, BDD6500, BDD5500, BDD5700, BDD5500C, BDD5500C/ZA, BDD5700, BDD5700/ZA, BDD5700/ZC)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.7 inches (approximately)
- **Item Weight:** 3 ounces (approximately)
- **Manufacturer:** Beyution Inc
- **Country of Origin:** China

WARRANTY AND SUPPORT

This Beyution replacement remote control is designed for reliable performance. For any issues not covered in the troubleshooting section, please refer to the seller's return policy or contact the point of purchase for support. Specific warranty details may vary by retailer.

For general inquiries or further assistance, please visit the Beyution website or contact their customer service if available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question