

[Manuals.plus](#) /

› [Zoomer](#) /

› Zoomer Show Pony Interactive Toy Instruction Manual

Zoomer 6036996

Zoomer Show Pony Interactive Toy Instruction Manual

Model: 6036996

Brand: Zoomer

INTRODUCTION

The Zoomer Show Pony is an interactive toy designed to provide an engaging play experience. This manual provides instructions for setup, operation, and care to ensure optimal performance and enjoyment of your new companion.

WHAT'S IN THE BOX



The Zoomer Show Pony and its accessories are packaged in this box.

- 1 Zoomer Show Pony
- 1 Apple Accessory
- 1 Carrot Accessory
- 1 Hair Brush
- 1 Sugar Cube Accessory
- Instruction booklet (this manual)
- Cheat Sheet

SETUP

Battery Installation

1. Locate the battery compartment on the underside of the Zoomer Show Pony.
2. Using a Phillips head screwdriver, open the battery compartment cover.

3. Insert 4 x AA Alkaline batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Initial Power On

After installing batteries, locate the power switch, usually on the pony's underside or near the battery compartment. Slide the switch to the "ON" position. The pony's eyes will light up, indicating it is ready for interaction.

OPERATING INSTRUCTIONS

Basic Interaction

The Zoomer Show Pony responds to touch. Petting its cheeks and nose will elicit loving pony sounds and head movements. Its expressive light-up eyes will change to show its mood and reactions.



The Zoomer Show Pony is lightweight enough to be held and interacted with closely.

Feeding Your Pony

Use the interactive accessories to feed your pony. Hold the accessory near its mouth, and it will respond with crunching, chomping, or munching sounds.

- **Apple Accessory:** Triggers happy eating sounds.
- **Carrot Accessory:** Elicits positive reactions.
- **Sugar Cube Accessory:** Feeding the sugar cube can make the pony "hyper" and perform a special "sugar dance."



The Zoomer Show Pony interacts when fed its apple accessory.



The Zoomer Show Pony interacts when fed its carrot accessory.



The Zoomer Show Pony reacts to being fed its sugar cube accessory, which can trigger a 'sugar dance'.

Grooming

Use the included hairbrush to groom and style your pony's mane and tail. This interaction can also elicit positive responses from the pony.



The Zoomer Show Pony's mane can be styled using the provided brush.

Tricks and Performance

Press the heart badge located on the pony's chest to activate various tricks and performances, including dancing, singing, or performing a figure eight movement.



Two children engaging with the Zoomer Show Pony, demonstrating its interactive play features.

MAINTENANCE

- **Cleaning:** Wipe the pony with a slightly damp cloth to remove dust and dirt. Do not immerse in water.
- **Battery Care:** If the pony will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Storage:** Store the pony in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

- **Pony not responding:**
 - Ensure the power switch is in the "ON" position.
 - Check if the batteries are correctly installed and not depleted. Replace with fresh AA Alkaline batteries if necessary.

- **Pony not moving correctly:**
 - Ensure there are no obstructions around its wheels or legs.
 - Verify that the play surface is flat and clear.
- **Unexpected behavior:**
 - Turn the pony off and then on again to reset its functions.

SPECIFICATIONS

Brand Name	Zoomer
Model Number	6036996
Item Dimensions (L x W x H)	14.13" x 9" x 12.75"
Item Weight	3 Pounds
Material Type	Plastic
Battery Type	4 AA Alkaline batteries (not included)
Manufacturer Minimum Age	60 months
Manufacturer Maximum Age	84 months

WARRANTY AND SUPPORT

As per manufacturer specifications, this product comes with **No Warranty**. For any product-related inquiries or support, please refer to the contact information provided by the retailer at the time of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question