



Manuals.plus /

› SENCOR /

› Sencor SSC 3001YL Steam Cleaner User Manual

SENCOR SSC 3001YL

Sencor SSC 3001YL Steam Cleaner User Manual

Model: SSC 3001YL

IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before using the Sencor SSC 3001YL Steam Cleaner. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the voltage matches your power supply before connecting the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Do not open the water tank cap while the appliance is pressurized or hot. Allow it to cool down completely before refilling.
- Keep children and pets away from the appliance during operation. Steam is extremely hot and can cause severe burns.
- Use only distilled or demineralized water to prevent mineral buildup and prolong the life of the appliance.
- Never direct steam at people, animals, or electrical appliances.
- Unplug the appliance from the power outlet when not in use and before cleaning or maintenance.
- Do not use the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped.

PRODUCT OVERVIEW AND COMPONENTS

The Sencor SSC 3001YL is a powerful steam cleaner designed for effective cleaning of various hard surfaces. It uses high-pressure steam to eliminate dirt, grease, and up to 99% of standard bacteria without the need for harsh chemicals.

Key Features:

- Suitable for cleaning hard surfaces such as tiles, cooktops, and glass.
- Eliminates up to 99% of standard bacteria.
- Removes stains, limescale deposits, and grease.
- Fast heat-up time: water heats in 2.5 minutes.

- Safety valve protects against steam burns.

Included Accessories:



Image: A comprehensive view of the Sencor SSC 3001YL Steam Cleaner's accessories, including a basic straight nozzle, angled nozzle, flexible hose, mini mop head with cover cloth, round brush, and window/mirror cleaning brush, along with a measuring cup and funnel.

- Basic Straight Nozzle
- Angled Nozzle
- Flexible Hose
- Mini Mop Head with Cover Cloth
- Round Brush
- Window/Mirror Cleaning Brush
- Measuring Cup and Funnel

2. **Heating Time:** Allow approximately 2.5 minutes for the water to heat up and steam to generate. The indicator light may turn off or change color once ready, depending on the model.
3. **Steam Release:** Press and hold the steam trigger to release steam. For continuous steam, some models may have a lock button on the trigger.
4. **Cleaning:**
 - Direct the steam nozzle or attached accessory towards the surface to be cleaned.
 - Move the cleaner slowly over the surface, allowing the steam to penetrate and loosen dirt.
 - Wipe away loosened dirt and moisture with a clean cloth as you go.
 - For stubborn stains, hold the steam over the area for a few seconds before wiping.
5. **Refilling:** If the steam output decreases significantly or stops, the water tank may be empty. Unplug the unit, allow it to cool down completely (at least 10-15 minutes), and then carefully refill as per the "Filling the Water Tank" instructions.
6. **Finishing:** When cleaning is complete, release the steam trigger, unplug the appliance, and allow it to cool down before storing.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your steam cleaner.

1. **Emptying the Water Tank:** After each use, or before long-term storage, ensure the unit is cool and unplugged. Carefully unscrew the safety cap and empty any remaining water from the tank.
2. **Cleaning Accessories:** Wash removable accessories with warm, soapy water. Rinse thoroughly and allow them to air dry completely before storing.
3. **Descaling:** Depending on water hardness and frequency of use, mineral deposits may build up inside the tank.
 - For light descaling, fill the tank with a mixture of equal parts water and white vinegar. Let it sit for 30 minutes, then empty and rinse thoroughly.
 - For heavy buildup, consult a professional or use a steam cleaner descaling solution following the product's instructions.
4. **Exterior Cleaning:** Wipe the exterior of the steam cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
5. **Storage:** Store the steam cleaner and its accessories in a cool, dry place, out of reach of children. Ensure the unit is completely dry before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty or low. Unit not heated sufficiently. Safety cap not tightened.	Refill water tank (ensure unit is cool). Allow 2.5 minutes for heating. Tighten safety cap securely.
Water leaking from nozzle.	Accessory not properly attached. Overfilling the water tank.	Ensure accessory is firmly attached. Do not overfill the water tank (max 350ml).
Unit not turning on.	Not plugged in. Power outlet malfunction.	Check if the power cord is securely plugged in. Test the outlet with another appliance.
Steam smells unpleasant.	Mineral buildup in the tank. Using scented water or additives.	Descale the water tank. Use only distilled or demineralized water without additives.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Model Number	SSC 3001YL
Power Input	1000 W
Voltage & Frequency	220-240 V, 50/60 Hz
Maximum Pressure	3 bars
Water Tank Capacity	350 ml
Heat-up Time	Approx. 2.5 minutes
Power Cord Length	4 m
Weight	2.19 kg
Dimensions (L x W x H)	27 x 15.6 x 23.6 cm

WARRANTY AND SUPPORT

Sencor products are manufactured to high-quality standards. For warranty information, terms, and conditions, please refer to the warranty card included with your product or contact your local retailer. For further assistance, product registration, or to view additional product information, please visit the official Sencor website:

www.sencor.eu/8590669176083

Please have your model number (SSC 3001YL) and purchase details ready when contacting support.