



[Manuals.plus](#) /

› [BELLISSIMA](#) /

› Bellissima Imetec My Pro Creativity Color Shine B22 100 Hair Straightener User Manual

BELLISSIMA B22 100

Bellissima My Pro Creativity Color Shine B22 100 Hair Straightener User Manual

Model: B22 100

INTRODUCTION

Thank you for choosing the Bellissima My Pro Creativity Color Shine B22 100 Hair Straightener. This manual provides essential information for the safe and effective use of your new styling tool. Please read all instructions carefully before use and retain this manual for future reference.

Important Safety Information

- Always unplug the appliance immediately after use and before cleaning.
- Do not use this appliance near water, such as in a bathtub, shower, or sink.
- Keep the appliance out of reach of children.
- Do not use if the cord or plug is damaged.
- Allow the appliance to cool completely before storing.
- This appliance is for household use only.

PRODUCT OVERVIEW

The Bellissima My Pro Creativity Color Shine B22 100 is designed to protect and enhance the shine of colored or treated hair while providing versatile styling options. It features a unique Color Shine texture coating and oscillating ceramic plates for optimal results.



Figure 1: Bellissima My Pro Creativity Color Shine B22 100 Hair Straightener

Key Features

- **Color Shine Texture:** A special fabric coating designed to protect colored or treated hair during styling.
- **Adjustable Temperature:** Electronic temperature control from 150°C to 230°C to suit various hair types.
- **Oscillating Plates:** Heated plates that adapt automatically to the hair strand for even pressure and defined results.
- **Rounded Plates:** Allows for both straight and wavy styling.
- **Rapid Heating:** Quick heat-up time for immediate use.



Figure 2: Temperature controls and digital display

SETUP

1. Unpack the hair straightener and remove all packaging materials.
2. Ensure your hands are dry before plugging the appliance into a suitable power outlet.
3. Place the straightener on a heat-resistant surface.

OPERATING INSTRUCTIONS

Powering On and Temperature Selection

1. Plug the appliance into the mains supply.
2. Press and hold the power button (U) to turn on the straightener. The display will illuminate.
3. Use the '+' and '-' buttons to select your desired temperature between 150°C and 230°C. Lower temperatures are recommended for fine, damaged, or colored hair, while higher temperatures are suitable for thick or coarse hair.
4. Wait for the straightener to reach the selected temperature. The rapid heating function ensures it will be ready in a few seconds.

Styling Your Hair

Ensure your hair is clean, dry, and detangled before styling. For best results, apply a heat protectant spray.

For Straight Hair:

1. Divide your hair into small, manageable sections.

2. Take one section and place it between the heated plates, close to the roots.
3. Gently close the plates and glide the straightener slowly down the hair section from root to tip. Do not hold the straightener in one place for too long.
4. Repeat for all sections until desired straightness is achieved.



Figure 3: Straightening hair technique

For Wavy Hair:

1. Divide your hair into small sections.
2. Take one section and clamp it between the plates, about an inch or two from the roots.
3. Rotate the straightener 180 degrees (half turn) away from your face.
4. Slowly glide the straightener down the hair section, maintaining the rotation. The rounded plates will help create a curl.
5. Release the hair and allow the curl to cool before touching it.
6. Repeat for all sections. For a softer wave, gently brush through the curls once cooled.



Figure 4: Creating waves technique



Figure 5: Color Shine Texture for hair protection

Powering Off

After use, press and hold the power button (**U**) until the display turns off. Unplug the appliance from the power outlet and allow it to cool completely before storing.

MAINTENANCE

Cleaning

1. Ensure the appliance is unplugged and completely cool before cleaning.

- 2. Wipe the exterior surfaces and plates with a soft, damp cloth.
- 3. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the appliance.
- 4. Do not immerse the appliance in water or any other liquid.

Storage

Store the cooled straightener in a dry, safe place, away from moisture and direct sunlight. Ensure the cord is not wrapped tightly around the appliance, as this can cause damage over time.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly or no power from outlet.	Check power connection. Try a different outlet.
Appliance is not heating up.	Power button not pressed correctly.	Ensure the power button is pressed and held until the display illuminates.
Hair is not styling effectively.	Incorrect temperature setting or hair is not dry/clean.	Adjust temperature to suit hair type. Ensure hair is completely dry and clean before styling. Use smaller sections of hair.

If you experience issues not listed here, please contact customer support.

SPECIFICATIONS

Brand: BELLISSIMA

Model Name: Bellissima My Pro Creativity Color Shine B22 100

Product Advantages: Protection and shine for colored hair

Plate Type: Oscillating plates

Material: Ceramic

Color: Pearl White

Item Weight: 353.7 Grams

Power Source: AC power

Temperature Range: 150°C to 230°C

Maximum Temperature Setting: 230°C

WARRANTY AND SUPPORT

This product is covered by a manufacturer’s warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, spare parts, or any inquiries regarding your Bellissima My Pro Creativity Color Shine B22 100, please contact the retailer or the official Bellissima customer service in your region.