

[Manuals.plus](#) /

> [Homedics](#) /

> MyBaby Lullaby Sound Machine & Projector Instruction Manual

Homedics MYB-S305

MyBaby Lullaby Sound Machine & Projector Instruction Manual

Brand: Homedics | Model: MYB-S305

INTRODUCTION

The MyBaby Lullaby Sound Machine & Projector is designed to create a peaceful environment for your baby's sleep. It combines soothing sounds with gentle light projections to help calm and comfort. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and safety.

WHAT'S IN THE BOX

- (1) MyBaby SoundSpa Lullaby
- (1) Image Disk with 3 Scenes
- (1) AC Adapter
- (1) Quick-Start Guide



Image: The MyBaby SoundSpa Lullaby product shown alongside its retail packaging, illustrating the contents of the box.

SETUP

1. Unpack all components from the box.
2. Place the MyBaby SoundSpa Lullaby on a flat, stable surface.
3. Connect the AC adapter to the unit's power input port.
4. Plug the AC adapter into a standard electrical outlet. The unit is now ready for use.

OPERATING INSTRUCTIONS

Sound Selection

The unit offers 6 distinct sounds and lullabies to choose from:

- Heartbeat
- Gentle Rain
- Ocean Waves
- Twinkle, Twinkle
- Rock-A-Bye Baby
- Cradle Song

To select a sound, press the **SOUNDS** button repeatedly until your desired sound is active. The corresponding indicator light will illuminate.



Image: An overview of the MyBaby SoundSpa Lullaby's features, including buttons for sound selection, projection, timer, and volume control.

Volume Adjustment

Adjust the volume to your preferred level using the **+** and **-** buttons located on the unit. Press **+** to increase volume and **-** to decrease volume.

Projection Feature

The SoundSpa Lullaby includes a picture projector with 3 scenes on the included image disk. These images can be projected onto a wall or ceiling, providing a soft glow that acts as a night-light.

1. To activate the projector, press the **PROJECT** button.
2. To change the projected image, gently rotate the image disk located at the top of the unit.
3. The projector can function independently of the sound feature.



Image: A close-up of the MyBaby SoundSpa Lullaby's auto-off timer settings (15, 30, 45, 60 minutes) next to a sleeping baby.

Auto-Off Timer

Conserve energy by setting the auto-off timer. The unit will automatically shut off after the selected duration.

- Press the **TIMER** button to cycle through the available settings: 15, 30, 45, or 60 minutes.
- The corresponding indicator light will show the active timer setting.
- If no timer is selected, the unit will automatically shut off after 3 hours.



Image: A visual representation of the MyBaby SoundSpa Lullaby's auto-off timer settings (15, 30, 45, 60 minutes) next to a sleeping baby.

MAINTENANCE

To ensure the longevity and proper functioning of your MyBaby SoundSpa Lullaby, follow these maintenance guidelines:

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the surface.
- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and store it in a cool, dry place.
- **General Care:** Avoid exposing the unit to extreme temperatures, direct sunlight, or moisture. Do not attempt to disassemble the unit or perform repairs yourself, as this will void the warranty.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound/Unit not turning on	Power cord not properly connected or damaged.	Ensure the AC adapter is securely plugged into the unit and the wall outlet. Check the power cord for any visible damage. If damaged, discontinue use and contact customer support.
Projector not working or dim	Projector light is off or room is too bright.	Press the PROJECT button to turn on the light. Ensure the room is sufficiently dark for optimal projection visibility.
Sound stops unexpectedly	Auto-off timer activated.	Check the TIMER setting. If you desire continuous play, ensure no timer duration is selected (the unit will run for 3 hours before auto-off).

SPECIFICATIONS

- **Product Dimensions:** 4.25 x 4.25 x 4.31 inches
- **Item Model Number:** MYB-S305
- **Material Type:** Plastic
- **Power Source:** Corded Electric
- **Item Weight:** 12.8 ounces
- **Style:** Lullaby

WARRANTY & SUPPORT

For warranty information, technical support, or to purchase replacement parts, please refer to the official Homedics website or contact their customer service directly. Keep your purchase receipt for warranty claims.