

SIMPLIHOME AXWSH002-GR

SIMPLIHOME Warm Shaker 20-inch Solid Wood End Table Instruction Manual

MODEL: AXWSH002-GR

Brand: SIMPLIHOME

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your SIMPLIHOME Warm Shaker 20-inch Solid Wood End Table. Designed for compact functionality and timeless appeal, this handcrafted accent table is constructed from solid wood with a distressed grey finish and a protective NC lacquer. It features one drawer with a smooth metal glide for concealed storage and an open shelf for displaying items. The transitional design, characterized by square tapered legs, an antique nickel knob, and a square-edged tabletop, ensures it complements various interior styles. Please read this manual thoroughly before assembly and use to ensure proper setup and longevity of your product.

Safety Information

WARNING: This product can expose you to chemicals including formaldehyde, phthalates, and lead which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov/furniture.

- Always place the table on a flat, stable surface.
- Do not overload the table or its shelves/drawers. The maximum weight recommendation for this item is 50 pounds.
- Keep small parts and assembly hardware away from children during assembly.
- Ensure all connections are securely tightened before use. Periodically check and re-tighten as necessary.

What's in the Box

Carefully unpack all components and check against the parts list (usually included in the packaging) to ensure all items are present and undamaged. The table typically includes:

- Tabletop
- Side Panels (with pre-drilled holes for legs and shelves)
- Bottom Shelf
- Drawer Components (front, back, sides, bottom)
- Drawer Glides
- Drawer Knob
- Assembly Hardware (screws, cam locks, dowels, etc.)
- Assembly Tools (Allen wrench, screwdriver, if included)

Image: Unpacked components of the Simpli Home Warm Shaker End Table, showing various wooden panels and hardware.

Assembly Instructions

This end table is designed for straightforward home setup. Follow the steps below for quick assembly. Tools recommended for assembly include a hammer, screwdriver, and wrench. All necessary assembly tools are typically included.

1. **Prepare Components:** Lay out all wooden panels and hardware on a clean, soft surface to prevent scratches. Identify each part according to the included diagram.
2. **Assemble Side Frames:** Attach the horizontal support bars to the vertical leg pieces to form the side frames of the table. Ensure all connections are snug.
3. **Construct the Drawer:** Assemble the drawer box using the provided screws and cam locks. Insert the drawer bottom into the grooves. Attach the drawer glides to the sides of the drawer box.
4. **Install Drawer Glides to Table:** Secure the remaining drawer glides to the interior side panels of the table frame where the drawer will be housed.
5. **Attach Bottom Shelf:** Connect the bottom shelf to the assembled side frames, ensuring it is level and secure.
6. **Attach Tabletop:** Place the tabletop onto the assembled frame and secure it using the designated hardware.
7. **Insert Drawer:** Carefully slide the assembled drawer into the table's drawer compartment, aligning the glides. Attach the drawer knob.
8. **Final Check:** Verify that all screws and fasteners are tightened. Gently shake the table to ensure stability.

Video: Assembly and feature demonstration of the Simpli Home Warm Shaker Coffee Table, showcasing similar construction and functionality to the end table.



Image: Close-up view of a leg being attached to the table frame, illustrating the connection point.



Image: Detailed view of the smooth metal drawer glide mechanism, showing its installation on the table frame.



Image: A hand carefully inserting the assembled drawer into the table's compartment, aligning it with the glides.

Operating Instructions

Your Warm Shaker End Table is designed for simple and convenient use.

- **Using the Drawer:** Gently pull the antique nickel knob to open the drawer. The smooth metal glides ensure easy access to stored items. Push the drawer back in until it is flush with the table frame to close.
- **Utilizing the Open Shelf:** The open shelf below the tabletop is ideal for storing books, magazines, or displaying decorative items. Ensure items placed on the shelf do not obstruct the drawer's operation.
- **Tabletop Use:** The spacious tabletop provides a stable surface for lamps, beverages, remote controls, or other personal items.



Image: The end table with its drawer partially open, revealing the interior storage space.



Image: An assembled end table positioned next to a sofa, featuring a lamp on top and books neatly arranged on the open shelf.

Maintenance

To maintain the appearance and longevity of your SIMPLIHOME Warm Shaker End Table, follow these simple care instructions:

- **Cleaning:** Wipe clean with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the distressed grey lacquer finish.
- **Spills:** Immediately blot any spills with a clean, dry cloth to prevent staining or water damage.
- **Heat and Moisture:** Use coasters under beverages and hot pads under warm items to protect the tabletop surface. Avoid placing the table in direct sunlight or near heat sources to prevent warping or fading.
- **Regular Checks:** Periodically inspect all hardware and connections. Re-tighten any loose screws to ensure the table remains stable and secure.

Troubleshooting

If you encounter any issues with your end table, please refer to the following common solutions:

- **Table Wobbles:** Ensure the table is on a level surface. Check that all leg connections and frame screws are securely tightened. Adjust leg levelers if present.
- **Drawer Sticks or Doesn't Close Smoothly:** Verify that the drawer glides are correctly installed and aligned. Check for any obstructions within the drawer tracks. Ensure the drawer box itself is assembled squarely.
- **Loose Hardware:** Over time, screws may loosen. Regularly check and tighten all fasteners with the appropriate tools. Do not overtighten.
- **Surface Scratches/Dents:** Minor scratches can sometimes be touched up with a wood repair marker

matching the distressed grey finish. For deeper damage, professional repair may be required.

If problems persist, please contact SIMPLIHOME customer support for further assistance.

Specifications

Feature	Detail
Brand	SIMPLIHOME
Model Name	Warm Shaker End Table
Model Number	AXWSH002-GR
Product Dimensions (D x W x H)	18.1"D x 20"W x 19.5"H
Item Weight	22 Pounds
Maximum Weight Recommendation	50 Pounds
Frame Material	Pine Wood
Top Material Type	Pine, Plywood
Color	Distressed Grey
Finish Type	Gloss Finish (NC Lacquer)
Number of Drawers	1
Number of Shelves	1
Recommended Number of People for Assembly	1
Includes All Assembly Tools	Yes
Product Care Instructions	Wipe clean with cloth

Warranty and Support

Manufacturer Warranty: The product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of purchase to the original owner.

For warranty claims, technical support, or replacement parts, please contact SIMPLIHOME customer service. Have your model number (AXWSH002-GR) and proof of purchase ready when contacting support.

Contact Information:

Website: www.simplihome.com (or refer to your product packaging for specific contact details)