

Yosoo B01N5FLSF9

Yosoo Automatic Electric Water Timer Irrigation Controller User Manual

Model: B01N5FLSF9

INTRODUCTION

Thank you for choosing the Yosoo Automatic Electric Water Timer. This device is designed to automate your garden irrigation, providing convenience and efficiency for watering plants, lawns, and gardens. Please read this manual carefully before installation and operation to ensure proper use and longevity of your product.

PRODUCT OVERVIEW

The Yosoo Automatic Electric Water Timer is constructed from high-quality plastic and features a rubber gasket design for leak-proof and tight sealing, ensuring wear resistance and anti-corrosion properties. It is designed for durability and reliable performance in various outdoor environments.

Key Features:

- **Intelligent Irrigation:** Allows for automatic and programmable watering times.
- **Multi-functional Programming:** Supports various programs including unique, multi-program, regular, and cycle settings for daily or multi-day schedules.
- **Durable Construction:** Made from quality plastic with rubber sealing for leak-proof and wear-resistant performance.
- **Wide Application:** Suitable for home gardens, roof gardens, lawns, balconies, patios, and other irrigation needs.

Components:

Familiarize yourself with the main components of the water timer:

- **Faucet Connector:** Connects the timer to your water faucet.
- **Activity Cover:** Protects the control panel.
- **LCD Display:** Shows current time, program settings, and status.
- **Control Buttons:** Used for setting time, programming, and manual operation (SET, TIME, PROG, ON, OFF, Up/Down arrows).

- **Connector:** Output for connecting to your irrigation hose or drip system.

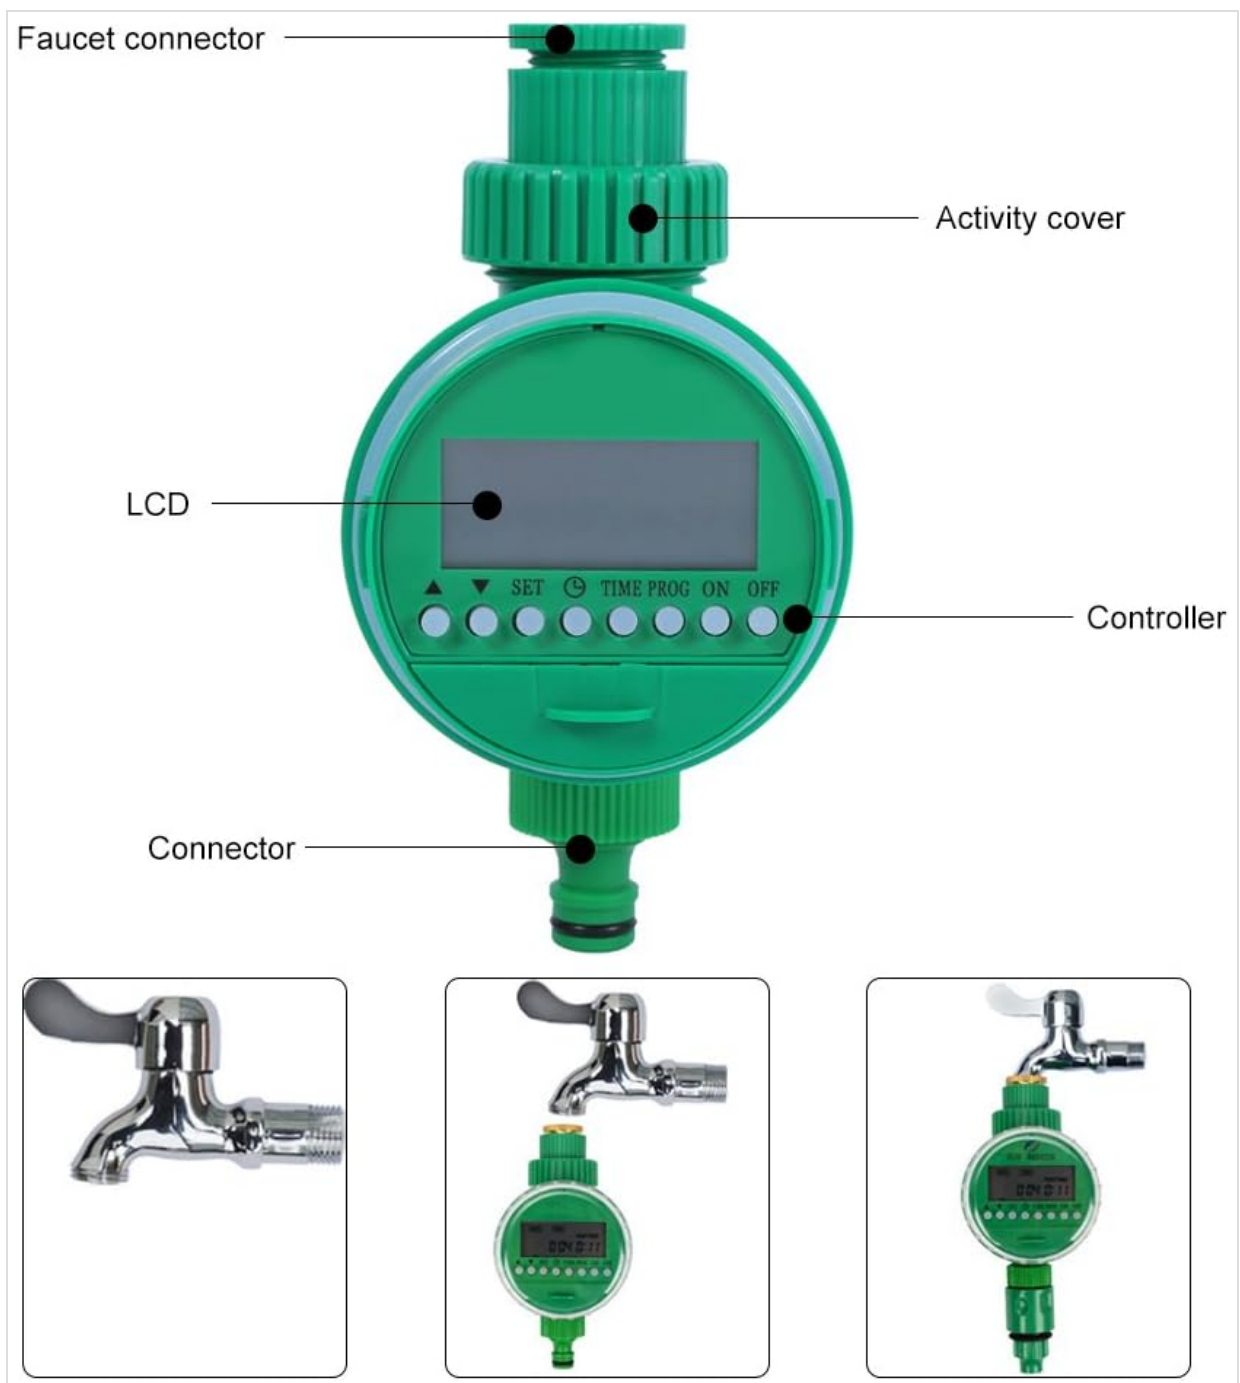


Figure 1: Labeled components of the Yosoo Automatic Electric Water Timer.



Figure 2: The water timer integrated into a drip irrigation system for potted plants.

SETUP

Follow these steps to set up your Yosoo Automatic Electric Water Timer:

1. **Install Batteries:** Open the battery compartment (usually on the back or side) and insert the required batteries (not specified in product data, typically AA or AAA). Ensure correct polarity.
2. **Connect to Faucet:** Screw the faucet connector of the water timer onto your outdoor water faucet. Ensure the connection is tight to prevent leaks. Hand-tighten only; do not overtighten.
3. **Connect Irrigation System:** Attach your garden hose or drip irrigation system to the bottom connector of the water timer. Again, ensure a secure, leak-free connection.



Figure 3: Product dimensions for installation planning.



Figure 4: The water timer with its protective cover and internal filter, which should be checked during setup.

OPERATING INSTRUCTIONS

The water timer allows for flexible programming to suit your watering needs. The LCD display and control buttons facilitate easy setup.

Setting the Current Time:

1. Press the **TIME** button.
2. Use the **Up/Down arrows** to adjust the hour and minute.
3. Press **SET** to confirm and move to the next setting, or **TIME** again to exit.

Programming Watering Schedules:

The timer supports various programming modes (Unique, Multi Program, Regular, Cycle, one day or several days program). Refer to the specific instructions provided with your physical product for detailed programming steps, as button sequences can vary.

1. Press the **PROG** button to enter programming mode.
2. Use the **Up/Down arrows** to navigate through program options (e.g., start time, watering duration, frequency).
3. Press **SET** to confirm each setting.
4. Repeat for all desired programs.
5. Press **PROG** again to exit programming mode.

Manual On/Off:

- To manually start watering, press the **ON** button. The timer will typically run for a default duration or until manually turned off.
- To manually stop watering, press the **OFF** button.



Figure 5: The water timer in an application setting, highlighting its utility for home gardens, roof gardens, lawns, balconies, and courtyards.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your water timer.

- **Cleaning:** Periodically clean the exterior of the timer with a damp cloth. Avoid using harsh chemicals.
- **Filter Inspection:** Check the internal filter screen (located at the faucet connector) for debris. Clean it as needed to prevent blockages and ensure proper water flow.
- **Battery Replacement:** Replace batteries when the low battery indicator appears on the LCD, or at the beginning of each watering season.
- **Winterization:** Before the first frost, disconnect the water timer from the faucet and hose. Remove batteries. Store the timer indoors in a dry, frost-free location to prevent damage from freezing water.

TROUBLESHOOTING

If you encounter issues with your water timer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Timer not watering	Low or dead batteries Incorrect program settings Low water pressure Clogged filter	Replace batteries Review and adjust program settings Ensure adequate water pressure from faucet Clean the filter screen
Water leaking from connections	Loose connections Damaged O-rings or gaskets Cracked housing	Tighten all connections (hand-tighten only) Inspect and replace O-rings/gaskets if damaged If housing is cracked, the unit may need replacement
LCD display is blank or dim	Dead batteries	Replace batteries
Timer not turning off	Stuck valve Programming error	Try pressing OFF button multiple times. If issue persists, disconnect from water source. Review program settings for conflicts or incorrect durations.

SPECIFICATIONS

- **Brand:** Yosoo
- **Model:** B01N5FLSF9
- **Material:** Plastic, Rubber
- **Product Dimensions:** 0.79"D x 3.94"W x 7.2"H (approximately 2cm D x 10cm W x 18.3cm H)
- **Item Weight:** 0.63 Pounds (approximately 10.1 ounces / 286 grams)
- **Number of Settings:** 3 (referring to program types or modes)
- **UPC:** 712190275808

WARRANTY AND SUPPORT

This product comes with a user manual for detailed instructions. For specific warranty information or technical support, please refer to the documentation included with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.