

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Little People Caring for Animals Farm Playset Instruction Manual

Fisher-Price DWC31

Fisher-Price Little People Caring for Animals Farm Playset Instruction Manual

Model: DWC31

Brand: Fisher-Price

INTRODUCTION

The Fisher-Price Little People Caring for Animals Farm playset provides an interactive environment for young children to engage with farm animals and learn about their care. This manual details the playset's features, setup, operation, and maintenance to ensure a safe and enjoyable experience.

WHAT'S IN THE BOX

- 1 x Farm Playset
- 1 x Farmer Jed Figure
- 4 x Animal Figures (Chicken, Horse, Cow with Calf)



Learn how good it feels
to take care of animals!

Ages 1-5y

Image: The complete Fisher-Price Little People Caring for Animals Farm playset, including the barn, silo, and all accompanying figures.

SETUP

Battery Installation

The playset requires 3 AAA batteries (included) for interactive sounds and lights. Locate the battery compartment, typically on the underside of the main barn structure. Use a Phillips head screwdriver to open the compartment, insert the batteries according to polarity markings, and secure the cover.

Playset Assembly and Configuration

The farm playset is designed to open and expand for play, and fold for compact storage. Gently unfold the barn sections to reveal the full play area. Ensure all sections are securely in place before play.



Image: The farm playset in its fully opened configuration, ready for interactive play.



Image: The playset can be folded for convenient storage, as shown by the hands closing the barn sections.

OPERATING INSTRUCTIONS

Interactive Features Overview

The farm features multiple interactive elements designed to stimulate imaginative play and learning.



Image: A detailed view of the farm playset with labels pointing to its various interactive components.

Discovery Buttons

- **Main Discovery Button:** Press the large red button near the barn doors to activate fun songs, animal sounds, and phrases. This action also causes the stall doors to pop open, revealing the animals inside.
- **Chick Hatching Button:** Press the second discovery button located near the chicken coop to make the chicks "hatch" or pop up from their nest.

Silo Operation

Turn the silo to rotate the corn crop inside and hear fun corn-popping sounds. This feature helps children understand cause and effect.



Rotate the corn crop

Image: A child actively engaging with the silo, demonstrating its rotating mechanism and the movement of the corn pieces.

Hayloft Drop-Through Fun

Open the hayloft door for drop-through fun. Placing figures or small accessories through the hayloft activates additional sounds, songs, and phrases as they fall through to the lower level.

Ringing the Bell

Ring the metal bell located on the side of the barn to signal dinnertime for the animals or to add to the farm's ambiance.



Image: A close-up of a child's hand ringing the functional metal bell on the farm playset.

Caring for Animals

Use the included figures to simulate feeding and caring for the farm animals. The playset includes areas for tucking in the horse with a soft blanket, encouraging nurturing play.



“Feed” and tuck-in the animals

Image: A child demonstrating how to tuck in the cow figure with a blanket in its designated stall.

Product Demonstration Video

Video: A brief demonstration of the Fisher-Price Little People Caring For Animals Farm Set's key features and interactive elements.

MAINTENANCE

Cleaning Instructions

To clean the playset, wipe surfaces with a damp cloth and mild soap. Do not immerse electronic components in water. Ensure the playset is completely dry before storing or resuming play.

Storage

The playset is designed to fold for compact storage. Ensure all figures and accessories are stored safely within the playset or in a separate container to prevent loss.

TROUBLESHOOTING

No Sound or Lights

- Check if the batteries are correctly installed with the correct polarity.
- Replace old batteries with new AAA batteries.
- Ensure the playset's power switch (if applicable) is in the 'On' position.

SPECIFICATIONS

Feature	Detail
Product Dimensions	5.63 x 16 x 24 inches
Item Weight	3 pounds
Item Model Number	DWC31
Manufacturer Recommended Age	12 months - 5 years
Batteries	3 AAA batteries required (included)
Manufacturer	Fisher-Price

WARRANTY AND SUPPORT

This Fisher-Price product is covered by the manufacturer's standard warranty. For detailed warranty information, product support, or to purchase replacement parts, please visit the official Fisher-Price website or contact their customer service department. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question