

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bestron](#) /

› [Bestron ACM300EVB Coffee Maker Instruction Manual](#)

Bestron ACM300EVB

Bestron ACM300EVB Coffee Maker Instruction Manual

INTRODUCTION

Thank you for choosing the Bestron ACM300EVB Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycle.

PRODUCT OVERVIEW

The Bestron ACM300EVB is an electric filter coffee maker designed for ease of use and consistent coffee brewing. It features a durable plastic housing and a glass carafe.



Image 1: Front view of the Bestron ACM300EVB Coffee Maker, showing the water level indicator, power switch, and glass carafe.

Components:

1. Water Reservoir with Lid
2. Water Level Indicator (1-15 cups)
3. Filter Holder (non-disposable)

4. Glass Carafe with Lid
5. Heating Plate
6. On/Off Switch with Indicator Light
7. Power Cord

SETUP AND FIRST USE

Before using your coffee maker for the first time, follow these steps:

1. **Unpack:** Carefully remove the coffee maker and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **Clean:** Wash the glass carafe, its lid, and the non-disposable filter holder in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **First Brew Cycle (Cleaning):**
 - Fill the water reservoir with fresh cold water up to the "15 cups" mark.
 - Place the empty filter holder into its position.
 - Place the empty glass carafe with its lid on the heating plate.
 - Plug the power cord into a suitable wall outlet (220-240V, 50/60Hz).
 - Press the On/Off switch. The indicator light will illuminate.
 - Allow the coffee maker to complete a full brewing cycle with only water.
 - Once the cycle is complete, turn off the appliance and discard the water.
 - Repeat this cleaning cycle 2-3 times to ensure all manufacturing residues are removed.
4. Your coffee maker is now ready for use.

OPERATING INSTRUCTIONS

Follow these steps to brew coffee:

1. **Fill Water Reservoir:** Open the lid of the water reservoir and fill it with the desired amount of fresh, cold water. Use the water level indicator on the side of the coffee maker as a guide (up to 15 cups). Do not exceed the maximum fill line.
2. **Add Coffee Grounds:** Place the non-disposable filter holder into its designated position. Add the desired amount of ground coffee into the filter. A general guideline is one tablespoon of ground coffee per cup, but adjust to your taste.
3. **Position Carafe:** Place the glass carafe with its lid securely on the heating plate. Ensure the carafe is correctly positioned to activate the drip-stop mechanism.
4. **Start Brewing:** Plug the power cord into a suitable wall outlet. Press the On/Off switch. The indicator light will illuminate, indicating that the brewing process has started.
5. **Serving:** Once the brewing cycle is complete, the coffee maker will automatically switch to a keep-warm function. The heating plate will keep the coffee warm for approximately 40 minutes before automatically shutting off.
6. **Turn Off:** After serving, or if you are finished with the coffee, press the On/Off switch to turn off the appliance and unplug it from the wall outlet.



Image 2: Side view of the coffee maker, highlighting the water level markings and the position of the glass carafe during brewing.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee maker.

1. Daily Cleaning:

- Always unplug the coffee maker and allow it to cool completely before cleaning.
- Remove the glass carafe, its lid, and the non-disposable filter holder. Wash these parts in

warm, soapy water. Rinse thoroughly and dry. These parts are generally not dishwasher safe unless specified otherwise.

- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the main unit, power cord, or plug in water or any other liquid.

2. **Descaling:** Mineral deposits from water can build up over time and affect performance. Descale your coffee maker regularly (e.g., every 2-4 weeks, depending on water hardness).

- Prepare a descaling solution by mixing white vinegar and water (e.g., 1 part vinegar to 2 parts water) or use a commercial descaling agent according to its instructions.
- Pour the solution into the water reservoir.
- Place the empty filter holder and carafe in position.
- Run a brewing cycle. Turn off the appliance halfway through the cycle and let it soak for about 15-20 minutes.
- Resume the brewing cycle until complete.
- Discard the solution and run 2-3 cycles with fresh, clean water to rinse thoroughly and remove any vinegar taste.

TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	Appliance not plugged in. Power switch not turned on. No water in reservoir.	Ensure power cord is securely plugged into an active outlet. Press the On/Off switch. Fill the water reservoir with fresh water.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio. Coffee grounds too coarse/fine.	Adjust the amount of coffee grounds to your preference. Use medium-ground coffee for best results.
Water overflows from filter holder.	Too much coffee grounds. Filter holder clogged. Carafe not properly seated.	Reduce the amount of coffee grounds. Clean the filter holder thoroughly. Ensure the carafe is correctly placed on the heating plate.
Coffee maker leaks.	Carafe not properly seated. Water reservoir overfilled.	Ensure the carafe is correctly placed on the heating plate. Do not fill water past the maximum level indicator.

SPECIFICATIONS

Feature	Detail
Brand	Bestron
Model Number	ACM300EVB
Type	Electric Filter Coffee Maker
Capacity	Up to 15 cups
Power	1080 Watts
Voltage/Frequency	220-240V, 50/60Hz
Material	High-quality plastic housing, glass carafe
Special Features	Non-disposable filter, Automatic shut-off after 40 minutes
Dimensions (L x W x H)	18 x 27 x 35 cm (approximate)
Weight	1.8 Kilograms (approximate)

WARRANTY AND SUPPORT

This Bestron appliance is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, spare parts, or warranty claims, please contact Bestron customer service through their official website or the retailer where the product was purchased.

Keep your proof of purchase for warranty purposes.