

[Manuals.plus](#) /

› [UGREEN](#) /

› UGREEN USB 3.0 Switch Selector User Manual

## UGREEN 30768

# UGREEN USB 3.0 Switch Selector User Manual

Model: 30768

Brand: UGREEN

### INTRODUCTION

The UGREEN USB 3.0 Switch Selector is designed to allow two computers to share up to four USB 3.0 peripheral devices. This device simplifies your workspace by eliminating the need to constantly swap USB cables between your work and personal computers. It supports high-speed data transfer and is compatible with various operating systems.

# Say Goodbye to Repeated Connections

Easily switch between personal and work PCs



*Image: Before and After using the UGREEN USB 3.0 Switch Selector, illustrating how the device helps declutter a workspace by allowing two computers to share peripherals.*

## WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1 x UGREEN USB 3.0 Switch Selector
- 2 x 1.5m USB 3.0 Data Cables
- 1 x User Manual (this document)

# Package List



5FT




Image: The package contents of the UGREEN USB 3.0 Switch Selector, showing the main unit, two USB 3.0 data cables, and the included user manual.

## SETUP

Follow these steps to set up your UGREEN USB 3.0 Switch Selector:

1. **Connect Computers:** Use the provided USB 3.0 data cables to connect your two computers (PC or laptop) to the two USB 3.0 input ports on the back of the switch. These ports are typically labeled '1' and '2'.

## 2 PCs Share 4 USB Devices

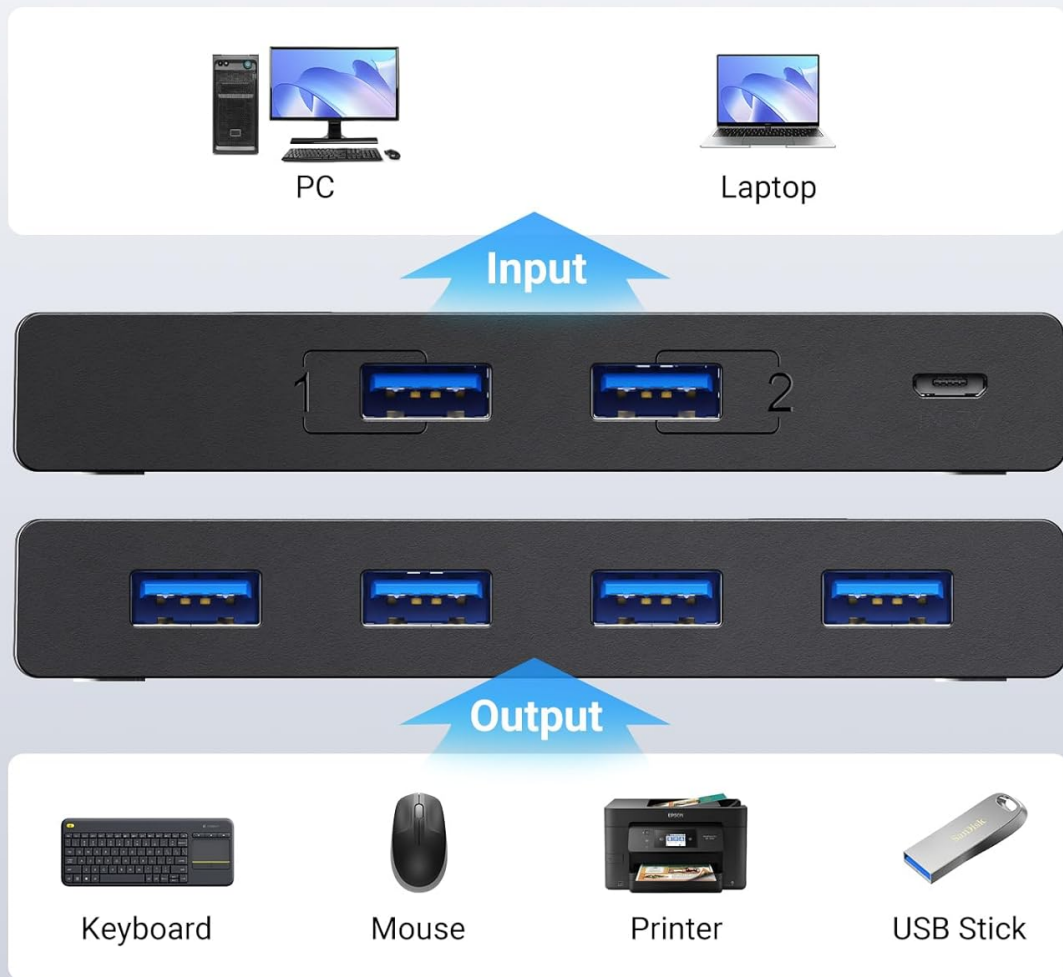

**Note:** The product does not have an HDMI port.

*Image: A visual representation of connecting two computers, a desktop PC and a laptop, to the input ports of the UGREEN USB 3.0 Switch Selector.*

- 2. Connect USB Devices:** Plug your USB peripheral devices (e.g., keyboard, mouse, printer, scanner, USB drive, webcam, headset) into the four USB 3.0 output ports on the front of the switch.



*Image: The UGREEN USB 3.0 Switch Selector with its input cables connected and various USB devices, such as USB drives, plugged into its four output ports.*

- 3. Optional Power Supply:** For high-power USB devices like HDDs, USB cameras, or certain headphones, it is recommended to connect an external 5V 2A power adapter (not included) to the Micro USB power supply port on the side of the switch. This ensures stable performance and prevents disconnection due to insufficient power.

## USB-C Charging Port

Supply stable data transmission



NOT include a charging cable and charger.

*Image: The UGREEN USB 3.0 Switch Selector connected to a laptop and an external hard drive, highlighting the optional USB-C charging port for providing stable power to high-demand devices.*

**Note for USB-C Laptops:** If your input PC only has a USB-C port, please use a USB-C to USB-A adapter instead of a direct USB-C to USB-A cable. Direct cables may not work as intended.



*Image: Instructions on connecting a USB-C laptop to the switch using an OTG USB-C to A adapter for proper functionality.*

## OPERATING INSTRUCTIONS

Using the UGREEN USB 3.0 Switch Selector is straightforward:

1. **One-Button Switching:** To switch control of the connected USB devices between the two computers, simply press the large circular button on the top of the switch.

## Easily Switch between 2 PCs



*Image: A close-up view of the UGREEN USB 3.0 Switch Selector, highlighting the prominent one-click switch button and the two LED indicator lights.*

2. **LED Indicators:** Two blue LED lights, labeled '1' and '2', indicate which computer currently has control of the USB devices. The illuminated LED corresponds to the active computer.
3. **High-Speed Data Transfer:** The switch supports USB 3.0 speeds of up to 5Gbps, allowing for fast data transfer from devices like USB flash drives or external hard drives. It is also backward compatible with USB 2.0.



*Image: The UGREEN USB 3.0 Switch Selector with USB drives connected, emphasizing its capability for 5Gbps high-speed data transmission.*

- 4. Wide Compatibility:** The UGREEN USB 3.0 Switch Selector is plug-and-play and does not require driver installation for most operating systems, including Windows, macOS, Chrome OS, and Linux.

# Plug & Play

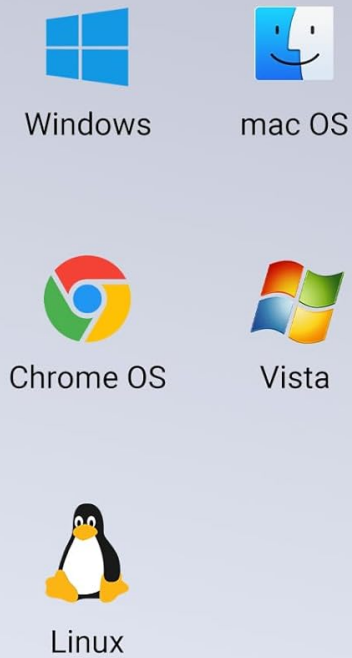


Image: A visual representation of the UGREEN USB 3.0 Switch Selector's broad compatibility across various operating systems like Windows, macOS, Chrome OS, and Linux.

## Official Product Videos

### USB 3.0 Switch

Your browser does not support the video tag.

*Video: This short video demonstrates the physical appearance and basic functionality of the UGREEN USB 3.0 Switch, showing its ports and indicator lights.*

### Usage Steps of UGREEN USB 3.0 Switch Selector

Your browser does not support the video tag.

*Video: This video provides a step-by-step guide on how to connect and use the UGREEN USB 3.0 Switch Selector with multiple computers and peripheral devices.*

## MAINTENANCE

To ensure the longevity and optimal performance of your UGREEN USB 3.0 Switch Selector, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the device. Avoid using liquid cleaners or abrasive materials, as they may damage the finish.
- **Storage:** When not in use for extended periods, store the switch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts. Do not attempt to disassemble or repair the switch yourself, as this will void the warranty.

## TROUBLESHOOTING

If you encounter any issues with your UGREEN USB 3.0 Switch Selector, please refer to the following common troubleshooting tips:

- **Devices Not Recognized:**
  - Ensure all USB cables are securely connected to both the switch and the computers/devices.
  - Try connecting the USB device directly to the computer to confirm it functions independently.
  - If using high-power devices, ensure an external 5V 2A power adapter is connected to the switch.
  - Restart the connected computers.
- **Switching Delays:**
  - While switching is generally fast, a slight delay (around 2 seconds) is normal as the computers re-detect the USB devices.
  - Ensure no background processes are heavily utilizing USB resources on either computer.
- **Intermittent Disconnections:**
  - This often indicates insufficient power. Connect an external 5V 2A power adapter to the switch, especially if multiple high-power devices are connected.
  - Check for loose cable connections.
- **LED Indicator Not Lighting Up:**
  - Verify that both computers are powered on and properly connected to the switch's input ports.
  - Ensure the USB cables from the computers to the switch are functioning correctly.

For more detailed troubleshooting or specific issues, please refer to the official UGREEN Troubleshooting Guide (PDF) available at:

<https://manuals.plus/m/09217a33d754b9ca83811ee2a0f69dc4b275b4a3fdbec02d969808dbbbcc3133>

## SPECIFICATIONS

Feature	Detail
Model Number	30768
Brand	UGREEN
Operation Mode	ON-OFF-ON
Current Rating	2000 Milliamps
Operating Voltage	5 Volts
Connector Type	USB
Item Dimensions (L x W x H)	4.09 x 2.01 x 0.59 inches
Item Weight	5.3 ounces
Color	Black
Material	Metal
Number of Positions	4
Control Method	Touch (Push Button)

## WARRANTY AND SUPPORT

UGREEN products are designed with quality and reliability in mind. For warranty information and customer support, please visit the official UGREEN website or contact their customer service directly.

You can also find more information and support resources on the UGREEN Amazon store page: [UGREEN Store](#)