

GBC GLMFS2000L3

GBC GLMFS2000L3 Fusion Pouch Laminator Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your GBC GLMFS2000L3 Fusion Pouch Laminator. Please read this manual thoroughly before using the device and retain it for future reference.

The GBC GLMFS2000L3 is a high-performance pouch laminator designed for A4/A3 documents, featuring a rapid warm-up time and an automatic shut-off function for energy efficiency. This model has earned the first Eco-Mark certification under the "Laminator" standard (Certification No. 18 162 002).



**「ラミネーター」認定基準で初のエコマーク
認証を取得。(認証番号 18 162 002)**

Image: Eco-Mark certification logo, indicating environmental compliance for laminators.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Do not operate the laminator with a damaged power cord or plug.
- Keep hands, hair, and loose clothing away from the feed opening.
- Do not attempt to laminate items thicker than the specified maximum lamination thickness.
- Ensure the laminator is placed on a stable, flat surface with adequate ventilation.
- Unplug the laminator when not in use or before cleaning.

PACKAGE CONTENTS

Verify that all items are present in the package:

- GBC GLMFS2000L3 Fusion Pouch Laminator
- Power Cord
- Instruction Manual (this document)

SETUP

1. **Unpacking:** Carefully remove the laminator from its packaging.
2. **Placement:** Place the laminator on a flat, stable, and heat-resistant surface. Ensure there is enough space around the machine for proper ventilation and for documents to exit freely.
3. **Power Connection:** Plug the power cord into the laminator's power inlet and then into a suitable electrical outlet.
4. **Power On:** Touch the power button () to turn on the laminator. The indicator lights will flash sequentially, and the warm-up mark "cmx" (red) will illuminate.
5. **Warm-up:** The laminator will begin to warm up. The warm-up time is approximately 60 seconds when set to T1. Once warm-up is complete, the red "cmx" mark will disappear, and the processable mark "✓" (green) will light up, indicating the machine is ready for lamination.



ウォームアップタイム
最速約60秒！！



加工準備が整うとレディランプが
点灯してお知らせします。

Image: The GBC GLMFS2000L3 laminator with its control panel, highlighting the warm-up indicator and ready status.

OPERATING INSTRUCTIONS

1. **Select Film Thickness:** Touch the setting button according to the thickness of the laminating pouch you are using. The corresponding setting light (T1, T2, T3, T4) will illuminate. Compatible film

thickness ranges from 75-100µm.

2. **Prepare Document:** Place your document inside a laminating pouch, ensuring it is centered and there is an even border around the edges.
3. **Insert Pouch:** Once the green "✓" light is on, carefully insert the sealed edge of the laminating pouch into the laminator's feed opening. The laminator will automatically feed the pouch through.
4. **Retrieve Laminated Document:** Allow the laminated document to cool on a flat surface before handling.
5. **Auto Shut-Off:** The laminator is equipped with an auto shut-off function. If left unused for more than 30 minutes while powered on, it will automatically turn off to save energy. To resume operation, simply touch the power button again.

オートシャットオフ機能付き（約30分後）



加工幅

A3

ローラー

2本

Image: The GBC GLMFS2000L3 laminator, highlighting its auto shut-off feature and A3 processing width.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your laminator.

- **Cleaning:** Ensure the laminator is unplugged and completely cool before cleaning. Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- **Roller Cleaning:** Periodically run a laminator cleaning sheet (available separately) through the machine to remove adhesive residue from the rollers.
- **Storage:** Store the laminator in a clean, dry place when not in use.

TROUBLESHOOTING

This section addresses common issues you might encounter with your laminator.

Film Jam

If a laminating pouch becomes jammed:

1. Immediately press the **RELEASE** button down firmly with one hand.
2. While holding the **RELEASE** button, gently pull the jammed film back from the film insert opening. The rollers will stop rotating, allowing the film to be pulled out.
3. Once the film is removed, release the **RELEASE** button. The rollers will automatically resume forward rotation.

Laminator Not Heating Up

- Ensure the power cord is securely plugged into both the laminator and the electrical outlet.
- Check if the power button has been pressed and the warm-up indicator (red "cmx" mark) is lit.
- If the auto shut-off function has activated, press the power button to restart the machine.

Poor Lamination Quality (e.g., bubbles, cloudy finish)

- Ensure the correct film thickness setting (T1, T2, T3, T4) is selected for your laminating pouch.
- Allow the laminator to fully warm up until the green "✓" light is illuminated.
- Use high-quality laminating pouches.
- Ensure the document is flat and free of wrinkles before lamination.

SPECIFICATIONS

Model	GLMFS2000L3
Number of Rollers	2
Power Consumption	1350 W (50/60Hz)
Warm-up Time	Approx. 60 seconds (for T1 setting)
Processing Speed	415 mm/minute (50 Hz), 500 mm/minute (60 Hz)
Processing Width	A3 size compatible
Compatible Film Thickness	75-100 µm
Maximum Lamination Thickness	0.6 mm
Dimensions (W x D x H)	500 x 150 x 105 mm (500 x 320 x 105 mm with support tray)
Weight	2.4 kg
Auto Shut-Off	Yes (after 30 minutes of inactivity)



Image: The GBC GLMFS2000L3 laminator with its physical dimensions (50cm width, 15cm depth, 10.5cm height) and weight (2.4kg) indicated.



加工速度:最大415mm/分[50Hz]
500mm/分[60Hz]

対応加工フィルム厚:75-100 μ

消費電力:1,350W[50/60Hz]

Image: Technical specifications for the GBC GLMFS2000L3 laminator, including processing speed, compatible film thickness, and power consumption.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official GBC website or contact their customer service department. Keep your purchase receipt as proof of purchase.

You can visit the official GBC store for more information:[GBC Store on Amazon](#)