

CHEFTRONIC SM-1088

CHEFTRONIC 4-in-1 Multifunction Kitchen Stand Mixer SM-1088 User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your CHEFTRONIC 4-in-1 Multifunction Kitchen Stand Mixer, model SM-1088. This appliance combines a powerful stand mixer with a meat grinder, blender, and an electronic heating bowl, offering versatility for various culinary tasks. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Always unplug the mixer from the power outlet before cleaning, assembling, or disassembling parts.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
- Always ensure the appliance is switched off and unplugged before changing accessories or approaching parts that move in use.

PRODUCT FEATURES

The CHEFTRONIC SM-1088 is designed for versatility and ease of use in your kitchen. Key features include:

- **7.4 Quart Stainless Steel Mixing Bowl:** Large capacity bowl with handles for easy handling.

- **1000W Powerful Motor:** Provides robust mixing power for various ingredients.
- **Intelligent LCD Operation Panel:** Displays speed, time, and temperature for precise control.
- **Electronic Heating Function:** The mixing bowl can heat ingredients within a temperature range of 68°F to 284°F (20°C to 140°C) while stirring.
- **Tilt-Head Design:** Allows for easy access to the mixing bowl and attachments.
- **Anti-Suction Feet:** Ensures stability during operation.
- **Pouring Shield:** Helps prevent splashes and spills during mixing.
- **Integrated Attachments:** Includes a meat grinder and a blender for expanded functionality.



Image: The CHEFTRONIC SM-1088 stand mixer with its meat grinder and blender attachments installed. An arrow points to the heating element beneath the stainless steel mixing bowl, highlighting its temperature control feature.



① Stainless steel handle bowl



② 6 anti-slip suction feet



③ Tilt-head design



④ Pouring shield without making a mess



⑤ LCD intelligent display



⑥ Ventilation holes

Image: A collage of detailed views of the CHEFTRONIC SM-1088. It shows the stainless steel handle bowl, anti-suction feet on the base, the tilt-head design, the pouring shield, the LCD intelligent display, and the ventilation holes.

PACKAGE CONTENTS

Upon unpacking, ensure all items are present:

- Main Mixer Unit
- 7.4 Quart Stainless Steel Mixing Bowl
- Dough Hook
- Flat Beater
- Wire Whisk
- Pouring Shield
- Meat Grinder Attachment (with various plates and sausage stuffer)

- Blender Attachment (glass jar with lid)
- User Manual

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Remove any protective films or stickers.
2. **Clean:** Wash the mixing bowl, attachments (dough hook, flat beater, wire whisk), pouring shield, blender jar, and meat grinder parts in warm soapy water, then rinse and dry thoroughly. Wipe the main mixer unit with a damp cloth.
3. **Placement:** Place the mixer on a stable, flat, and dry surface. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Ensure the power switch is in the 'OFF' position before plugging the mixer into a grounded electrical outlet.

OPERATING INSTRUCTIONS

A. Stand Mixer Operation

1. **Attach Bowl:** Place the stainless steel mixing bowl onto the base and turn it clockwise until it locks securely.
2. **Attach Accessory:** Press the tilt-head release button and lift the motor head. Insert the desired attachment (dough hook, flat beater, or wire whisk) into the accessory shaft and turn it counter-clockwise until it locks.
3. **Lower Head:** Lower the motor head until it clicks into place.
4. **Add Ingredients:** Place ingredients into the mixing bowl. You may attach the pouring shield to prevent splatters.
5. **Select Speed:** Turn the speed control knob to the desired setting. The LCD panel will display the current speed.
6. **Start/Stop:** Press the 'START/STOP' button to begin or end mixing.
7. **Using Heating Function:** To activate heating, press the 'TEMP' button on the LCD panel. Use the arrow buttons to adjust the desired temperature. The mixer will maintain the set temperature while mixing.
8. **Using Timer:** Press the 'TIME' button to set a specific mixing duration.
9. **Auto Programs:** The mixer may feature pre-set 'AUTO' programs for common tasks. Refer to the LCD panel for available options.

8 FUNCTIONS

Do a variety of delicious foods



Image: A visual representation of the 8 functions of the CHEFTRONIC SM-1088, including bread rising, whisking, mixing, juicing, mincing, sausage making, soybean milk preparation, and stew soup.

B. Meat Grinder Operation

1. **Attach Grinder:** Ensure the mixer is unplugged. Remove the front cover from the mixer head. Insert the meat grinder attachment into the front power hub and turn it until it locks.
2. **Assemble Grinder:** Assemble the meat grinder components (screw, blade, grinding plate, ring) according to the diagram in the separate meat grinder manual.
3. **Prepare Meat:** Cut meat into small pieces that fit into the feeding tube.
4. **Grind:** Place a bowl under the grinder outlet. Turn on the mixer to a low speed. Feed meat into the tube using the food pusher. Do not use fingers.
5. **Sausage Making:** Replace the grinding plate with the sausage stuffer attachment for making sausages.

C. Blender Operation

1. **Attach Blender:** Ensure the mixer is unplugged. Place the blender jar onto the top power hub on the mixer head and turn it clockwise until it locks securely.
2. **Add Ingredients:** Add liquids and soft ingredients to the blender jar. Do not exceed the maximum fill line.

3. **Blend:** Secure the lid. Turn on the mixer to a desired speed. For best results, start at a low speed and gradually increase.

Video: An official product video demonstrating the CHEFTRONIC 4-in-1 Multifunction Kitchen Stand Mixer SM-1088 in use, showcasing its mixing capabilities, various attachments like the meat grinder and blender, and the intelligent LCD operation panel.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and performance of your mixer.

1. **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet.
2. **Main Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
3. **Mixing Bowl & Attachments:** The stainless steel mixing bowl, dough hook, flat beater, and wire whisk are dishwasher safe. For manual cleaning, wash in warm soapy water, rinse, and dry thoroughly.
4. **Blender Jar:** Disassemble the blender jar and wash all parts in warm soapy water. The glass jar may be dishwasher safe, but check specific instructions for the blade assembly.
5. **Meat Grinder:** Disassemble all meat grinder parts immediately after use. Wash thoroughly in warm soapy water, rinse, and dry completely to prevent rust. Some parts may not be dishwasher safe; refer to the separate meat grinder manual.
6. **Storage:** Store the mixer and its attachments in a clean, dry place.

TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

- **Mixer does not start:**

- Ensure the power cord is securely plugged into a working outlet.
- Check if the motor head is fully lowered and locked into place.
- Verify the speed control knob is not at '0' and the 'START' button has been pressed.

- **Attachments not fitting or falling out:**

- Ensure the attachment is correctly aligned with the shaft and twisted firmly into place.
- For the meat grinder or blender, ensure they are properly seated and locked into their respective power hubs.

- **Unusual noise during operation:**

- This may be normal for heavy loads or certain attachments.
- Check if the bowl and attachments are correctly installed.
- Reduce the amount of ingredients if the motor sounds strained.

- **Heating function not working:**

- Ensure the 'TEMP' button has been pressed and a temperature is set on the LCD panel.
- Verify the mixing bowl is correctly seated and making proper contact with the heating element.

If the problem persists after checking these points, please contact customer support.

SPECIFICATIONS

Model Name	SM-1088
Brand	CHEFTRONIC
Wattage	1000 watts
Mixing Bowl Capacity	7.4 Quarts
Material	Stainless Steel
Controls Type	Knob, Digital Buttons
Product Dimensions	16.5 x 13 x 13 inches
Item Weight	30 pounds
Dishwasher Safe Parts	Yes (Mixing Bowl, Standard Attachments)
UPC	841569100295

WARRANTY AND SUPPORT

Your CHEFTRONIC 4-in-1 Multifunction Kitchen Stand Mixer is covered by a manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For technical support, replacement parts, or any inquiries not covered in this manual, please contact CHEFTRONIC customer service through their official channels.