

[Manuals.plus](#) /

› [Smartby](#) /

› Smartby Universal Remote Control AK59-00104R for Samsung Blu-Ray DVD Players: Instruction Manual

Smartby AK59-00104R

Smartby Universal Remote Control AK59-00104R for Samsung Blu-Ray DVD Players

Instruction Manual

1. INTRODUCTION

This manual provides instructions for the Smartby AK59-00104R Universal Remote Control. This remote is designed as a direct replacement for various Samsung Blu-Ray and DVD player models, offering immediate functionality without the need for programming. Please read this manual thoroughly to ensure proper use and to maximize your experience with the remote control.

2. SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period.
- Keep the remote control away from direct sunlight, heat sources, and moisture.
- Avoid dropping or subjecting the remote control to strong impacts.

3. PACKAGE CONTENTS

- 1 x Smartby AK59-00104R Universal Remote Control
- (Batteries are not included and must be purchased separately.)

4. SETUP

4.1 Battery Installation

The Smartby AK59-00104R remote control requires two AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.

2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image 1: Rear view of the remote control, illustrating the battery compartment location. The compartment cover is visible, indicating where batteries should be inserted.

4.2 Initial Use

This remote control is pre-programmed for compatible Samsung Blu-Ray and DVD players. No additional programming is required. Once batteries are installed, the remote is ready for immediate use with your device.

5. OPERATING INSTRUCTIONS

The Smartby AK59-00104R remote control features a standard layout for Samsung Blu-Ray and DVD players. Below is a description of the main buttons and their functions.



Image 2: Front view of the Smartby AK59-00104R remote control, displaying the full button layout. This image shows the power buttons,

numeric keypad, navigation controls, and media playback buttons.

Remote Control Button Functions

Button	Function
POWER (Red)	Turns the Blu-Ray/DVD player On or Off.
TV POWER (Red)	Turns the connected TV On or Off (if compatible).
SOURCE	Changes the input source on the connected TV.
BONUSVIEW	Activates the BonusView feature on compatible Blu-Ray discs.
Numeric Keypad (0-9)	Enters track numbers, chapter numbers, or other numerical inputs.
SUBTITLE	Toggles subtitles On/Off or selects subtitle language.
AUDIO	Selects audio tracks or audio languages.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and selections.
ENTER (Center button)	Confirms selections.
PLAY (▶)	Starts playback.
PAUSE (⏸)	Pauses playback.
STOP (⏹)	Stops playback.
FAST FORWARD (⏩)	Fast forwards through content.
REWIND (⏮)	Rewinds through content.
SKIP FORWARD (⏭)	Skips to the next chapter/track.
SKIP BACKWARD (⏮)	Skips to the previous chapter/track.
DISC MENU	Accesses the main menu of the disc.
MENU	Accesses the player's system menu.
TITLE MENU	Accesses the title menu of the disc.
POPUP	Displays the pop-up menu on compatible Blu-Ray discs.
TOOLS	Accesses additional tools or settings.
INFO	Displays information about the current content or player status.
RETURN	Goes back to the previous screen or menu.
EXIT	Exits the current menu or function.
Color Buttons (A, B, C, D)	Functionality varies by disc or player menu.
INTERNET@TV / FULLSCREEN / REPEAT	Accesses internet features, changes screen aspect ratio, or repeats playback. Specific function depends on the button label.
VOL +/-	Adjusts the volume of the connected TV.

Button	Function
MUTE	Mutes or unmutes the TV audio.
CH +/-	Changes channels on the connected TV.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place when not in use for extended periods.

7. TROUBLESHOOTING

Common Issues and Solutions	
Problem	Solution
Remote is not working.	◦ Check if the batteries are inserted correctly with the correct polarity (+/-). ◦ Replace old batteries with new ones. ◦ Ensure there are no obstructions between the remote and the Blu-Ray/DVD player's IR sensor. ◦ Point the remote directly at the device.
Some buttons are not responding.	◦ Ensure the remote is pointed correctly at the device. ◦ Verify that the function you are trying to use is supported by your specific Blu-Ray/DVD player model. ◦ Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
TV control buttons (VOL, CH, TV POWER) are not working.	◦ These buttons are designed for basic TV control. Their compatibility may vary depending on your TV model. ◦ Ensure your TV is a Samsung model, as this remote is primarily designed for Samsung devices.

8. SPECIFICATIONS

- **Model:** AK59-00104R
- **Brand:** Smartby
- **Compatible Devices:** Samsung Blu-Ray/DVD Players (e.g., BD-C5300, BD-D5490, BD-C5500C, BD-D5700, BD-C6500, BD-C5900, BD-C6900, BD-C6800, BD-C6600, BD-D5250C, and others)
- **Power Source:** 2 x AAA Batteries (not included)

- **Dimensions:** 8.7 x 3.31 x 1.1 inches (22.1 x 8.4 x 2.8 cm)
- **Item Weight:** 2.89 ounces (81.9 grams)
- **Color:** Metallic
- **Special Feature:** Ergonomic design

9. WARRANTY AND SUPPORT

This Smartby remote control is designed for reliable performance. For any issues or questions regarding your remote control, please refer to the retailer's return policy or contact the seller directly for support.

As a direct replacement remote, it typically does not require complex programming. If you encounter difficulties, ensure batteries are fresh and correctly installed, and that your device is a compatible Samsung Blu-Ray or DVD player model.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B01N6LROHF>

More documents and user manuals: <https://manuals.plus/>