

[Manuals.plus](#) /

› [Gemmy](#) /

› Gemmy Inflatables Rocking Horse Model 11610 Instruction Manual

Gemmy 11610

Gemmy Inflatables Rocking Horse Model 11610 Instruction Manual

Model: 11610

INTRODUCTION

Thank you for choosing the Gemmy Inflatables Rocking Horse. This instruction manual provides important information regarding the safe setup, operation, and maintenance of your inflatable decoration. Please read this manual thoroughly before use and retain it for future reference.

This inflatable rocking horse is designed to greet guests and enhance your outdoor holiday scene. It features automatic inflation and internal lighting for an appealing display.

SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Anchor the inflatable securely to prevent movement in high winds.
- Keep the inflatable away from heat sources and open flames.
- Do not operate the inflatable in high winds or during thunderstorms.
- Ensure all electrical connections are dry and protected from moisture.
- Do not attempt to modify or repair the inflatable or its electrical components. Contact qualified personnel for service.
- Keep children and pets away from the inflatable during setup and operation to prevent entanglement or damage.

PACKAGE CONTENTS

Verify that all components are present before beginning setup:

- 1 x Inflatable Rocking Horse
- 1 x Air Pump (integrated)
- Tethers
- Stakes

The inflatable includes everything needed for outdoor setup, such as the integrated air pump, tethers, and stakes.

SETUP INSTRUCTIONS

1. **Choose a Location:** Select a flat, clear area outdoors, away from obstructions, sharp objects, and overhead power lines. Ensure the location is within reach of a suitable outdoor power outlet.
2. **Unpack the Inflatable:** Carefully remove the inflatable rocking horse from its packaging. Unroll and spread it out on the chosen setup area.



Image: The Gemmy Inflatables Rocking Horse, fully inflated and illuminated, ready for display. This image illustrates the product's appearance once set up.

3. **Connect Power:** Locate the power cord and plug it into a grounded outdoor electrical outlet. Ensure the outlet is protected by a Ground Fault Circuit Interrupter (GFCI) for safety.
4. **Inflate:** Once plugged in, the integrated air pump will automatically begin to inflate the rocking horse. Allow a few minutes for the inflatable to fully expand and take shape.
5. **Secure the Inflatable:** Use the provided tethers and stakes to anchor the inflatable firmly to the ground. Attach tethers

to the designated loops on the inflatable and secure them with stakes. This prevents the inflatable from being blown away by wind.

OPERATING INSTRUCTIONS

- **Power On:** The inflatable will automatically inflate and light up when plugged into a live electrical outlet.
- **Power Off:** To deflate and turn off the inflatable, simply unplug it from the electrical outlet.
- **Automatic Lighting:** The internal lights will illuminate automatically when the unit is powered on, providing visibility and ambiance.

MAINTENANCE

- **Cleaning:** To clean the inflatable, wipe it gently with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.
- **Inspection:** Periodically inspect the inflatable for any tears, punctures, or damage to the fabric or electrical components. Do not use if damaged.
- **Air Pump:** Keep the air intake of the pump clear of debris to ensure proper inflation.

STORAGE

1. **Deflate:** Unplug the inflatable from the power source to allow it to deflate completely.
2. **Remove Stakes and Tethers:** Carefully remove all stakes and tethers from the ground and from the inflatable.
3. **Clean and Dry:** Ensure the inflatable is clean and completely dry before folding to prevent mold or mildew.
4. **Fold and Store:** Fold the inflatable neatly and place it back into its original packaging or a suitable storage container. Store in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate.	Not plugged in. Power outlet not working. Air intake blocked. Tear or hole in fabric.	Ensure power cord is securely plugged into a live GFCI outlet. Test the outlet with another device or check circuit breaker. Clear any debris from the air pump intake. Inspect for damage; if minor, a repair kit (not included) might be used.
Inflatable does not stand upright.	Not fully inflated. Not properly secured with stakes/tethers.	Ensure the air pump is running continuously and there are no leaks. Re-position and firmly secure all stakes and tethers.
Lights are not working.	Not powered on. Damaged internal wiring or bulbs.	Ensure the inflatable is plugged in and inflating. If lights remain off, contact customer support (if available) as internal components are not user-serviceable.

SPECIFICATIONS

Brand	Gemmy
Model Number	11610
Theme	Christmas
Character	Rocking Horse
Color	Multicolor
Material	Polyvinyl Chloride (PVC), Vinyl
Dimensions (L x W x H)	72.04 x 24.4 x 62.99 inches
Item Weight	3.72 pounds
Light Color	Warm White
Special Feature	Lighted, Self-inflating
Assembly Required	No (Self-inflating)
Batteries Required	No
UPC / GTIN	086786116104

WARRANTY INFORMATION

Warranty information for the Gemmy Inflatables Rocking Horse Model 11610 was not provided in the product data. Please refer to the product packaging or contact Gemmy customer support for details regarding warranty coverage.

CUSTOMER SUPPORT

Specific customer support contact information was not provided in the product data. For assistance, please visit the official Gemmy website or refer to the contact details on the product packaging.

© 2023 Gemmy Industries. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question