

[Manuals.plus](#) /

› [Deco Breeze](#) /

› DecoBreeze Kipling Pedestal Fan User Manual

Deco Breeze DBF6127

DecoBreeze Adjustable Height 3 Speed Oscillating Floor Fan

Model: DBF6127 | Brand: Deco Breeze

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your DecoBreeze Adjustable Height 3 Speed Oscillating Floor Fan. Please read this manual thoroughly before use and retain it for future reference.

The DecoBreeze Kipling Pedestal Standing Fan combines a vintage aesthetic with modern functionality, designed to enhance air circulation in various indoor spaces.

PRODUCT OVERVIEW AND FEATURES

Your DecoBreeze fan is crafted with high-quality metal and polyresin, featuring a 16-inch fan head and an adjustable height range. Key features include:

- **Vintage Design:** Antique bronze finish with copper-toned blades, adding a retro flair to your interior.
- **Adjustable Height:** The fan's height can be adjusted from 37 inches to 49 inches, allowing for customized airflow direction.
- **Three Speed Settings:** Offers three distinct speed options for varied air circulation needs:
 - Low: 900 RPM
 - Medium: 1100 RPM
 - High: 1280 RPM
- **Oscillation Function:** The fan head oscillates to cover a wide area, ensuring optimal cooling and air distribution.
- **Tilting Fan Head:** The fan head can be tilted to direct airflow upwards or downwards as required.
- **Stable Base:** Equipped with a weighted base for enhanced stability during operation.
- **Portability:** Designed for easy movement between rooms, suitable for bedrooms, study rooms, dorms, offices, and garages.







Figure 1: Front view of the DecoBreeze Kipling Pedestal Fan, showcasing its antique bronze finish and copper-toned blades.

Designer Oscillating Floor Fan

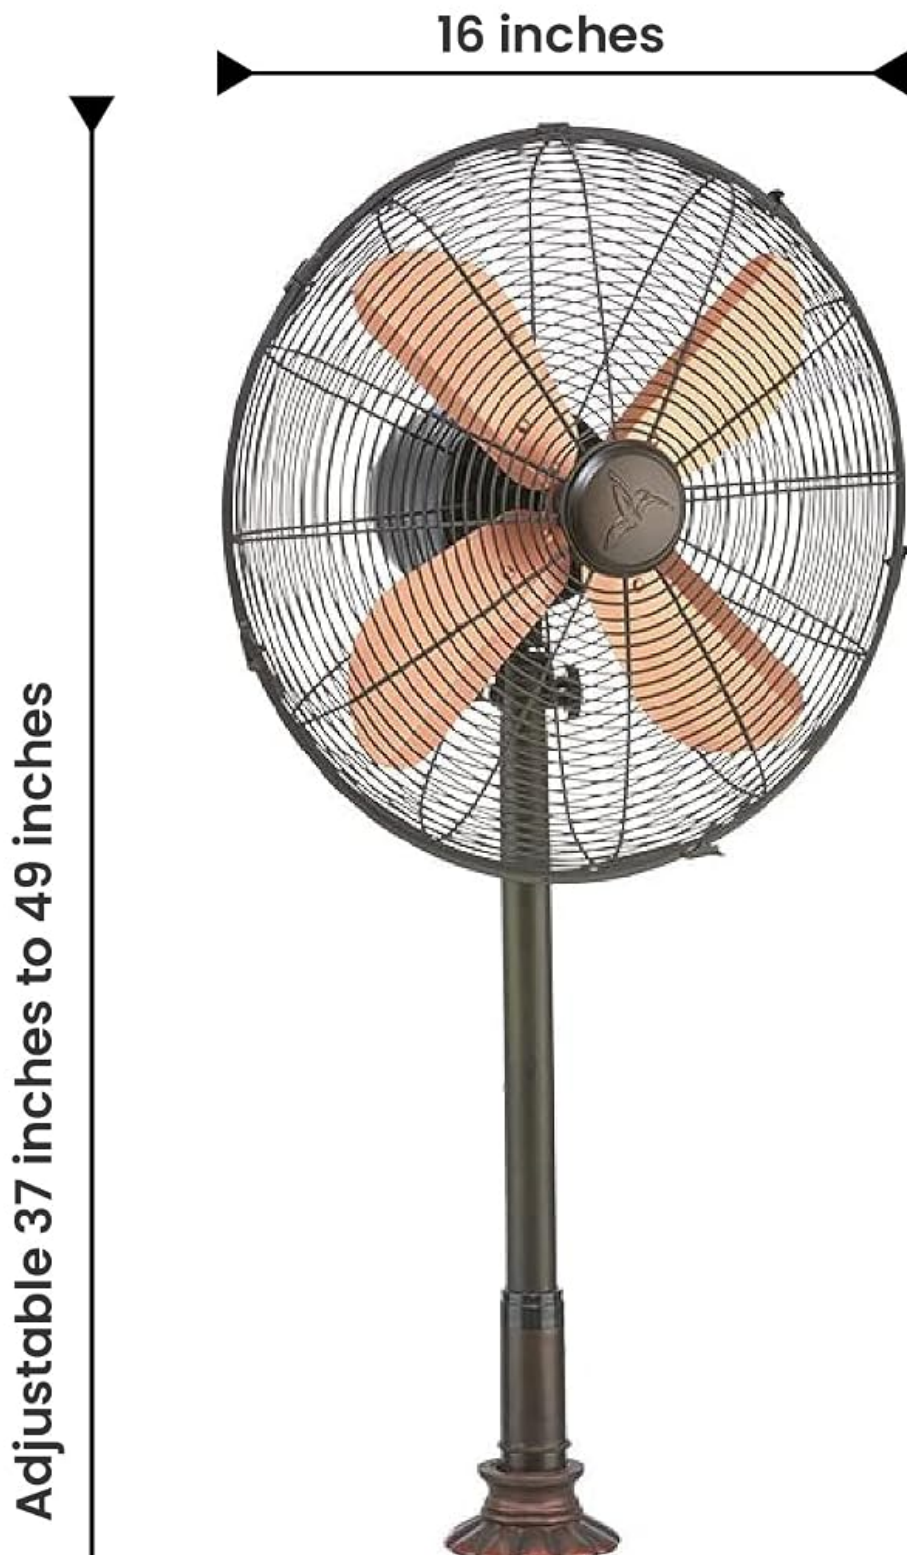




Figure 2: The fan illustrating its adjustable height from 37 to 49 inches and a 16-inch fan head diameter.

Three-Speed **Floor Fan**



900 RPM
Low Speed

1100 RPM
Medium Speed

1280 RPM
High Speed

Figure 3: Visual representation of the three-speed options: Low (900 RPM), Medium (1100 RPM), and High (1280 RPM).

SETUP

While the product is generally designed for straightforward assembly, please ensure all components are present and undamaged before proceeding.

Unpacking

1. Carefully remove all packaging materials and the fan components from the box.
2. Verify that all listed components are included. Refer to the 'Included Components' section in the Specifications.
3. Place the fan on a flat, stable surface for assembly.

Assembly (if required)

Although the product specifications indicate "No Assembly required," some initial setup or minor adjustments may be needed. If your unit requires assembly, follow the specific instructions provided in the packaging. Ensure all connections are secure before plugging in the fan.

Placement

Position the fan on a stable, level surface. Ensure there is adequate space around the fan for proper air circulation and oscillation. Avoid placing the fan near curtains or other objects that could interfere with the fan blades or airflow.

OPERATING INSTRUCTIONS

Powering On/Off

1. Plug the standard electrical plug into a 120V AC power outlet.
2. Locate the push button control on the fan.
3. Press the button to cycle through the speed settings (Low, Medium, High) and to turn the fan off.

Adjusting Fan Speed

The fan features three speed settings:

- **Low:** For gentle air circulation (900 RPM).
- **Medium:** For moderate airflow (1100 RPM).
- **High:** For maximum cooling and air movement (1280 RPM).


Press the control button repeatedly to select your desired speed.

Oscillation Function

To activate or deactivate the oscillation feature, locate the oscillation knob on the top of the motor housing. Push down the knob to engage oscillation, and pull it up to stop the fan from oscillating.

Adjusting Height and Tilt

- **Height Adjustment:** Loosen the height adjustment knob located on the main pole of the fan. Adjust the pole to the desired height (between 37 and 49 inches) and securely tighten the knob.
- **Tilt Adjustment:** Loosen the tilt adjustment knobs on either side of the fan head. Angle the fan head to direct airflow as needed, then tighten the knobs to secure its position.

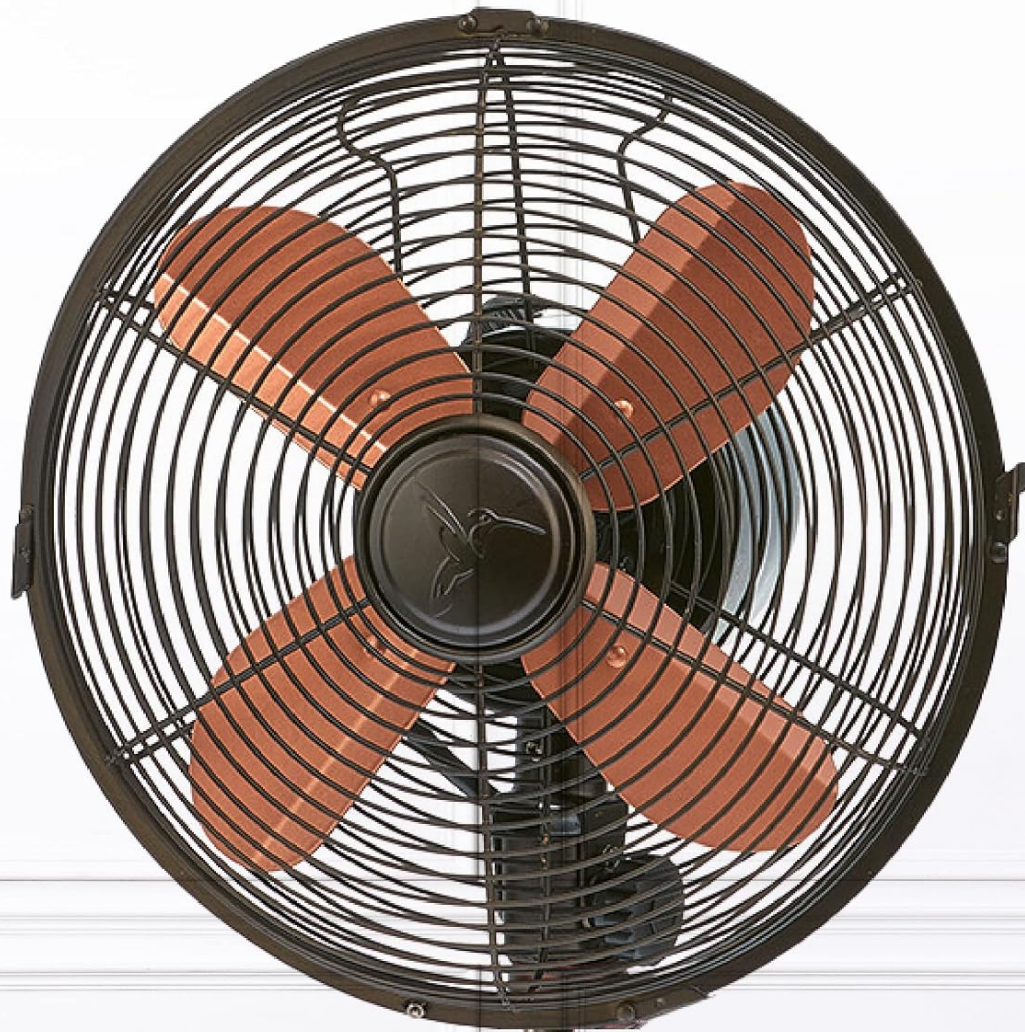

Fan head

that tilts for directional air circulation

Figure 4: The fan head demonstrating its tilting capability for directional air circulation.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your fan.

Cleaning

1. Always unplug the fan from the power outlet before cleaning.
2. Use a soft, damp cloth to wipe down the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
3. For cleaning the fan blades, carefully remove the front grille (if detachable per product design) and wipe the blades with a soft cloth. Ensure the blades are completely dry before reassembling the grille.
4. Do not immerse the fan in water or allow water to drip into the motor housing.

Storage

When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging to protect it from dust and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; Power outlet malfunction; Fan control button not pressed correctly.	Ensure the fan is securely plugged into a working outlet. Test the outlet with another device. Press the control button firmly to cycle through settings.
Reduced airflow.	Dust accumulation on blades/grille; Incorrect speed setting.	Clean the fan blades and grilles as per maintenance instructions. Select a higher speed setting.
Fan is noisy.	Loose components; Fan not on a level surface; Obstruction.	Check for any loose screws or parts and tighten them. Ensure the fan is placed on a stable, level surface. Remove any objects obstructing the fan.
Oscillation not working.	Oscillation knob not engaged.	Push down the oscillation knob on the motor housing to engage the feature.

If the problem persists after attempting these solutions, please contact Deco Breeze customer support.

SPECIFICATIONS

Brand	Deco Breeze
Model Name	DBF6127
Style	Kipling
Color	Kipling (Antique Bronze with Copper blades)
Electric Fan Design	Floor Fan (Pedestal)
Power Source	Corded Electric
Voltage	120 Volts
Wattage	45 watts
Product Dimensions (DxWxH)	14"D x 17"W x 37"H (Adjustable height up to 49"H)
Fan Head Diameter	16 Inches
Number of Blades	4
Blade Material	Metal and Poly Resin
Item Weight	15.4 Pounds
Control Method	Push Button (Touch)
Special Feature	Oscillating, Adjustable Height, Tilting Head
Indoor/Outdoor Usage	Indoor
UPC	843730061275

Energy Star Certified	Yes
-----------------------	-----

WARRANTY & SUPPORT

This DecoBreeze fan comes with a**3-year limited manufacturer warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any inquiries regarding your product, please contact Deco Breeze customer service. Refer to the product packaging or the official Deco Breeze website for the most current contact information. Please retain your proof of purchase for warranty validation.