

Philips S1110/04

Philips S1110/04 Electric Dry Shaver User Manual

Model: S1110/04 | Brand: Philips

1. INTRODUCTION

Thank you for choosing the Philips S1110/04 Electric Dry Shaver. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new shaver. Please read it thoroughly before first use and keep it for future reference.

The Philips S1110/04 is designed for a comfortable dry shave, featuring flexible heads that move in four directions to adapt to your facial contours. It includes self-sharpening CloseCut blades for a consistent shave and operates corded for continuous power.

2. IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- This appliance is for dry use only. Do not use it in or near water, bathtubs, showers, or sinks.
- Keep the appliance and its power cord away from heated surfaces.
- Do not operate the appliance if it has been dropped, damaged, or if the power cord is damaged. Contact Philips customer support for assistance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the original power adapter provided with the appliance.
- Unplug the shaver before cleaning or performing any maintenance.

3. PACKAGE CONTENTS

Check the package for the following items:

- Philips S1110/04 Electric Shaver

- Power Cord
- Protective Cap
- Cleaning Brush
- User Manual (this document)

4. SETUP AND FIRST USE

1. **Unpack the Shaver:** Carefully remove all packaging materials and ensure all components are present.
2. **Inspect the Shaver:** Check the shaver and power cord for any visible damage. Do not use if damaged.
3. **Connect to Power:** Insert the small plug of the power cord into the shaver's socket and the adapter into a wall outlet. The shaver is designed for corded operation only.
4. **Initial Cleaning:** Before first use, it is recommended to clean the shaving heads as described in the "Maintenance and Cleaning" section.



Image: The Philips S1110/04 electric shaver showing its main body and rotary heads.

5. OPERATING INSTRUCTIONS

5.1 Shaving

1. Ensure your face is clean and dry. This shaver is designed for dry shaving.
2. Connect the shaver to a power outlet.

3. Press the On/Off button to start the shaver.
4. Move the shaving heads in small, circular motions over your skin. Apply gentle pressure.
5. Stretch your skin with your free hand to make the hairs stand upright, especially in difficult areas like the neck.
6. After shaving, press the On/Off button to turn off the shaver and unplug it from the power outlet.



Image: A man demonstrating the use of the Philips S1110/04 shaver on his face.

5.2 Flexible Heads

The shaver features flexible heads that adjust to the curves of your face and neck, ensuring close skin contact for an efficient shave. Move the shaver gently to allow the heads to follow your contours.



Image: An illustration highlighting the flexible, four-directional movement of the shaver's rotary heads.

5.3 CloseCut Blades

The shaver is equipped with CloseCut blades that are designed for a consistently close shave. These blades are self-sharpening, maintaining their effectiveness over time.



Image: A detailed close-up of one of the CloseCut shaving heads, showing the blade design.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your shaver. Always unplug the shaver before cleaning.

1. **Open the Shaving Unit:** Press the release button (if available, or gently pull) to open the shaving unit.
2. **Clean with Brush:** Use the provided cleaning brush to remove loose hairs from the shaving heads and the hair chamber. Do not use the brush on the cutting elements themselves, as this can damage them.
3. **Rinse (if applicable):** While this model is primarily for dry use, some Philips shavers allow rinsing the heads. Refer to the specific instructions on the shaver itself or the full manual for water resistance. For this S1110/04 model, focus on dry cleaning with the brush.
4. **Close the Shaving Unit:** Close the shaving unit until you hear a click.
5. **Replace Protective Cap:** Place the protective cap on the shaver after each use to prevent damage to the shaving heads.



Image: A hand demonstrating how to open the shaving head unit for cleaning.



Image: A small brush being used to clean hair residue from inside the shaver head.

6.1 Replacing Shaving Heads

For optimal shaving performance, it is recommended to replace the shaving heads every two years. Replacement heads can be purchased from authorized Philips retailers or service centers. Refer to the full product manual or Philips website for specific replacement head model numbers.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Not properly plugged in; power outlet issue.	Ensure the power cord is securely plugged into both the shaver and a working wall outlet. Test the outlet with another appliance.
Poor shaving performance.	Shaving heads are dirty or worn out.	Clean the shaving heads thoroughly. If performance does not improve, consider replacing the shaving heads.

Problem	Possible Cause	Solution
Shaver makes unusual noise.	Hair trapped in the shaving unit; damaged shaving heads.	Clean the shaving unit. If the noise persists, the shaving heads might be damaged and require replacement.

If you encounter problems not listed here, or if the suggested solutions do not resolve the issue, please contact Philips customer support.

8. SPECIFICATIONS

- **Model:** S1110/04
- **Brand:** Philips
- **Shaving System:** CloseCut Blade System
- **Contour Following:** 4-direction Flex Heads
- **Power Source:** Corded operation (AC power)
- **Usage:** Dry use only
- **Number of Blades:** 3 Rotary heads
- **Product Dimensions:** Approximately 15 x 5 x 4 cm
- **Weight:** Approximately 320 grams
- **ASIN:** B01N79GFDR
- **GTIN (UPC):** 08710103764410

9. WARRANTY AND SUPPORT

Warranty: This Philips appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for detailed terms and conditions, including the warranty period and coverage.

Support: For further assistance, product information, or to purchase accessories and replacement parts, please visit the official Philips support website or contact your local Philips customer service center. You can find contact details on the Philips website or in the warranty documentation.

Online Resources: For the most up-to-date information and FAQs, visit www.philips.com/support.