

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [De'Longhi](#) /

› Nespresso Vertuo Plus Coffee and Espresso Maker by De'Longhi, Grey Machine Only Gray

De'Longhi ENV150GY

Nespresso Vertuo Plus Coffee and Espresso Maker

Model: ENV150GY

INTRODUCTION

The Nespresso VertuoPlus coffee and espresso maker is designed for convenience and versatility, brewing various single-serve cup sizes with ease. Its patented Centrifusion extraction technology ensures consistent flavor by reading a barcode on each capsule to automatically adjust brewing parameters. This manual provides essential information for setting up, operating, and maintaining your machine.



Figure 1: Nespresso Vertuo Plus Coffee and Espresso Maker in Grey.

SETUP

Before first use, ensure all packaging materials are removed. Place the machine on a stable, flat surface near a power outlet.

Water Tank Installation and Filling

The VertuoPlus features a large 40 oz. water reservoir. This tank can be adjusted to sit directly behind the machine or pivoted to either side to optimize countertop space.

1. Remove the water tank from its base.
2. Open the lid and fill the tank with fresh, potable water up to the 'MAX' line.
3. Replace the lid and securely place the water tank back onto its base.
4. Position the water tank as desired (rear or side).

OPTIMIZED COUNTERTOP SIZE

Adjustable 40 oz water tank placement



*dimensions vary based on water tank position

Figure 2: Adjustable 40 oz water tank placement for optimized countertop size.

Initial Cleaning (First Use)

It is recommended to run a cleaning cycle before brewing your first coffee.

1. Ensure the water tank is filled.
2. Place a large container (at least 14 oz) under the coffee outlet.

3. Close the machine head (if open) and press the brew button three times quickly. The light will blink to indicate cleaning mode.
4. The machine will dispense hot water to clean its internal components. This process may take a few minutes.
5. Once complete, the light will turn solid, indicating the machine is ready for use.

OPERATING INSTRUCTIONS

The Nespresso VertuoPlus offers a simple one-touch brewing experience.

Brewing Coffee or Espresso

1. Ensure the water tank is filled and the machine is powered on (light is solid green).
2. Gently push the lever on the machine head upwards to open it. The used capsule, if any, will be automatically ejected into the used capsule container.
3. Insert a Nespresso Vertuo capsule into the machine, ensuring it is correctly seated.
4. Push the lever downwards to close the machine head. The machine will automatically read the barcode on the capsule.
5. Place your desired cup under the coffee outlet.
6. Press the brew button once. The machine will begin brewing, automatically adjusting the volume and parameters based on the capsule's barcode.
7. Once brewing is complete, the machine will stop automatically.

One-touch brewing
that automatically
adapts to each capsule



Figure 3: One-touch brewing that automatically adapts to each capsule.

Cup Sizes

The VertuoPlus machine brews four cup sizes:

- Coffee: 5 oz and 8 oz
- Espresso: Single and Double Espresso



Vertuo brews
espresso + coffee

Figure 4: The machine brews various coffee and espresso sizes.

Adjustable Cup Support

The cup support can be adjusted to accommodate different cup heights. Simply lift or lower the support to the desired position.

MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your Nespresso VertuoPlus machine.

Emptying Used Capsule Container

The machine automatically ejects used capsules into a container located at the back. This container holds up to 10 used capsules.

1. Open the machine head by pushing the lever upwards.
2. Carefully remove the used capsule container from the back of the machine.

3. Discard the used capsules. Nespresso aluminum pods are fully recyclable through Nespresso's free program.
4. Rinse the container with warm water and dry it before replacing it.

From **dessert-inspired**
flavors to blends perfectly
formulated to mix with milk



Figure 5: Nespresso aluminum pods are fully recyclable.

Cleaning the Drip Tray and Water Tank

- The drip tray should be emptied and cleaned regularly to prevent overflow and maintain hygiene.
- The water tank should also be rinsed daily with fresh water.

Descaling

Over time, mineral deposits can build up in the machine, affecting performance. Descaling is recommended periodically based on water hardness and usage. Refer to the full user manual for detailed descaling instructions.

TROUBLESHOOTING

If your machine is not functioning as expected, try these basic troubleshooting steps:

- **No Power:** Ensure the machine is securely plugged into a working power outlet.
- **No Water Flow:** Check if the water tank is filled and properly seated.
- **Brewing Issues:** Ensure the capsule is correctly inserted and the machine head is fully closed.
- **Flashing Lights:** Refer to the user manual for specific light indicator meanings, as they often indicate a need for descaling or other maintenance.

For more complex issues, consult the full user manual or contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	De'Longhi
Model Name	VertuoPlus
Item Model Number	ENV150GY
Color	Gray
Product Dimensions	5.59"D x 16.88"W x 12.79"H
Item Weight	9.72 pounds
Coffee Maker Type	Espresso Machine
Operation Mode	Fully Automatic
Special Features	Auto Shut-Off, Removable Tank, Programmable
Included Components	VertuoPlus machine
Voltage	120 Volts

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official user manual or contact De'Longhi customer service.

- **User Manual (PDF):** [Download Here](#)
- **Protection Plans:** Extended protection plans are available for purchase, offering 3-Year and 4-Year coverage options.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01N7GO468>

More documents and user manuals: <https://manuals.plus/>