

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Burmester](#) /

› [Burmester Selection 1 User Manual](#)

## Burmester INAK 7804 HQCD

# Burmester Selection 1 - User Manual

Model: INAK 7804 HQCD

## INTRODUCTION

---

With this exquisite selection of carefully picked musical pieces, Burmester has dedicated itself to the experience of true emotions. In cooperation with Burmester and Pauler Acoustics, this compilation was created to provide a musically and sonically exceptional audio enjoyment. This HQCD (HiQualityCD) utilizes a polycarbonate plastic with improved light transmission and a special alloy for the reflective layer, achieving high audio quality. HQCDs are fully compatible with all standard CD players.

## PRODUCT OVERVIEW

---

# Burmester

SELECTION VOL. 1



**Figure 1:** Burmester Selection 1 CD cover. The image displays the album art, which features high-fidelity audio equipment, including two large, reflective speakers and a central audio component, set against a white brick wall. Three wooden head sculptures are positioned on the floor in front of the equipment.

The Burmester Selection 1 is an Audio CD designed for audiophiles, featuring a curated collection of musical pieces. It is produced as an HQCD for enhanced sound quality and is compatible with all standard CD players.

## SETUP

---

Setting up your Burmester Selection 1 HQCD is straightforward. Follow these steps to begin enjoying your music:

1. **Unpack the CD:** Carefully remove the HQCD from its packaging. Avoid touching the playing surface of the disc.
2. **Inspect the Disc:** Before insertion, visually inspect the disc for any dust, smudges, or scratches. If necessary, clean the disc as described in the Maintenance section.
3. **Insert into CD Player:** Open the disc tray or slot of your standard CD player. Gently place the HQCD with the label side facing up (or as indicated by your player's instructions).

4. **Close Tray/Slot:** Close the disc tray or allow the player to draw the disc in. The player should recognize the disc and display track information.
5. **Connect Audio System:** Ensure your CD player is properly connected to your audio amplifier and speakers for optimal sound reproduction.

This HQCD is designed for full compatibility with all standard CD players, ensuring a seamless setup process.

## OPERATING INSTRUCTIONS

---

Once the Burmester Selection 1 HQCD is loaded into your CD player, operating it is similar to any other audio CD. Refer to your CD player's manual for specific controls.

- **Play/Pause:** Press the **PLAY** button to start playback. Press **PAUSE** to temporarily stop the music and **PLAY** again to resume.
- **Skip Tracks:** Use the **NEXT** or **PREVIOUS** track buttons to navigate between songs.
- **Fast Forward/Rewind:** Hold down the **FAST FORWARD** or **REWIND** buttons to scan through a track.
- **Stop:** Press the **STOP** button to end playback and return the disc to the beginning.
- **Eject:** Press the **EJECT** button to remove the disc from the player.

For the best audio experience, ensure your audio system's volume is set appropriately and consider using high-quality audio components to fully appreciate the HQCD's enhanced sound.

## MAINTENANCE

---

Proper care and maintenance will ensure the longevity and optimal performance of your Burmester Selection 1 HQCD.

### Cleaning the Disc

- **Handling:** Always hold the disc by its edges or the center hole. Avoid touching the playing surface.
- **Cleaning Method:** If the disc has smudges or dust, gently wipe it with a soft, lint-free cloth (e.g., microfiber cloth) from the center outwards in straight lines. Do not wipe in circular motions.
- **Cleaning Solutions:** For stubborn marks, dampen the cloth slightly with water or a specialized CD cleaning solution. Never use abrasive cleaners, solvents, or harsh chemicals.
- **Drying:** Ensure the disc is completely dry before inserting it into a player.

### Storage

- **Case Storage:** Always store the HQCD in its original jewel case or a protective sleeve when not in use. This protects it from dust, scratches, and direct light.
- **Environmental Conditions:** Store discs in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. These conditions can warp the disc or damage the data layer.

## TROUBLESHOOTING

---

If you encounter issues while playing your Burmester Selection 1 HQCD, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Disc does not play or is not recognized.	Disc inserted incorrectly, dirty disc, player malfunction, disc damage.	<ul style="list-style-type: none"> <li>• Ensure disc is inserted correctly (label side up).</li> <li>• Clean the disc using a soft, lint-free cloth.</li> <li>• Try playing another known-good CD to check player functionality.</li> <li>• Inspect the disc for visible damage (deep scratches, cracks).</li> </ul>
Audio skips or stutters.	Dirty disc, scratched disc, player vibration, player lens issue.	<ul style="list-style-type: none"> <li>• Clean the disc thoroughly.</li> <li>• Ensure the CD player is on a stable, level surface.</li> <li>• If the problem persists with multiple discs, the player's laser lens may need cleaning or servicing.</li> </ul>
Poor sound quality (e.g., muffled, distorted).	Dirty disc, incorrect audio settings, faulty cables, damaged speakers.	<ul style="list-style-type: none"> <li>• Clean the disc.</li> <li>• Check audio cable connections between the CD player and amplifier/speakers.</li> <li>• Verify audio settings on your amplifier or receiver.</li> <li>• Test with other audio sources to rule out speaker issues.</li> </ul>

If these steps do not resolve the issue, consult your CD player's user manual or contact the manufacturer of your audio equipment for further assistance.

## SPECIFICATIONS

Attribute	Detail
Product Dimensions	5.67 x 5.35 x 0.47 inches
Item Weight	3.88 ounces
Manufacturer	Inakustik
Item Model Number	INAK 7804 HQCD
Original Release Date	2017
Date First Available	January 4, 2017
Label	Inakustik
Number of Discs	1
ASIN	B01N7KCSH5

## WARRANTY AND SUPPORT

Information regarding specific warranty terms for the Burmester Selection 1 HQCD is not provided in this manual. For details on warranty coverage or technical support, please refer to the official Burmester website or contact your point of purchase.

For general inquiries about HQCD technology, you may consult resources from the manufacturer, Inakustik.

